 




Garage Bluetooth® Radio

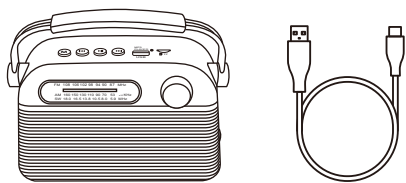

INCLUDED:

1. Garage Bluetooth Radio
2. USB-A to USB-C Charging Cable

AUDIO INDICATORS:

- Ascending Tones - Pairing
- Single Blaster Sound - Bluetooth connected
- Water Droplet Tone - Mode Switch
- Death Star Alarm - Low battery

CHARGING:

1. A full charge requires approximately 4 hours.
2. Plug the USB-C end of the charging cable into the charge port on the side of the speaker.
3. Plug the opposite end of the charging cable into a power supply of at least DC 5V 1A.
4. Charging is complete when the red light turns off.

WARNING: Please use UL compliant power supply.

RADIO OPERATION (FM/AM/SW):

1. Rotate the volume dial downward until you hear a "click" to turn on the device.
 2. Slide the band switch on the side of the radio to select your desired band: FM, AM, or SW (shortwave).
 3. Extend the telescopic antenna and adjust its angle for the best reception (FM/SW).
- Note:** AM uses a built-in antenna; rotate the unit to find the best signal.
- Note:** make sure to always retract the antenna after use to prevent damage.
4. Rotate the tuning knob on the front panel slowly to search for and select your desired radio station.
 5. Adjust the volume dial to your preferred listening level.

BLUETOOTH & MP3 PLAYBACK:

1. Slide the Band switch to the MP3/BT position.
2. Press the "M" button to toggle between Wireless (Bluetooth), USB, and microSD card modes (requires USB drive or microSD card to be inserted).

WARNING:
CHOKING HAZARD—Small part.
Keep away from young children.

Press: Switch modes
(USB/microSD card/Wireless)

 
Press: Previous track

Press: Play/Pause


Press: Next track

USB port: Plays MP3 files from a USB drive

MicroSD port: Insert microSD card to play MP3 files

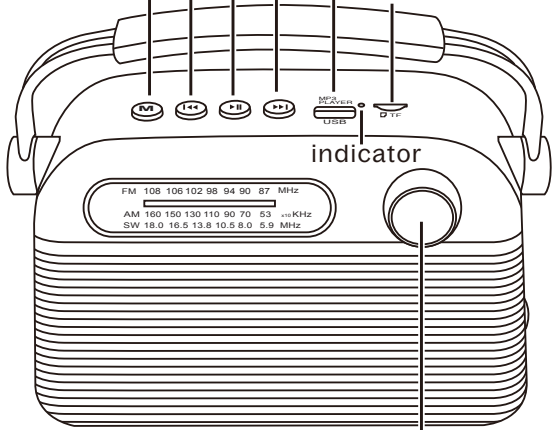

 Tuning Knob:
Rotate to search for and select radio stations

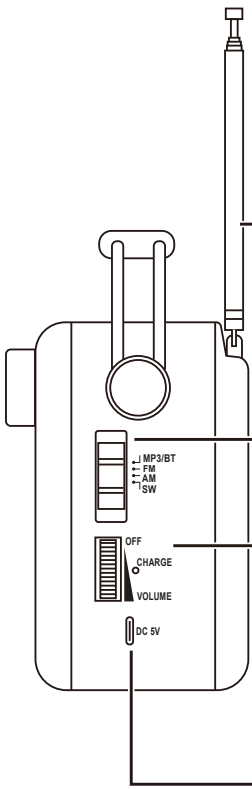

High sensitivity antenna

Band switch

Power ON/OFF:
Rotate the volume dial on the side upward/downward until you hear a "click".

Adjust Volume:
Rotate the volume dial downward to increase volume, or upward to decrease

USB-C Charging Port

- Bluetooth Mode: The pairing indicator flashes white. Search for "Target x Star Wars Radio" in your device's Bluetooth settings to connect. The light turns solid white when paired. The speaker will automatically reconnect to the last paired device.
- USB/microSD Card Mode: Insert a USB drive or microSD card (FAT32 formatted with MP3 files) to play music automatically.
- Controls: Use the Previous/Next track buttons to skip songs, Play/Pause button to pause, and the side volume dial to adjust volume.

TROUBLESHOOTING:

1. If the device is not working, turn it OFF and ON to restart.
2. If it won't turn on, recharge it via the USB-C port.
3. If it won't charge, use a working 5V 1A adapter and cable.
4. If the radio signal is poor, fully extend the antenna, select the correct band (FM/AM/SW), and avoid interference.
5. If Bluetooth fails, set the switch to MP3/BT and unpair previous devices.
6. If the USB/microSD card won't play, format to FAT32 (MP3 files) and press M to switch mode.

SAFETY:

1. Keep dry; do not expose to water, rain, or moisture.
2. Do not disassemble, modify, or repair the device.
3. Clean only with a soft dry cloth; avoid chemical detergents.
4. Do not expose to fire, high temperatures, or direct sunlight.
5. Handle telescopic antenna gently to prevent damage or injury.
6. Use a standard 5V charger only.

FCC ID: 2AC23-BTSP28 Model BTSP28 Input: 5V ~ 1 A Max Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Target Corp. Mpls, MN 55403 Phone: 1-652-304-6573

only at

© 2027 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

Only at Target.com