 




content
creation kit

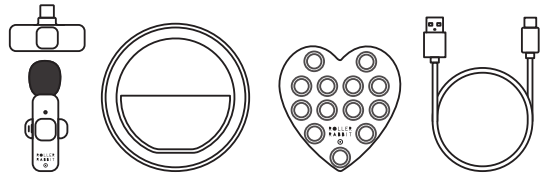

INCLUDED:

1. Microphone transmitter
2. Microphone receiver
3. Clip light
4. Heart shape phone suction mount
5. USB-A to USB-C charging cable

INDICATOR:

MICROPHONE TRANSMITTER-

- Quick flashing red and green - pairing
- Solid green - paired
- Flash red - charging
- No red light (when charging) - charging complete
- Slow flashing green - mute
- Slow flashing red - low battery

MICROPHONE RECEIVER-

- Flashing green - pairing
- Solid green - paired

USING WIRELESS MICROPHONE:

1. Hold the power button on the microphone transmitter for 3 seconds to power on. The indicator light will quickly flash red and green when it is ready to pair.
2. Plug the receiver into the USB-C port of your mobile device. The indicator light will flash green to indicate pairing.
3. Both the transmitter and the receiver will automatically pair after being turned on. Both indicators will turn solid green.
4. Then, record using the application on your mobile device.
5. To mute the microphone, press the power button on the transmitter.


TRANSMITTER CHARGING:

1. A full charge requires approximately 1 hour and will provide 4 hours of use.
 2. Plug the USB-C end of the charging cable into the charge port on the side of the transmitter.
 3. Plug the opposite end of the charging cable into a power supply of at least 5V 1A.
 4. Charging is complete when the red light turns off.
- WARNING: Please use UL compliant power supply.


CLIP LIGHT:

1. To access the battery compartment, remove the back cover, install 2 AAA batteries (not included), making sure that the "+" and "-" symbols match correctly.
2. Replace the back cover.
3. Press the power button to turn it on/off and cycle through the different brightness levels: on/low, medium, high, off.
4. Clip the light to your device.


CLIP LIGHT (BACK)

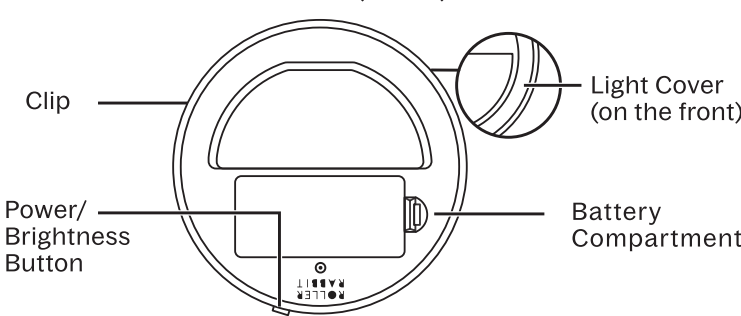

MICROPHONE TRANSMITTER

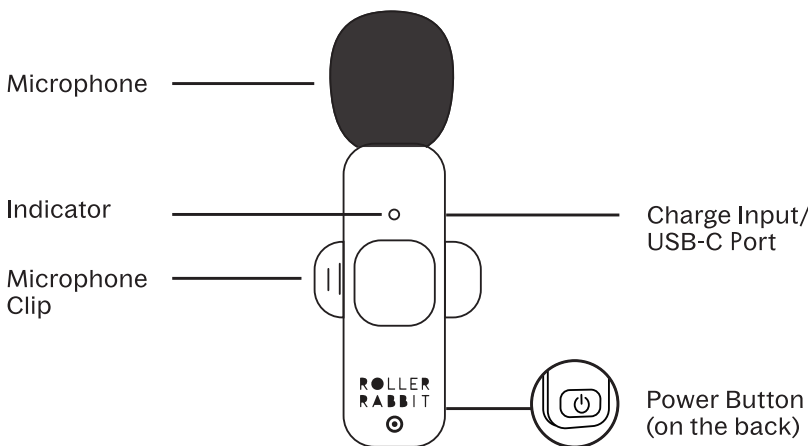

MICROPHONE RECEIVER

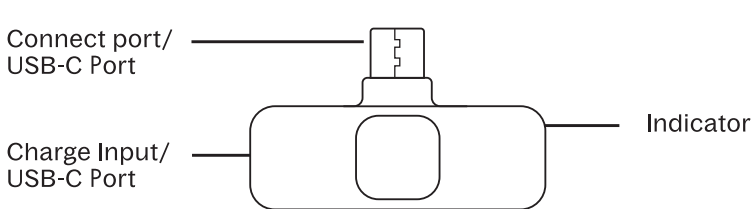 


only at

Only at Target.com

© 2026 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.



 content
creation kit

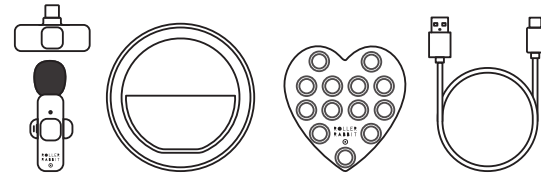

HEART SHAPE PHONE SUCTION MOUNT:

1. This suction mount will work on most phone surfaces, but it is recommended to use the smoothest surface for the best adhesion.
2. Clean the surface of your phone/case (not included) as well as the phone suction mount.
3. For best results, a slightly damp phone suction mount will adhere best.
4. Press the slightly dampened phone suction mount to the center of your phone/case.
5. Press it to a flat, smooth surface. The adherence time is designed to last 8 minutes. Re-press the device to reset adherence as needed.
6. To remove, pull down from the top.


NOTE:

1. This phone suction mount will hold the weight of most phones for a short duration of time, but will not protect the phone from fall damage should the suction come loose. The suction will inevitably lose strength over time.
2. Not for use in a car.
3. Check the suction cup for damage before using.
4. Before releasing your phone, be sure the phone suction mount is properly secured to the surface.
5. If the phone starts to come off of the suction pad surface during use, reapply pressure.
6. Never leave your phone on any unattended surfaces for long periods.

TROUBLESHOOTING:

1. If the microphone transmitter is not working correctly, turn it on/off to restart.
2. If the microphone transmitter won't turn on, recharge the battery and try again.
3. If the microphone transmitter won't charge, make sure the supply works, is 5V 1A, and not damaged.
4. If the clip light is not working correctly, turn it on/off to restart.
5. If the clip light won't turn on, make sure that the "+" and "-" symbols of the batteries match correctly.

HEART SHAPE PHONE
SUCTION MOUNT

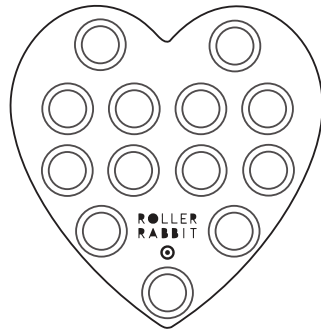

SAFETY:

1. Do not expose the products to fire, high temperature, direct sunlight, etc.
2. Do not modify or repair the devices.
3. Do not allow small particles to get into the ports of the products.
4. Do not use chemical detergents to clean, use a soft dry cloth to wipe clean.
5. Do not look directly at the light source of the clip light to avoid harming your eyes.
6. Use caution when touching the light cover on the clip light after extended use as it may become hot.
7. Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
8. Remove batteries for extended storage.

Microphone Transmitter FCC ID: 2A023-CKX1 Model: CKX1 Input: 5V ~ 1A Max. Microphone Receiver FCC ID: 2A023-CKX1A Model: CKX1A Clip Light Model: CKX1B Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

The device (wireless microphone) has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Target Corp. Mpls, MN, 55403 Phone: 1-877-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyours.com

only at

© 2026 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

Only at Target.com