


4in

wireless microphone

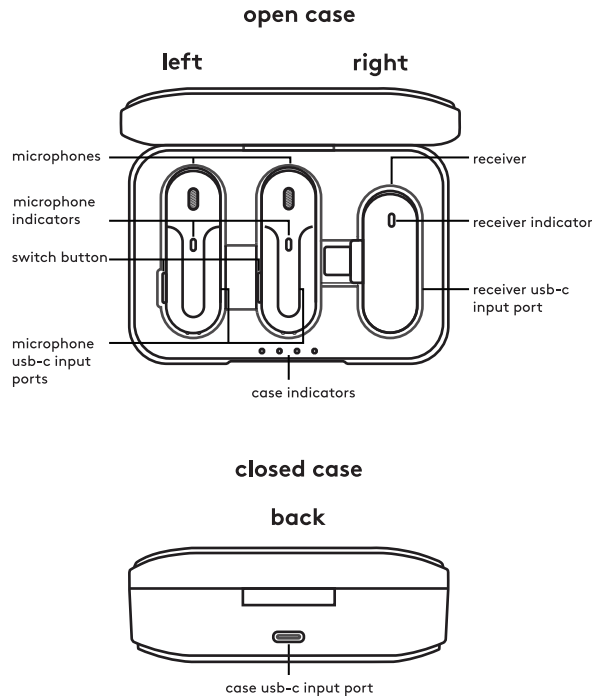

included

- Charging case with wireless microphones
- USB-A to USB-C charging cable

indicators

- Case charging indicator flashing red - charging
- Case charging indicator solid red - charging complete
- Case power indicator one light - 25% charged
- Case power indicator two lights - 50% charged
- Case power indicator three lights - 75% charged
- Case power indicator four lights - 100% charged
- Receiver indicator solid blue - power on/paired
- Receiver indicator slow flashing green - pairing mode
- Receiver indicator no lights - power off
- Microphone indicator red and blue lights flash alternately - power on
- Microphone indicator solid red - charging/muted
- Microphone indicator solid blue - paired
- Microphone indicator flashing red - low battery
- Microphone indicator no lights - power off / charging complete

ANC indicators (active noise-cancellation)

- Microphone indicator solid blue - ANC on
- Microphone indicator solid green - ANC off

using the wireless microphone

- Plug the receiver into your phone, use a USB-C to Lightning® adapter (not included) for iPhones if needed.
- Remove the microphone(s) from the charging case, be sure to remove the protective sticker if this is the first use. The two microphones will turn on automatically. The indicator light will flash red and blue alternatively. The indicator light will turn solid blue when it is paired successfully to the receiver.
- You can use one or both microphones for your recording needs.
- Press the switch button to turn ANC on/off.
- When the LED on the receiver is solid green, it is paired to the microphones and ready to use. Open your phone's camera, or the app you would like to use to receive sound.

charging case

- Using the included cable, plug the USB-C end of charging cable into the back of the case.
- Plug the USB-A end into a power supply of at least DC 5V 500mA.
- **Warning:** Please use UL compliant power supply.
- Full charge requires approximately 1.5-2 hours and will provide 4 hours of microphone use.
- Charging complete when all indicators of charger case are solid red.

charging microphone

- Place both microphones back into the case. Or use the included USB charging cable to charge the microphones directly.
- Charging is complete when lights turn off.
- Full charge requires approximately 1.5-2 hours.

need some help?

Can't get it to connect? Just have a question?



call us at: 1-833-TGT-Tech or: 1-833-848-8324

safety

- Do not use near any water source.
- Do not modify or repair this device.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

Warning: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

heyday

Model: MC081 Case USB-C Input: 5V=500mA Max Pogo Pin Output: 5V=300mA Case Battery Capacity: 3.7V/300mAh/1.85Wh
Microphone USB-C Input: 5V=70mA FCC ID: 2A023-MC081 Microphone Battery Capacity: 3.7V/70mAh/0.259Wh
Receiver USB-C Input: 5V=1A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Target Corp. Mpls. MN, 55403 Phone: 612-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyour.com

7.25in

front

back