 




USER GUIDE

Wireless Headphones

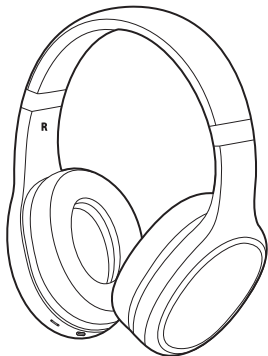

ON46346600946/ON46346600953_09132025

Contents & Information

**CONTENTS &
INFORMATION** - 1

OVERVIEW - 2

SAFETY PRECAUTIONS -
3/4/5

SPECIFICATIONS - 5

OPERATION

Button Functions - 7

Reading the LED Indicator - 8

Pairing - 9

Pairing to Two Devices - 10

Changing Modes - 11

 
CHARGING

Charging the Headphones -
12

TROUBLESHOOTING -
13

Overview

WIRELESS HEADPHONES

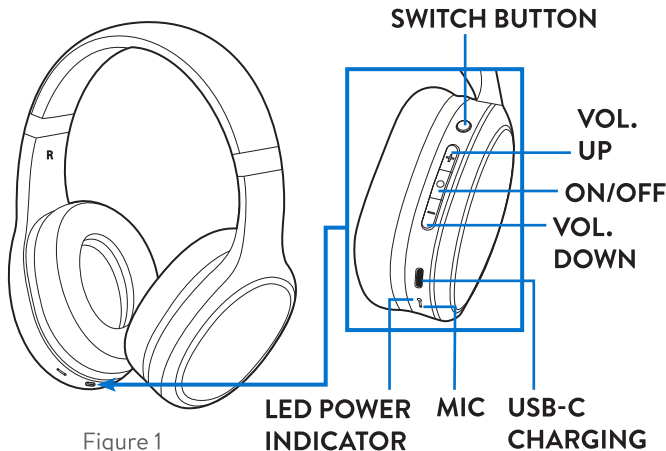

INCLUDED: WIRELESS HEADPHONES + USB-C CHARGING CABLE

Safety Precautions



SAVE THESE INSTRUCTIONS

- Do not use near any water source.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the

equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Specifications

FCC ID: 2AO23-ON4634

MODEL: ON4634

INPUT: 5V = 1A

onn

For product assistance &
missing or replacement parts:

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK

7:00am - 9:00pm CST

**THIS GUIDE
CONTAINS
IMPORTANT SAFETY
INFORMATION.**

PLEASE READ AND
KEEP FOR FUTURE
REFERENCE.

Find more at **Walmart.com**

Manufactured in China for: Walmart, Inc.
Bentonville, AR 72716

Button Functions

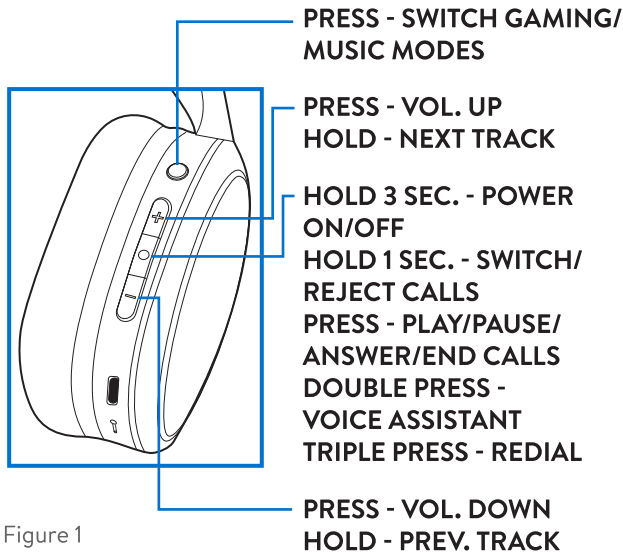


Figure 1

LED Lights

READING THE LED INDICATOR

Depending on the function of the headphones the LED light will change color and how it flashes. Follow the grid below to understand what each indicator means.


LED Indicator	Meaning
Slow Flashing Red	Low Battery
Solid Red	Charging
No Red Light	Charging Complete
Flashing Blue and Red	Pairing Mode
Slow Flashing Blue	Headphones Paired

Table 1

Pairing

PAIRING TO ONE DEVICE:

1. When the headphones are off, hold the power button for 3 seconds until the indicator light flashes blue and red.
2. Use the Bluetooth settings on your device to pair with **onn Wireless Headphones**, the indicator light will flash blue slowly when properly paired.

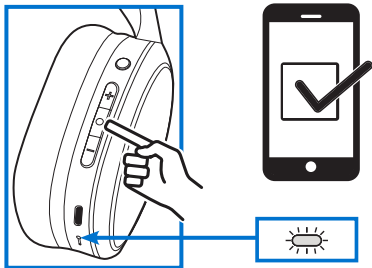

Note: The headphones will pair to the most recent device when in Bluetooth mode

Figure 2

PAIRING TO TWO DEVICES:

1. When the headphones are already paired, turn the headphones off and the Bluetooth of the device that they're paired to off.
2. Follow the same steps as pairing to one device to pair to a second device.
3. Turn the Bluetooth of the first device back on, the headphones should be paired to both properly. If they're not, reconnect the first device manually.

Changing Modes

GAMING/MUSIC MODE

1. Press the switch button to activate Gaming Mode for low-latency playtime. To switch back to Music Mode, press the button again.


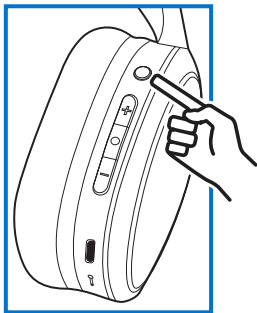


Figure 3

Charging

CHARGING THE HEADPHONES

1. Plug the USB-C end of the charging cable into the headphones, and the opposite side into a power supply of at least DC 5V 1A. Warning: Please use a UL compliant power supply.
2. The indicator will turn red when charging, and off when charging is complete. Charging takes approximately 1 hour.

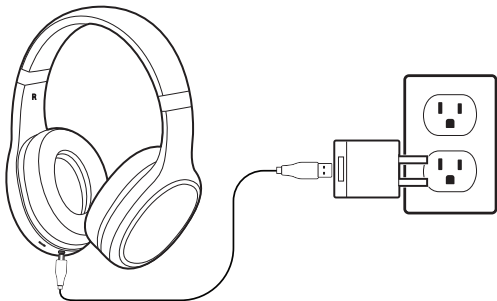

Troubleshooting

Problem	Cause	Solution/Prevention
Headphones not working correctly	Paired to a different device.	Unpair the them, and pair to the desired device.
	The headphones need to be reset.	Turn them on/off again. If that doesn't work, turn it on and hold the power Vol - button for 5 seconds.
They won't power on	Dead battery	Make sure the battery is fully charged.
They won't charge	Incorrect cable	Use the correct cable for charging your device.

Table 2