


MINI MAGNETIC SPEAKER

Compatible With Most Magnetic
Phones & Cases

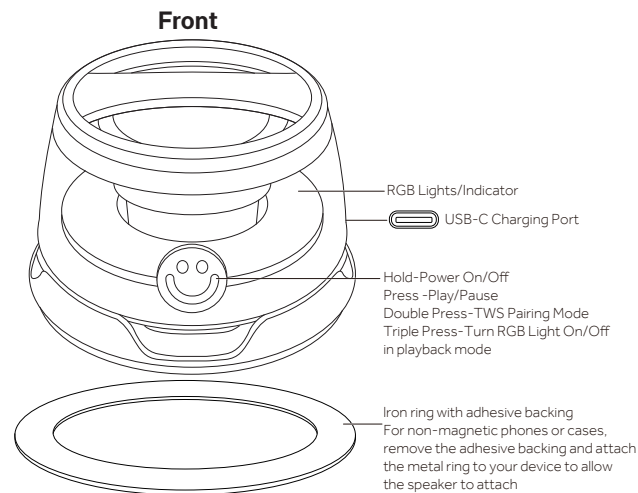

WHATS INCLUDED:

- Magnetic RGB Speaker
- USB-A to USB-C Charging Cable
- Iron Ring with Adhesive Backing

INDICATOR:

- Solid Red - Charging
- No Red Light - Fully Charged
- Ascending Quadruple Tone - Power On
- Descending Quadruple Tone - Power Off
- Rapid Ascending Triple Tone - Paired
- Rapid Descending Triple Tone - Disconnected
- Steady Quadruple Tone - Low Battery

PAIRING:

- Hold power button for 3 seconds to turn on the speaker, the RGB light will turn on.
- Use the Bluetooth settings on your phone to pair with WMMS003.
- Note: when the speaker is turned on and not connected to Bluetooth, it will automatically shut off after 5 minutes. In the power-off state, press and hold power button for 10 seconds to reset.

FRONT

4.65 in

TWS (TRUE WIRELESS STEREO) PAIRING

- You can pair two speakers of this same model together to get true stereo sound.
- Turn Bluetooth off on your device.
- Power on both speakers.
- Double-click the power button on either speaker to initiate TWS pairing. You will hear a chime when the two speakers successfully pair.
- Turn Bluetooth back on your device and connect to WMMS003.

Note: Once successfully paired for the first time, the speakers will automatically pair with each other the next time you turn them on.

MAGNETIC ATTACHMENT GUIDE

- For iPhone 12/13/14/15/16/17 and above:
- Snap the speaker directly onto the back of your phone (MagSafe area).
- For Other Phones/Cases:
- Clean the back of your phone or case.
 - Peel the film off the included Iron Ring.
 - Stick the ring to the center of your phone.
 - Attach the speaker to the ring.

CHARGING:

- Full charge requires approximately 2 hours.
- Using the USB-C cable provided, plug USB-C end into speaker and USB-A end into a USB power supply of at least DC 5V 400mA. warning: please use UL compliant power supply.
- The indicator light will turn red when charging, the indicator light will turn off when charging is complete.

TROUBLESHOOTING:

- If the speaker is not working correctly, hold the power button to reset.
- If the speaker won't turn on, recharge the battery and try again.
- If the speaker won't charge, make sure the power supply works, is 5V 400mA, and not damaged.
- If the speaker makes no sound or does not show as an available device, make sure it is not paired with another device, if so unpair the device and repair the desired device.

SAFETY:

- The speaker is splash resistant but do not submerge it under water.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

FCC ID: 2AQ23-WMMS003 Model: WMMS003 USB-C Input: 5V=400mA Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

8725 COLUMBINE RD EDEN PRAIRIE, MN 55344-6695, PO Box # 44895 Distributed by ZSOU.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at: support@zsoupower.com

BACK

7 in