

Formovie Mini Projector Dice

User Manual



FORMOVIE

To Users

Thank you for choosing the Formovie Mini Projector Dice.

For your security and interests, please read this manual carefully before using the product. If without properly operation shown in the user manual, personal injuries and other damages are caused, we will not take the corresponding responsibilities.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Specification

Product Name: Formovie Mini Projector Dice

Model: M055FGN

Input: 19 V $\approx$ 4.74 A

Net Weight: 2.2 kg

Item Dimensions: 155 × 125 × 160 mm

 
 
 
 
 
 
Manufactured by: Fengmi (Beijing) Technology Co., Ltd.

Address: 301, 3F, Building 3, No.10, Barracks South Street,
Renhe Town, Shunyi District, Beijing, China

Website: www.formovie.com

Product Overview


Exterior

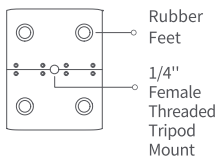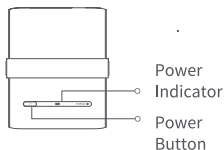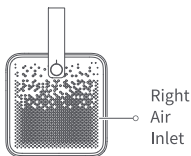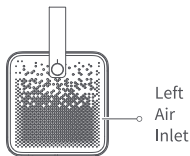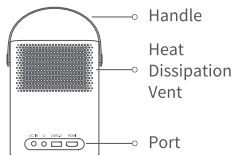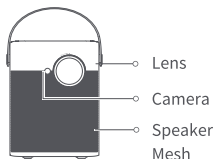

Caution:

- Do not place any flammable objects near the heat dissipation vent.
- Do not block any of the vents as this may cause heat build-up inside the projector.
- Do not look directly into the lens to avoid eye damage as the projector will emit strong light during working.

 Remote Control

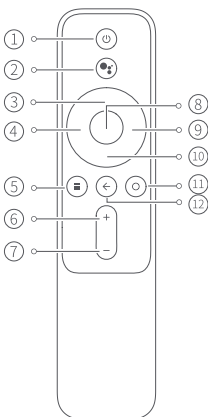

Battery Cover

- ① On/Off Button
Press Once: Select Turn Off / Restart / Delay Turn Off / Turn Off the Screen
Press Twice: Turn Off
- ② Google Assistant
Press the Assistant button on your remote to talk to Google Assistant
- ③ Directional Pad (Up):
Move Up
- ④ Directional Pad (Left):
Move Left
- ⑤ APP: Access the APP interface
- ⑥ Volume + : Increase the volume
- ⑦ Volume - : Decrease the volume
- ⑧ OK: Confirm the selected option or setting
- ⑨ Directional Pad (Right):
Move Right
- ⑩ Directional Pad (Down):
Move Down
- ⑪ Home: Return to the home screen
- ⑫ Return:
Return to the previous menu

Tips:

 
- With Formovie Mini Projector Dice and the Google Assistant, quickly access entertainment, control smart devices, get answers on screen, and more using your voice.



Note:


- Open the battery cover, and install or replace two AAA batteries according to the battery poles shown at the bottom of battery tank.
- Pay attention to the positive and negative poles when installing batteries in the remote control.
- When battery leaks, immediately wipe away any fluid with a dry cloth and replace the batteries with new ones.
- Dispose of used batteries according to local waste disposal rules and regulations of the country or area you live in.
- **The FCC label of Remote Control is put in the battery cabin of bottom.**

Connection Ports

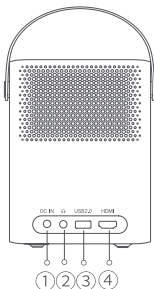

- ① DC IN
 - DC in port
- ② 
 - Headphone port
- ③ USB 2.0
 - Supports the USB 2.0 protocol
 - Supports USB to Ethernet adapters
- ④ HDMI
 - HDMI 2.0 input port

 Power Indicator

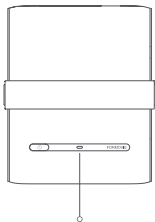

power indicator

The power indicator indicates the projector status as follows:

 
- After plugging in the power adapter, the indicator will blink and then go out. Press the power button to turn on the projector.
- While turning on the projector, the indicator light will blink.
- After loading the system, the indicator light will go out.
- After turning off the screen, the indicator light will be on.
- While turning off the projector, the indicator light will blink.
- After shutting down the system, the indicator light will go out.

Tips:

- The orange indicator shows the battery' s status. While in charging, it is on. When charging is completed, the light is out.
- If the projector is turned off automatically because of low battery, and it may not be used for a long time, please charge it within three or six months, to avoid the capacity loss in a long-term low battery status.
- If the projector is turned off automatically because of low battery, the bluetooth may be closed soon. In this case, it will not be turned on with the remote control. You need to press the **Power** button of the projector to start again.

Quick Start Guide

1 Turn on/off




- Plug in the power adapter, waiting the indicator turning off, and then press the power button to turn on.
- When the projector is on, press the power button on the top to shut down.

Note:

- If it is forced physical shutdown with long press on the power button, it will not be turned on by the on/off button on the remote control. To start again, please press the power button on the top of the projector.

 2 Pairing the Remote



- After installing the batteries in the remote control, press the OK button to start pairing.
- Point the remote at the bottom right corner of the projector, then simultaneously press and hold the APP and Home button. Once you hear a beep, it indicates that the pairing process has started. Release the buttons and wait for the process to complete.
- The projection screen appears the remote repaired successfully.