

User Manual

POSITIVO BGH™

Model No. M840



Internet



e-mail



Dual Camera



Video



Music



Wireless



Multi-Language



Movies



Games



Memory



Speaker



Mic

Attention

This 8-inch tablet contains important security information and instructions for the correct use of the product to avoid damages or accidents. Please make sure to read the manual carefully before use the device.

1. Please do not place the device in a high temperature, moisture or dusty place also liquids will damage the device and touch screen.
2. Please do not leave the device in high temperature places especially in summer do not store the device inside a car.
3. Avoid drop, fall or violent collision of the device, do not apply excessive pressure to the display, also vibration could cause the abnormal display of partial or complete damage to the screen.
4. Please choose the appropriate volume level and when using headphones adjust the volume to a safe level of comfort.
5. Please charge the device with the original charger as follows :
When the battery power ICONS shows have low or no power.
If system automatically shut off, startup after power off soon
Or when the operation buttons do not respond.
When the device top right corner show red icons.
6. When the device in the format or upload and download a file
Please, do not suddenly disconnect the power, this could cause applications error or internal memory damages.
7. In case of any user damage to the product, repair, or other causes of erased the memory, the company shall not be liable for any responsibility, please follow the user manual for the standard operation of the device.
8. Do not disassemble the product or apply any cleaning liquids.
9. Do not use the device one of the place of prohibit the use electronic equipment in regional (such as the plane).
10. Please do not use the Tablet PC when you in driving or walking.
11. Do not charge or connect the device with a non original part.

Tablet Parts

 
Name	Function
1) Camera	Front , Rear
2) Power	Keep pressed to turn on/off the tablet and gently press to activate standby.
3) Reset	When the Tablet under the condition of crash, use the small object to short press RESET button, Tablet will force shutdown.
4) Earphone jack	Connect earphone to this standard 3.5mm jack
5) Host Port	PC connection peripheral connection through cable for external memory and power adapter
6) HOME Key	Exit from the current function or return to the previous page
7) TF card slot	Insert memory card

Getting Started

Battery Charging

The tablet has a built-in rechargeable Li-polymer battery.

1. To charge connect the AC power adapter to the HOST port.
2. The battery icon shows the battery status and charging level.

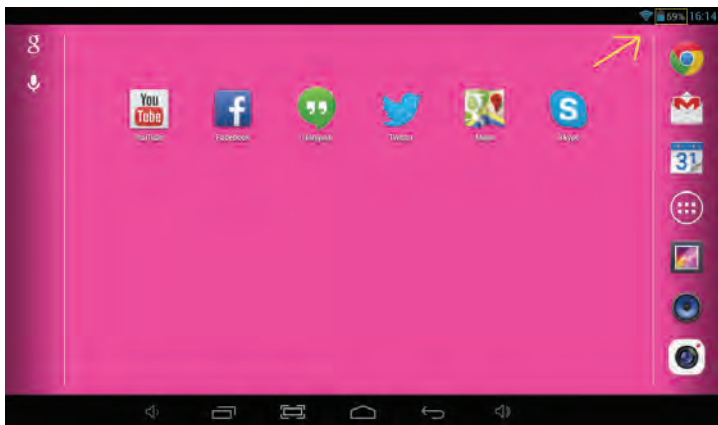

3. The tablet can be used even if the battery is being charged.
Use carefully to avoid the damages of power cord or HOST port.
4. Do not remove or puncture the battery this can cause an explosion or hazard situation may happen.
5. Recharge it for at least half hour if it has been idle for long time and fails to start, also do not leave the battery empty of charge
6. Regularly charge the tablet at least once a month to prevent battery damage. Do not charge battery for more than 6 hours.

Disposal

The battery contain polluting and toxic materials, please contact the official recycling location before disposing the tablet pc.

Power ON

Press and hold the  button for 5 seconds until screen turns ON.

Power OFF

Press and hold the  button for continuous 5 seconds and it will appear On screen the power options then select OK to power OFF the tablet

Screen Lock

This feature locks the screen, at the same time turn OFF the screen backlight after a few seconds normally the screen locks when:

1. System is idle.
2. Manually activated by pressing the Power button once.

 
Screen unlock



Home screen

The Home screen will look similar to the picture below. It is actually five screens, each of can have a different layout of icons. To switch between screens, simply slide your finger left or right across the display.

The status bar and navigation buttons are always visible.

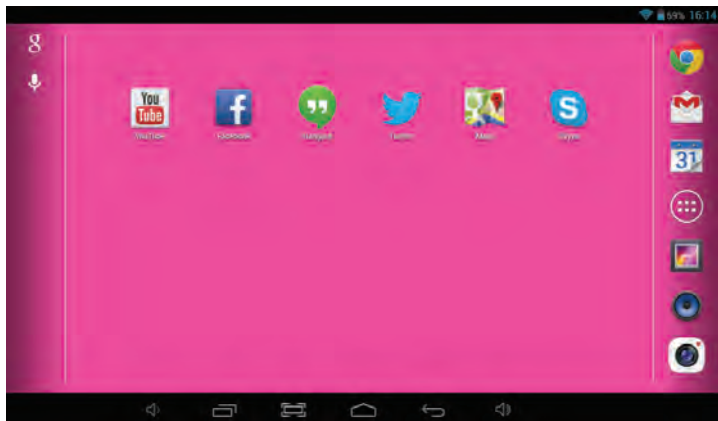

The Desktop contains shortcuts to your most used applications and widgets touch the screen icon to quickly do a search in the internet .

The  icon will launch the application menu.

The status bar displays system information, such as current time, wireless connectivity and battery. Touch to expand the status bar for more detailed information.

The  button moves back one step to the previous menu/page.

The  buttons returns immediately to the main desktop.

The  button display a menu of recently opened applications.

Settings Menu

The settings menu allows you to adjust Tablet system configuration.
To change settings:



Touch the "Settings" menu icon on the application menu.

1. Guide your finger up or down the left side of the screen to scroll through the list of available categories.

2. Touch a category to view further options on the right side of the screen.

Connect to disconnect from wireless networks, view connection status

Sound - Change volume, touch sound, screen lock sounds etc.

Display - Change brightness, wallpaper, sleep settings, font size etc.

Storage - Manage NAND and TF card, view available capacity etc.

Battery - See battery status and power usage by applications.

Apps - Manage applications, running services etc.

Accounts - Manage accounts etc.

Location services - Change approximate location detection, improve search results.

Security - Change screen lock type, encryption, password, credential storage etc.

Language & input Select language, add to the dictionary, edit on-screen keyboard settings, vocal search, etc.

Backup & reset - Backup & restore data, perform factory reset, etc.

Date & time - Set date, time zone, time, clock format etc.

Accessibility - Set up large text, auto-rotate screen, speak password etc

Developer options - Advanced functions for Android developers - debugging, HDCP check etc.

About tablet - Information about your device software version.

How to Use TF card

1. Insert the TF card into the TF card slot. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying “Preparing card “

Removing TF card

1. Close all applications and documents which have been opened from the TF card.
2. Select “Setting” and find “Storage” then click “Unmount card”.
3. A prompt will be seen on the screen saying “TF card safe to remove”
4. Gently press the TF card to remove and pull out the TF card.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

Software Keyboard

The tablet has a software keyboard which automatically show up when you tap the place on screen where text or number are to be entered.

Touch Screen

The touch screen responds to finger touch.

Note: do not place any object on the touch screen for it may damage or crush the screen. Clean touch screen with dry cleaning cloth.

Single Click: single click one icon to choose the icon or option you want.

 
Long Press: press and hold one icon to make appear a menu related to the executed function (if available).

Drag: drag on the screen and you can move between magic cube sides or drag the application icons into the shortcut bar.

How to connect with computer

Note: Turn on your Tablet before connect the Tablet to PC by data cable.

- 1 Use data cable to connect MID with computer. System will notice device connected on bottom of screen.
- 2 Press connected on the top bar, then click Turn on storage, click OK.
- 3 Then the data connection with your PC has been successfully.
- 4 Do not disconnect data cable while memory is reading or while you Copy or remove any files, this can cause internal memory damage, Please safely disconnect the device before unplug the data cable.

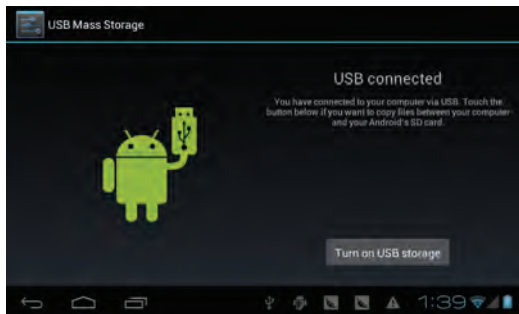

Connection to Internet

Wireless:

- 1 Select “ Settings”
- 2 Select wireless and slide OFF to ON status.



- 3 All detected wireless networks in the area will be listed, Click to select desired wireless connection.
- 4 Enter WEP key or network key if necessary.
- 5 Once connected to a wireless network, settings will be saved
- 6 Wireless icon will appear on the taskbar when connected successfully.

Note: when the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Web Browsing


Connect to the internet and launch the browser.



Camera



Touch the icon to enter camera mode and the interface is shown as follows:

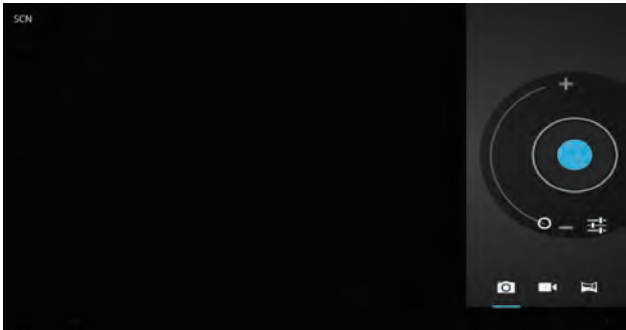 

1. Touch the icon in the middle to take photo



2. Move the icon on bottom and you can switch camera mode to camera recording mode.



3. Touch the icon on the top right to see the previous picture and you can also delete, share, set it as the wallpaper. Click return button to exit camera interface.

Trouble Shooting

Close Application

All running applications take up system memory and will slow down system response. Please shut down all idle applications to release memory and get the system speed back to normal.



To close the application, click the icon **Settings** on the shortcut bar to enter the system configuration interface. Select the **Application** → **Running services** and the interface is shown as follows:



Tap the application you want to close. A pop-up window will be displayed. Tap "Stop" to close that application.

Mandatory Power OFF

1. Press and hold the power button for 5 seconds and the device will be powered off.

2. Press the reset button on the back and the device will be forced to be powered off.

Restore Default Setting

If you want to reset the factory setting and erase all materials, please press **Settings** → **Privacy** → **Factory data reset**.

**** Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.**

****Please use this function carefully.**

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.