

英文

TROUBLE SHOOTING

Problems	Reasons	Solutions
Running Problems	The battery inside the radio controller is too weak.	Replace with new alkaline batteries.
	There is a weak or low reception to the radio controls.	
Operating Problems	The batteries inside the vehicle are too weak.	Replace with new batteries inside the vehicle.
	A small object obstructs movement of the tire of axle.	Use tweezers to remove obstruction.
	The ATV was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off the other equipment.

Controller:
Model # B1303T

Full Function Radio Control Vehicle:
Model # B1303R

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt (RSSB). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MADE IN CHINA



TRACKER
OFF ROAD

ITEM NO. B1363

5+



Manufactured & Distributed by
© 2019 MTMS (HK) LIMITED / MTMSHK, LLC
Po Tin Industrial Centre, No 25-26 Au Pui Wan Street,
Po Tin, N.T., Hong Kong
North Logan, Utah 84341, USA
info@mtmsk.com
All Rights Reserved
MADE IN CHINA



INSTRUCTION MANUAL

FULL FUNCTION RADIO CONTROL ALL — TERRAIN VEHICLE

***IMPORTANT:** IF ATV DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE BATTERIES IN ATV (5 AA NOT INCLUDED) AND BATTERY IN CONTROLLER (1 9V NOT INCLUDED).

**** NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:
Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

USES 5AA BATTERIES IN ATV (NOT INCLUDED) AND 1 9V BATTERY IN CONTROLLER (NOT INCLUDED).
COLORS AND DECORATIONS MAY VARY, KEEP CONTENT DETAILS FOR FUTURE REFERENCE.

CONTENT LIST



Controller




ATV

To prevent damage, the contents of the package that are listed have been packed in the tray and may be out of plain sight. Please remove all contents from the tray.

CAUTION:
DO NOT MODIFY TOY IN ANY WAY. ADULT SUPERVISION IS ADVISED!

GETTING TO KNOW YOUR OUTLAW

Diagram 1

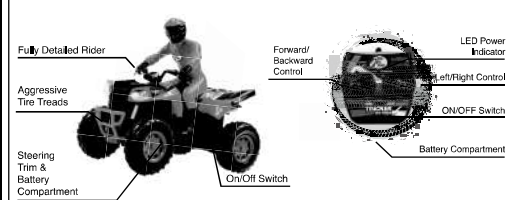

BATTERY INSTALLATION

Diagram 2

- 1) Using a crosshead screwdriver, unscrew and remove the battery cover.
- 2) Insert the 9V battery (not included) into the controller. Replace battery cover and tighten the screw.
(Use Alkaline Batteries for the longest battery life, and best performance).

PLEASE NOTE:
A) Make sure the batteries have been inserted correctly (+ or -) into the controller.
B) If the vehicle does not respond properly, please replace the alkaline batteries in the controller or exchange battery.

Diagram 3

- 1) Unscrew and remove the battery cover.
- 2) Insert the 5 AA batteries (not included) into the ATV, according to the correct polarities.
- 3) Replace the battery cover, tighten screws.
DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES IN FIRE BATTERIES MAY EXPLODE OR LEAK.



Cautions

1. Make sure you **always** use new or **fully** charged batteries in the controller.
2. Do not operate the ATV if it becomes damaged in any way.
3. Check that the infrared signal from the controller is making a connection with the ATV before operating.
4. Try not to crash the ATV as this may cause damage.
5. Check that the area is clear of all obstacles before you operate.
6. Adult supervision is **always** recommended.
7. Never operate near animals. Keep ATV a way from your fingers, hair, eyes and other body parts. Stay away from obstacles and electrical hazards.

Warning


1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are **only** to be charged under adult supervision.
3. Rechargeable batteries are to be removed from the toy before being charged.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.
7. The supply terminals are not to be short-circuited.

USING YOUR ATV

Diagram 4

- 1) Flip the On/Off switch to the "ON" position on the bottom of the ATV.
- 2) Flip the On/Off switch to the "ON" position on the controller.
- 3) Place on the ground and use the controller to maneuver the ATV.
- 4) If the ATV does not respond, switch the ATV and controller to "OFF" and repeat above steps 1 and 2.
- 5) If ATV pulls to one side or the other, simply adjust the steering trim located on the bottom of the ATV.
- 6) After operating, return both the ATV and controller to "OFF" position.
- 7) When not being used for an extended amount of time, remove the batteries from the controller and ATV.

DANGER:
NEVER TOUCH THE WHEELS WHEN THEY ARE TURNING. NEVER INSERT ANY SHARP OBJECTS, NAILS OR SCREWS INTO THE VEHICLE AS THIS MAY PUNCTURE THE TIRE OR THE BATTERY!

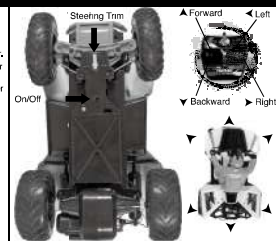

NOTE:
Operating multiple RC's with the same frequency in close proximity will cause interference and poor performance. Two frequency bands are available to play two at the same time.
Works best away from electrical hazards and large obstacles.
For optimum performance play on smooth surfaces.
Do not drive on grass, dirt, sand, dust, carpet or through water.
Do not drive in windy or rainy weather.
Do not put objects or fingers near the front or rear of the wheels while it is turning.
Vehicle can run on various terrain, be sure objects do not get obstructed in the wheels.
Avoid hard crashes.
Never give the vehicle or controller to any child under the age of 3, as it contains small parts.
Switch OFF the power when not in use to prevent damage to the Vehicle due to leakage age of electrolyte from batteries.
When not in use, remove batteries from compartments (vehicle and controller).
Normal working distance is about 50 feet (15 meters).
Don't cover the antenna of the transmitter. No signal will be released while the lens is covered.

