

FRONT SIDE

BrightLife TWS earbuds INSTRUCTION MANUAL Thank you for purchasing the True Wireless Earbuds. This manual provides more information about the wireless earbuds, please read the instructions before using.  Product Overview Earbuds RIGHT LEFT 1. Button Instruction Manual Instruction Manual Portable Charging Case Front (2)LED 1. On/Off Button/ Play/Pause Music Answer/End Call 2. LED Indicator (Charging box) TYPE C Charging Cable USB Plug TYPE C Plug Package Contents True Wireless Earbuds x 1 Pair Portable Charging Case x 1 TYPE C Cable x 1 Instruction Manual x 1 Specifications Driver diameter: 10mm; Impedance: 32 ohms; Frequency response: 20 Hz - 20K Hz; Sensitivity: 98 db +/- 3 db; Earbud battery capacity: Li-Ion 3.7v 30 mah per earbud; Charging case battery capacity: Li-Ion 3.7v 200 mah; Play time: 1.5 Hours Per Charge, 9 hours in total; Charging time: 2 hours; Type C charging cable included Bluetooth® range: 32.8ft, version: 5.3 Pairing name: SORB-TWS3 Power on/Off Power on Press and hold the button for 3 seconds to turn on,[Red flash LEDs] Power off Press and hold the button for 3 seconds Pair the wireless earbuds with your mobile device 1.Keep the distance between the earbuds and mobile device within 32.8 feet. 2.Take both earbuds out from charging case.The Earbuds is automatically turned on. Auto pairing of left and right earbud successfully. [1]. Left and Right pairing: left earbud with blue light flashing, right earbud no light. [2].Voice prompt: 'Connected' 3.Activate the Bluetooth function on your mobile device and select "SORB-TWS3" from the list shown. 4.After pairing is successful, there is a voice prompt 'connected'. Reconnect the wireless earbuds to your mobile device When powered on, the wireless earbuds will automatically connect with the last successfully paired device. Disconnect the wireless earbuds from your mobile device Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60 ft away from your mobile phone or further, Voice assistant function Press and hold the button for 2 seconds (beep sound to wake up) Answer / Reject a call Short press the button once in incoming call status(left and right, any Earbud) In incoming call status, press and hold the button for 2 seconds to Reject a call (left and right, any Earbud) End a call Short press the button once in the call state (left and right, any Earbud) Functions Pause/Play Music: Short press the button once during pairing; (the mobile phone status is on)(left and right, any earphone) Go back to previous song: Touch 2 times on right earbud; Advance to next song:Touch 2 times on left earbud; Volume up:Touch 3 times on right earbud; Volume down:Touch 3 times on left earbud; Charging your Earbuds 1.Insert the Earbuds into the charging case, 2.The earbuds will start the charge automatically, and with red light up. 3.The red light of earbuds will be off when fully charged 4.Short press the button on the back of charging case to cut off the power supply. Recharge Charging Case ⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the TYPE C charging cable provided with the packaging. 2. Connect the TYPE C plug to TYPE C charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging. 3. The Red colour LED on the charging case will be on during charge. 4. Once fully charged, the Red colour LED will be off. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the charging case and earbuds if it has been not used for more than 6 months, USB Plug TYPE C Plug FAQ If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Make sure the protective stickers are removed from the Earbuds Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered. ⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F. - Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development. FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FC 2A047-SORB-TWS3 Model#SORB-TWS3 16310723-0152 MADE IN CHINA Distributed by: ORBIT INNOVATIONS 148 West 37th Street, 14th Floor New York NY – 10018 Keep All Relevant Information For Future Reference
