


DO NOT PRINT THIS LAYER
PRINT BACK TO BACK

FOLD AS SHOWN →

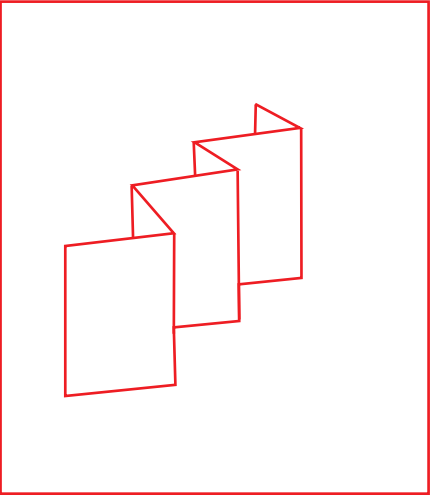

FRONT



GlitterSound
— wireless speaker —

Carabiner included

INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

M/N: WMGLTRSPKR-ASST

Getting Started
Remove the unit from the box.
Remove any packaging from the product.
Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.


Package Contents
Triangle Bluetooth Speaker
Carabiner
USB charging cable
3.5mm Aux cable
Instruction manual

Features

- Wireless Bluetooth connectivity to most smart phones, tablets, computers and more devices.
- Stream Music/Audio wirelessly
- Built-in Mic for hands-free calling
- Rechargeable built-in battery
- Carabiner included

Specification:
Bluetooth Version: V2.1+EDR
Bluetooth Range: 8-10M
Battery Type: Rechargeable Lithium-ion
Build-in Rechargeable Battery: 3.7V/300mah
Speaker output: 3W
Power Input: DC5V/ 0.5-1A
Sensitivity: ≥80dBm
Impedance: 4Ω
Frequency Range: 2402-2480MHz
USB Cord Length: 530mm
USB Cord Type : Micro USB
Product Size: 97.7*97.5*40MM
Product weight: 122g
Battery weight: 19.2g
Battery charging time: Upto 2-3Hours
Playtime: Upto 1.5-2Hours (On 70% Volume)
(Note: Battery life & charging time may vary, based on usage & types of devices used.)

INSTRUCTIONS FOR USE

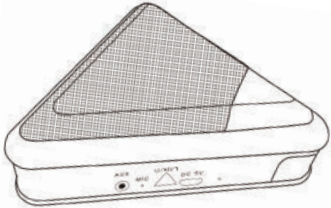

Charging the speaker
For best results, fully charge the speaker before its first use.
1.Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2.Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 2-3 hours to fully charge the speaker.

Turn On/Off the Speaker
Press and hold the MFB button (Power) for 2-3 seconds until you hear the indication tone. Blue LED light will blink ,and is entering "pairing" mode.

Press and hold the MFB button (Power) for 2-3 seconds to turn off the speaker.

Turn the speaker to Bluetooth pairing mode

- Press and hold the MFB button (Power) for 2-3 seconds until you hear the indication tone.
- Blue LED light will blink, your speaker entering "pairing" mode.
(Note: Speaker automatically pairs with the previously paired devices)

Pairing your device with Bluetooth Speaker
Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow the below steps.

- Press and hold the MFB button (Power) for 2-3 seconds until you hear the indication tone.
- Blue LED light will blink, your speaker is entering "pairing" mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of our Bluetooth Speaker is "*Glitter*", pair it with this device.

BACK

6. Once paired successfully, you would hear a beep tone and the blue LED light will flash slowly.

7. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Talking using the Bluetooth Speaker
Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the MFB button to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the MFB button for 2-3 seconds
End Call	Incoming Call	After your phone conversation, short press the MFB button

Play music using "Aux"

- Press and hold the MFB button (Power) for 2-3 seconds until you hear the indication tone.
- Insert the 3.5 mm Audio cable (included) in the Aux jack of the speaker. And the other end of the cable, to the audio device (such as mobile phone, computer / tablet etc.).
- The Blue LED will stay on.
- Select your favorite song at the source device.

Care and maintenance
Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure
The equipment has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

© 2018 Zeikos, Inc. iHip is a trademark of Zeikos, Inc., Registered in the U.S. and other countries. The illustrated product and specifications may differ slightly from that supplied. All other trademarks and trade names are those of their respective owners. United States and international patent pending. All Rights Reserved. For ages 12+up. This is not a toy. Designed by iHip, Manufactured in China.

⚠WARNING: Under Prop65, this product may expose you to chemical(s) which are known to the State of California, to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov



One Year Warranty. Customer service: 1-888-934-5675
To activate your product warranty go to our website www.iHip.com & register this product.



GlitterSound
— wireless speaker —



19 Progress St.
Edison, NJ 08829
www.iHip.com



#iHip



Find us on Facebook.
Keywords: iHip, Portable Entertainment