

GOFISH CAM QUICK START GUIDE


1. WiFi Button

Press to turn on/off WiFi

2. Record/Mode Button

Press on/off recording.
Hold to cycle through video modes.

- Green Light is 1080@60fps,
- Dark Blue Light is 1080@30fps,
- Light Blue Light is 720@60fps.

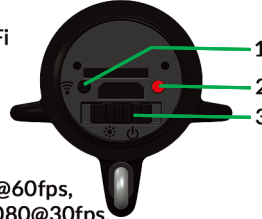

3. Power Switch

Switch to Left - On with night vision light
Switch in middle - Off
Switch to right - On

Note: by holding down the WiFi button (#1) and the Record/Mode Button (#2) at the same time you will manually reset the camera.

Before using your GoFish Cam, it is highly recommended to read the full instruction manual available at www.GoFishCam.com/Instructions

Prima di usare la Sua GoFish Cam, La invitiamo a leggere interamente il manuale di istruzioni disponibile sul sito www.GoFishCam.com/Instructions

Avant d'utiliser votre GoFish Cam, il est fortement recommandé de lire le manuel d'instruction au complet, disponible au www.GoFishCam.com/Instructions

Antes de usar su GoFish Cam, es muy recomendable leer el manual de instrucciones completo. Para obtener el manual de instrucciones completo, visite www.GoFishCam.com/Instructions

GoFish Camを使う前に、下記のリンクにあるマニュアルの説明文を読まれることを強くお勧めします。 www.GoFishCam.com/Instructions

在你使用GoFishCam之前，强烈推荐你先上 www.GoFishCam.com/Instructions 这个网站阅读一下全面的人工操作使用说明

Vor der Verwendung ihre GoFish Cam, es wird dringend empfohlen sich die vollständige Bedienungsanleitung zu lesen verfügbar unter www.GoFishCam.com/Instructions