



SMART DRIVING MONSTER TRUCK

BATTERY REQUIREMENTS:

Direction trimmer at the front bottom of the car provides fine tuning to keep a straight line path for the car.

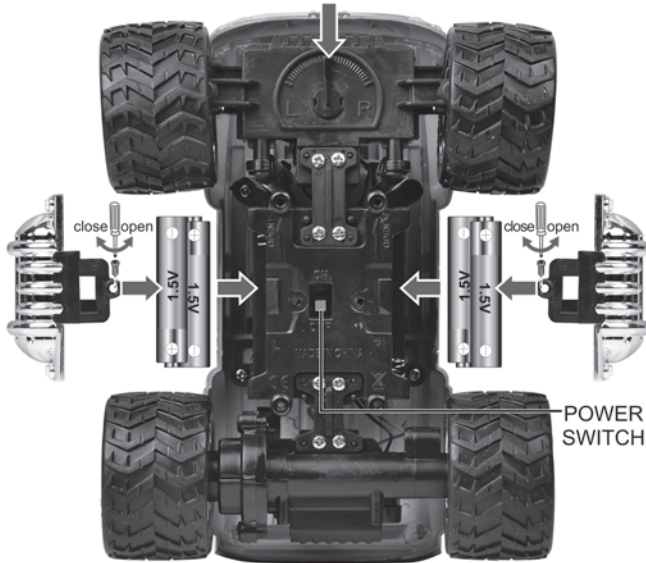

Uses 4 x 1.5V "AA" batteries (INCLUDED)

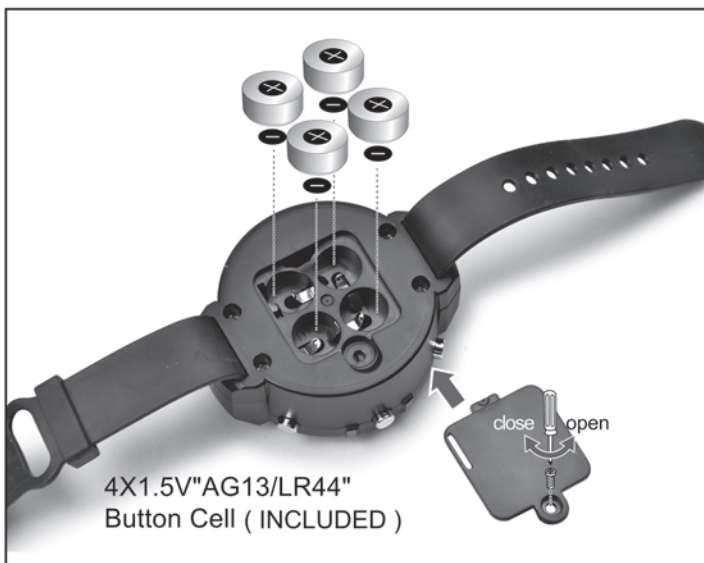

BATTERY WARNING:

- Non-rechargeable batteries should not be recharged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Batteries should be inserted with the correct polarity.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



WARNING:

CHOKING HAZARD - small parts
Not for children under 3 years.

TO PLAY THE VEHICLE WITH VOICE COMMANDS:



10 VOICE COMMANDS (IN ENGLISH):

Speak voice commands in english into the voice receiver on the Smart Drive Watch

COMMAND	FUNCTION
FORWARD	THE VEHICLE RUNS FORWARD
GO BACK	THE VEHICLE RUNS BACKWARDS
STOP	THE VEHICLE STOPS
LEFT	THE VEHICLE TURNS LEFT
RIGHT	THE VEHICLE TURNS RIGHT
DEMO	THE VEHICLE PERFORMS DEMO PATTERN
TURBO	THE VEHICLE RUNS AT HIGH SPEED FOR 2 SECONDS (WHEN RUNNING FORWARD)
ENGINE	THE ENGINE SOUNDS & LIGHTS ON / OFF
HORN BLARED	HORN SOUND
SPEED	HIGH SPEED / LOW SPEED

TO PLAY THE VEHICLE WITH THE BUTTONS:



PRESS THE BUTTONS ON THE SMART WATCH TO DRIVE THE VEHICLE

1. START/STOP	2. FORWARD
3. BACKWARD	4. SPEED
5. VOICE RECEIVER	6. HORN
7. TURN RIGHT	8. TURN LEFT

If the 2.4GHz frequency connection between the vehicle and the watch does not immediately connect, press **BUTTON # 2** (the forward button) and **BUTTON # 3** (the backward button) on the Smart Watch at the same time for 2 - 3 seconds to clear the initial connection. After the initial connection is cleared, the vehicle will default to the Smart Watch which is already connected.

IMPORTANT INFORMATION:

1. Install 4 x 1.5V - AG13/LR44 button cell batteries (INCLUDED) in the correct direction in the back side of the smart Watch.
2. Install 4 x 1.5V - "AA" batteries (INCLUDED) in the correct direction in the vehicle.
3. Turn on the power switch on the bottom of the vehicle, front headlights will blink indicating the vehicle is in stand-by mode awaiting commands from the Smart Watch.
4. Press the ENGINE/START/STOP button on the Smart Watch for 2-3 seconds until the engine light illuminates.
5. Hold until the engine sound is heard and the front lights stop flashing. This means the 2.4GHz connection has been made and the vehicle is ready to drive.
6. Each time you turn on the vehicle and Smart Watch, the connection procedure will need to be repeated.
7. The 2.4GHz frequency technology allows multiple vehicles to play together at the same time (Max.50 vehicles). In order to play multiple vehicles at the same time, the frequency connection must be done one at a time
8. If the 2.4GHz frequency connection between the vehicle and the watch does not immediately connect, press **BUTTON # 2** (the forward button) and **BUTTON # 3** (the backward button) on the Smart Watch at the same time for 2 - 3 seconds to clear the initial connection. After the initial connection is cleared, the vehicle will default to the Smart Watch which is already connected.
9. Replace batteries if connections or vehicles does not operate well.

The statements should be displayed in the user manual: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID : 2AOFC75485502689

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention



Warning: Contains button or coin cell battery. Hazardous if swallowed - see instructions.