



Screen Display Guide

1. Activate the screen by pressing the power button to check the battery status.
2. The screen turns off automatically after 30 seconds of inactivity. To manually turn off the screen, press and hold the power button for 2 seconds. After pairing the power bank with your phone via Bluetooth, you can set the screen off time and choose a screensaver in the Anker App.
3. Press the power button twice to activate or exit trickle charging mode (for low-power devices such as earbuds or handheld fans).

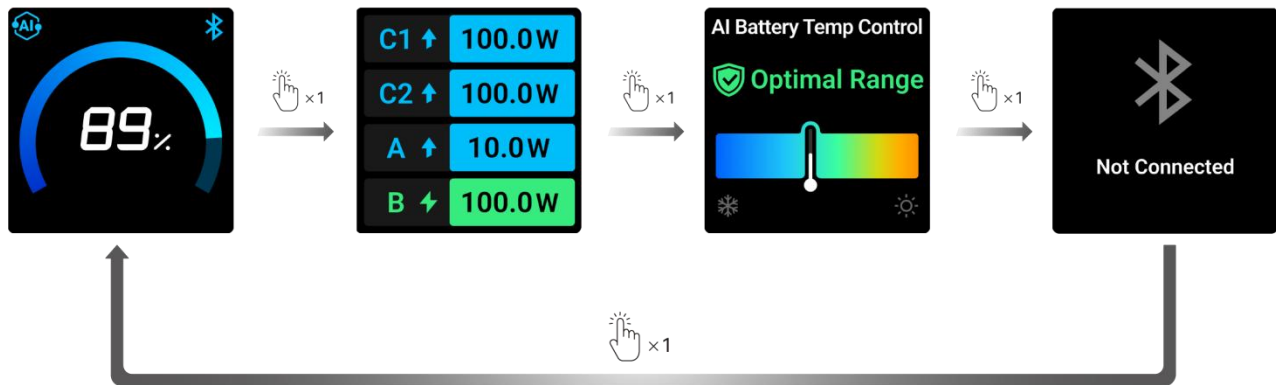

Main Screen Features

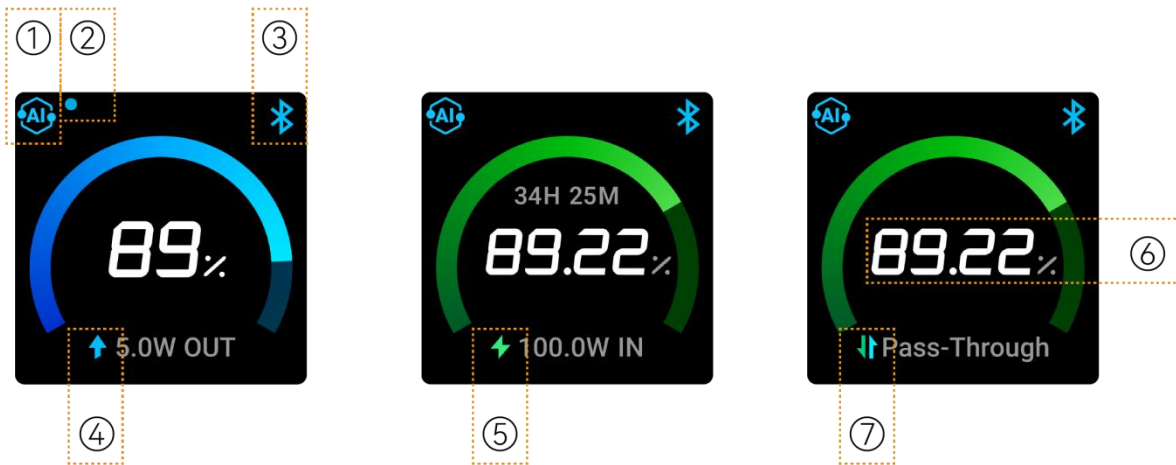

- ① Battery Mode
- ② Blue Dot: Trickle Charging Mode
- ③ Bluetooth
- ④ Blue Arrow: Charging / Output
- ⑤ Green Lightning: Recharging / Input
- ⑥ Remaining Battery Percentage
- ⑦ Simultaneous Charging and Recharging / Pass-Through Charging


	The Battery Mode icon changes according to the mode you choose in the Anker App. A: AI Mode - the power bank distributes power intelligently to maximize charging efficiency B: Power Saving Mode - the power bank reduces power output appropriately to minimize battery health loss (set in the Anker App) C: Custom Mode - you can customize power distribution plans according to your own preferences (set in the Anker App)
	The Bluetooth icon changes in different situations. A: Bluetooth is connected B: Bluetooth is not connected C: Bluetooth is not turned on

Power Distributions

When connecting your devices to the charger, the power distributions to each port are displayed.


Note: "B" means "charging base". This part is displayed when the power bank is recharged with:

- Anker 100W Charging Base - model A1902
- Anker Prime Charging Base (150W, 3 Ports) - model A1903

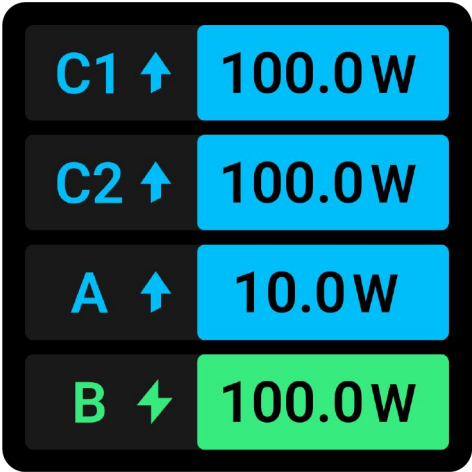

AI Battery Temperature Control

The power bank monitors its internal temperature to ensure safety. When the temperature is too low or too high, the power bank will disable some or all functions until the temperature normalizes.

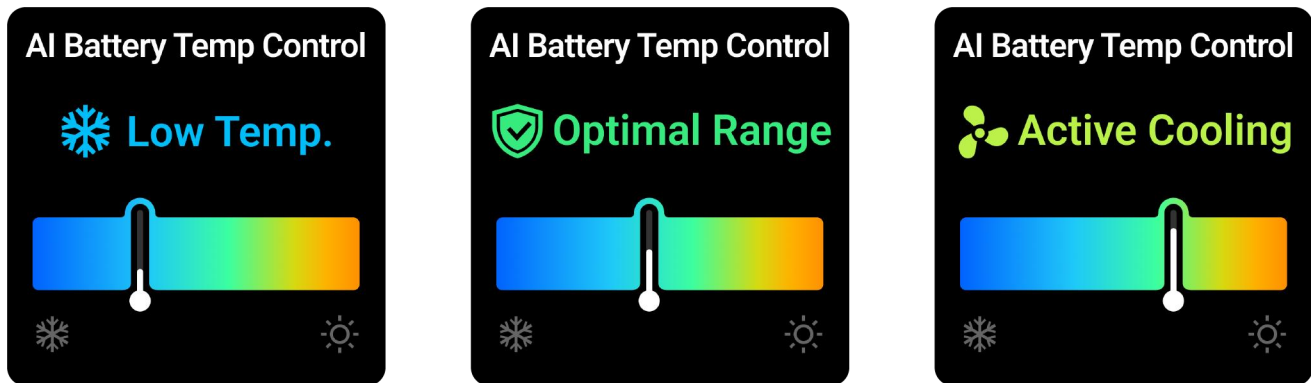

Pomodoro Timer

Hold the power bank and swing it from left to right for four times, and the power bank will start a 25-minute countdown. Press the power button once to disable the Pomodoro Timer.

After pairing the power bank with your phone via Bluetooth, you can set the countdown time according to your own preferences in the Anker App.




Note: Additional screen displays are listed at the end of this user guide.

Bluetooth Connection



1. Download the Anker App at <https://www.anker.com/app-download>



2. Press the button twice to turn on/off the Bluetooth function of the product. Before connecting, ensure that Bluetooth is turned on and that the product is no more than 33 ft (10 m) away from your phone.

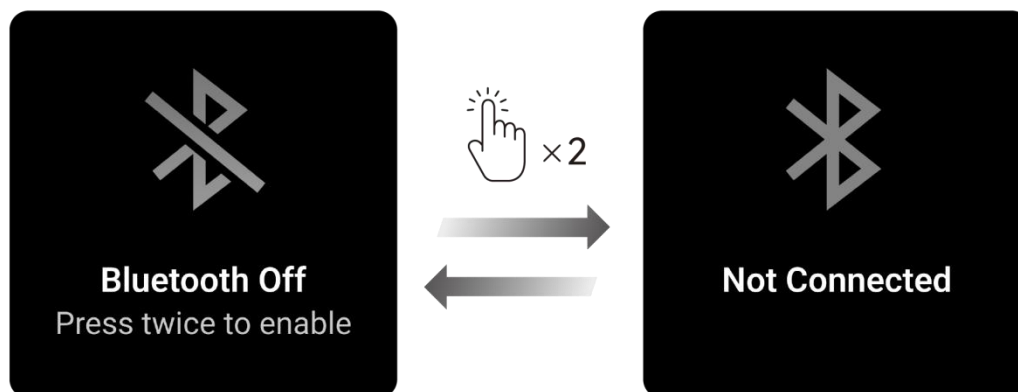



3. Turn on Bluetooth on your phone, and tap the "+" icon in the upper right corner or select "Add Devices" at the bottom of the Devices page. Follow the in-app instructions to complete the connection setup.

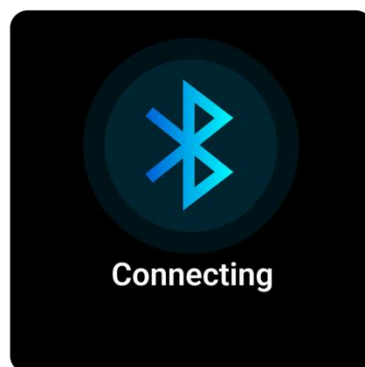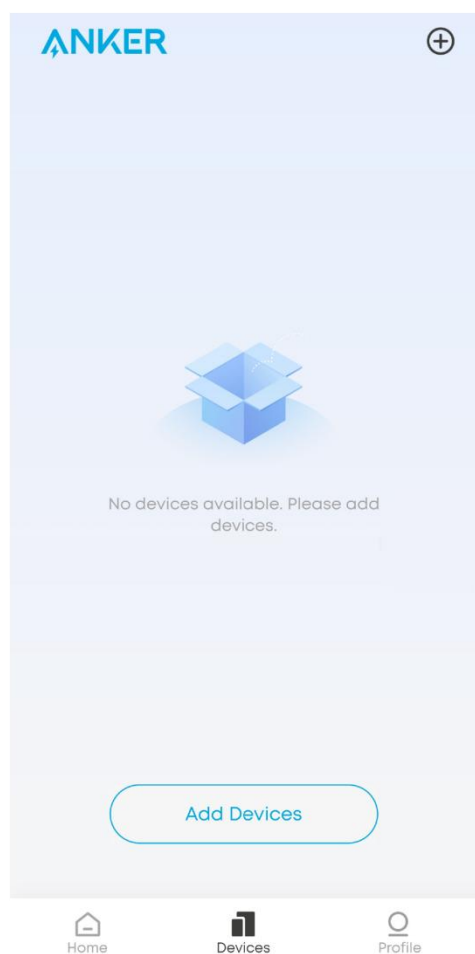



4. After successful connection, you can check the real-time data of the product and make detailed settings in the App.

If connection fails, please check if:

- The product is turned on and working normally
- The product's Bluetooth is on
- The product is close to your phone

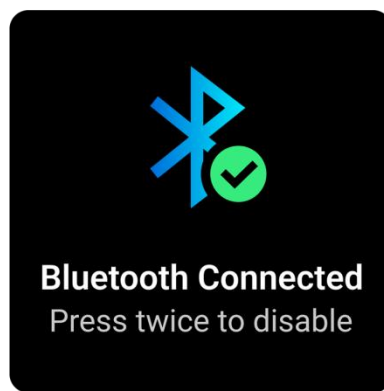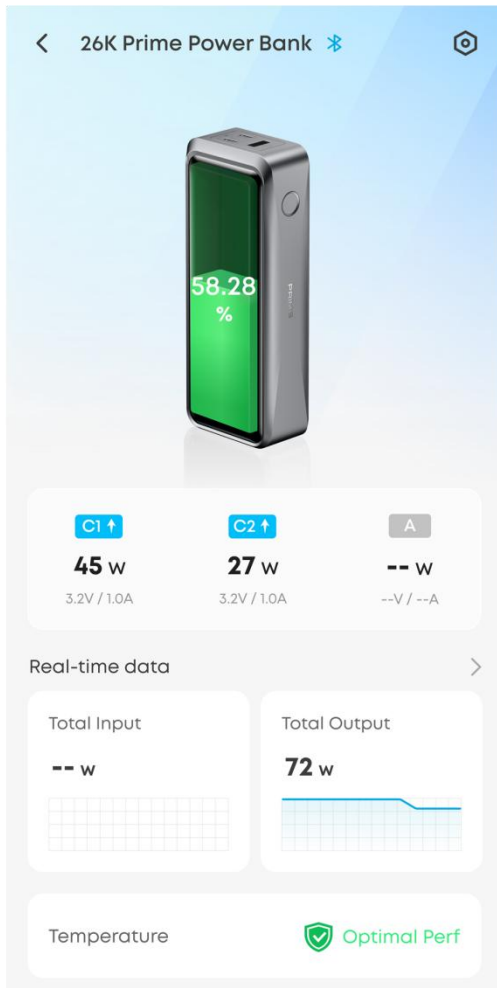


5. When you receive software or firmware update notifications, please update in time for better experience. Do not connect the power bank to other devices until the update is complete.

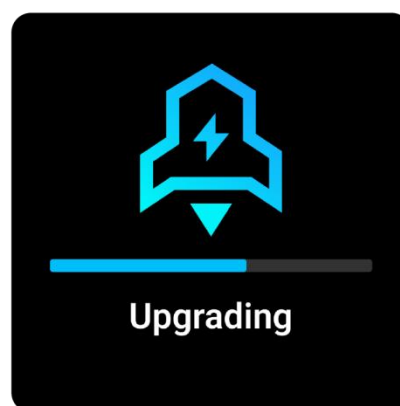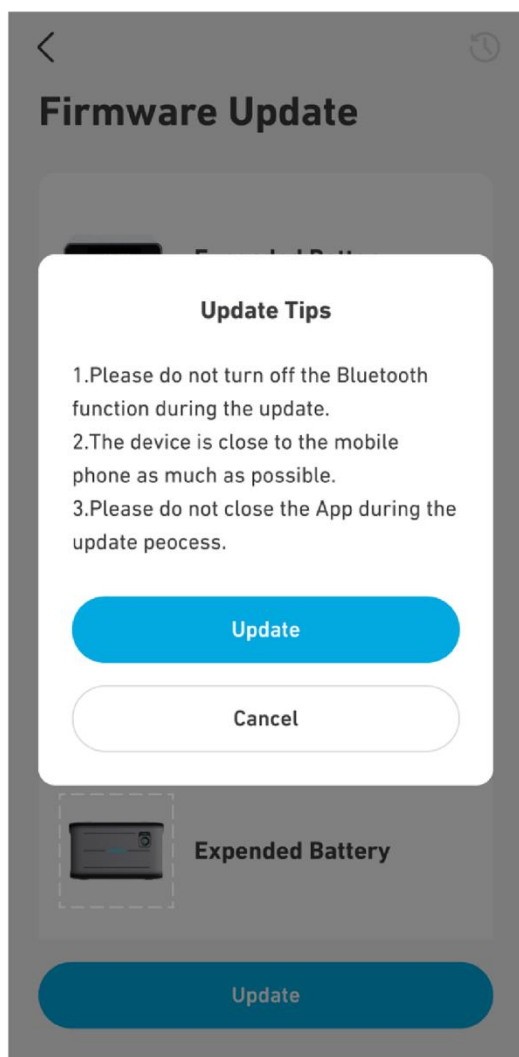

6. To reset the Bluetooth connection, press and hold the button for seven seconds. Then you can repeat the steps above to connect the charger to a new phone or new App account.



Charging Your Devices

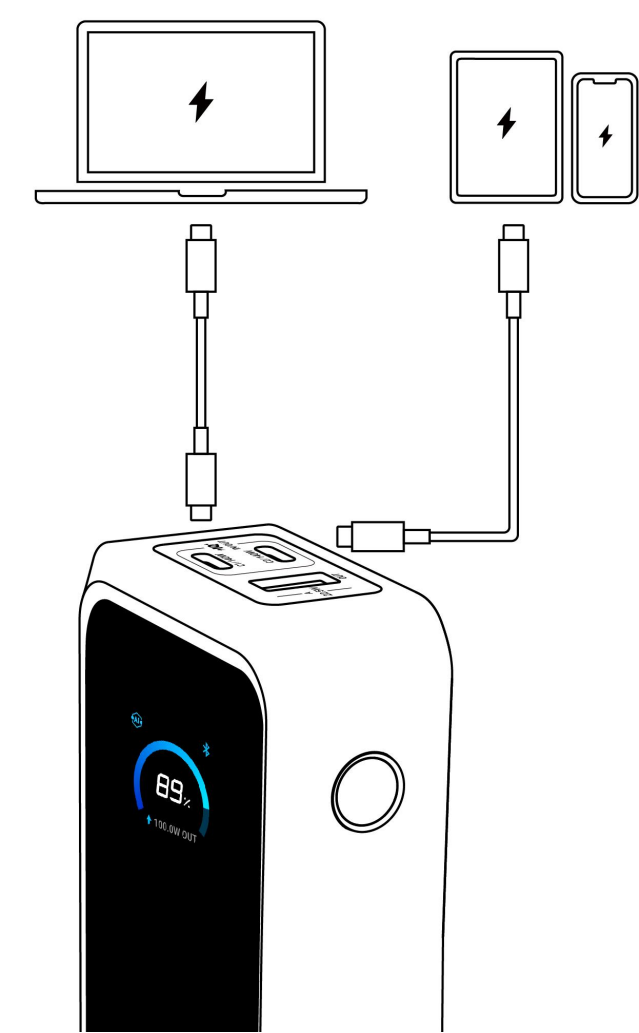

USB-C port output notice
(cable type and charging protocol are displayed)



USB-A port output notice




Fast charging notice (single port)



Turbo Mode: super fast charging notice
(multiple ports)

Recharging the Power Bank

Recharge the power bank via the USB-C ports.

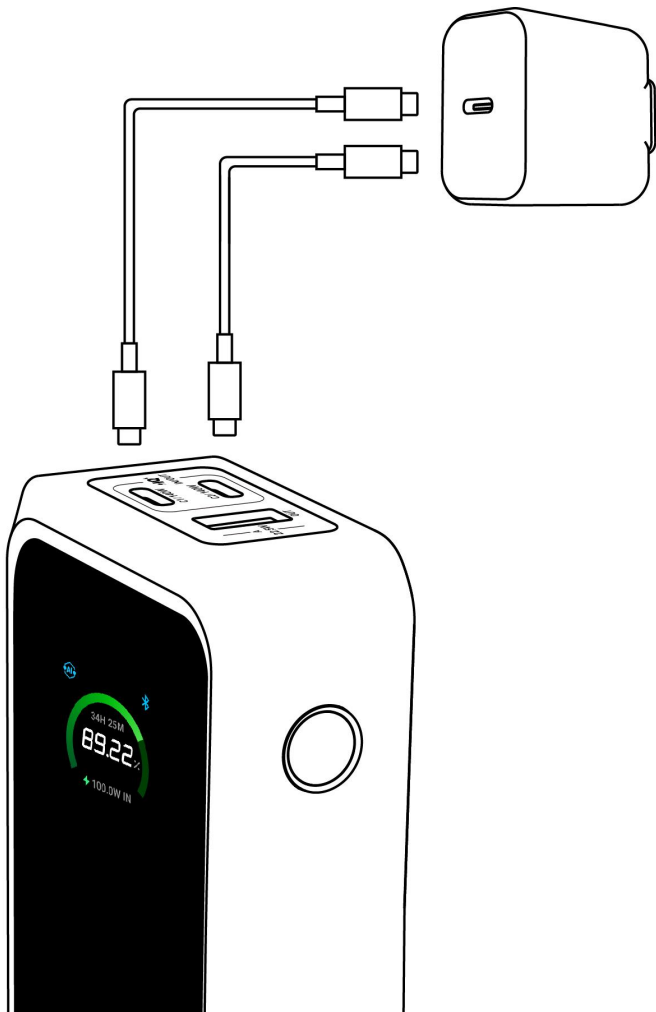

USB-C port input notice



150W input notice for Anker protocol
(See the end of this user guide for compatible devices)




Dual-port input notice




Charging base input notice


Recharge the power bank via the Anker Prime charging base: align the bottom of the power bank with the Pogo Pin (charging connector), and place the power bank vertically on the charging base.

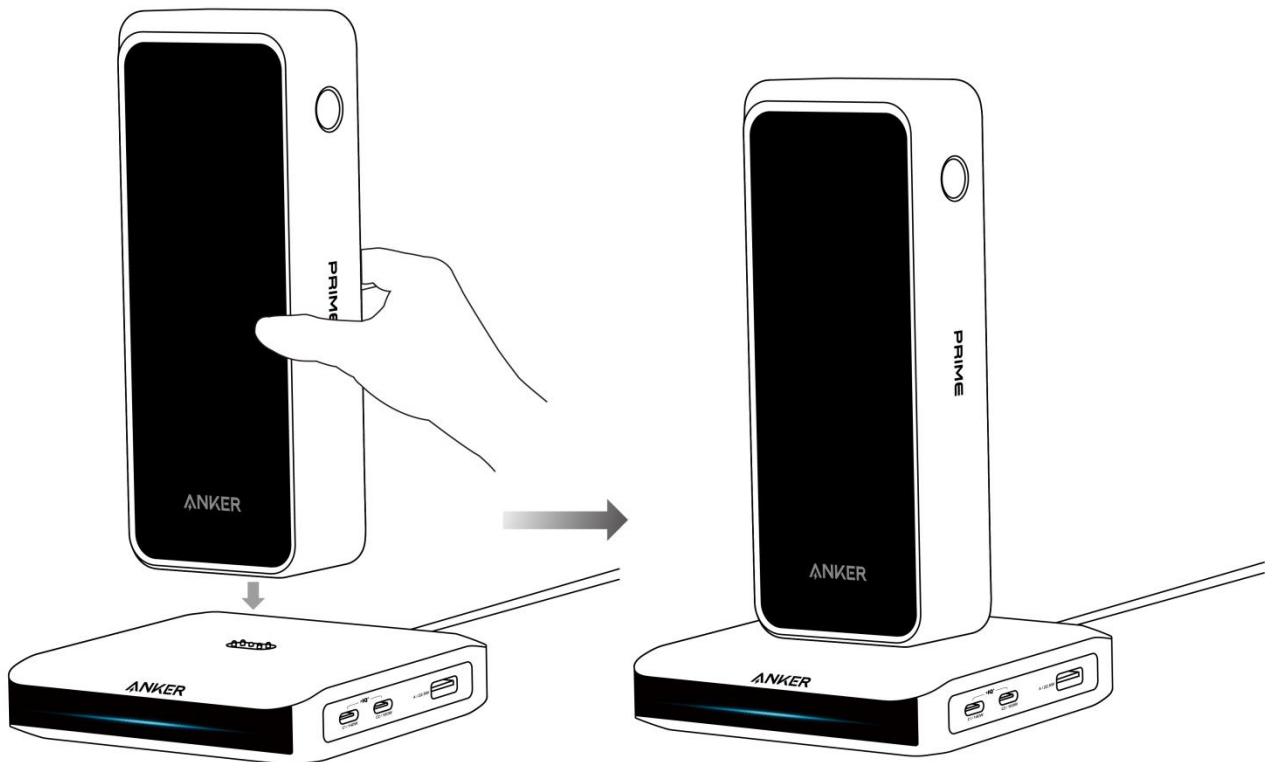

To pick up the power bank, tilt it back slightly and lift it up.

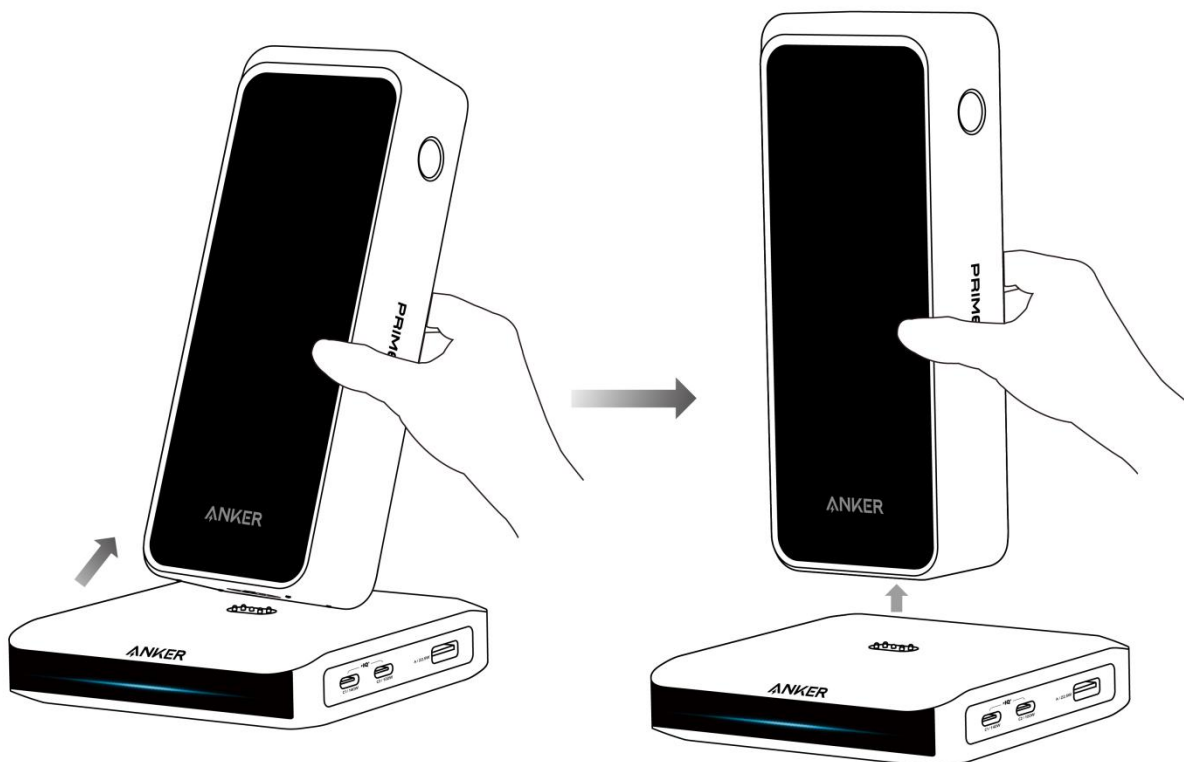

Simultaneous Charging and Recharging

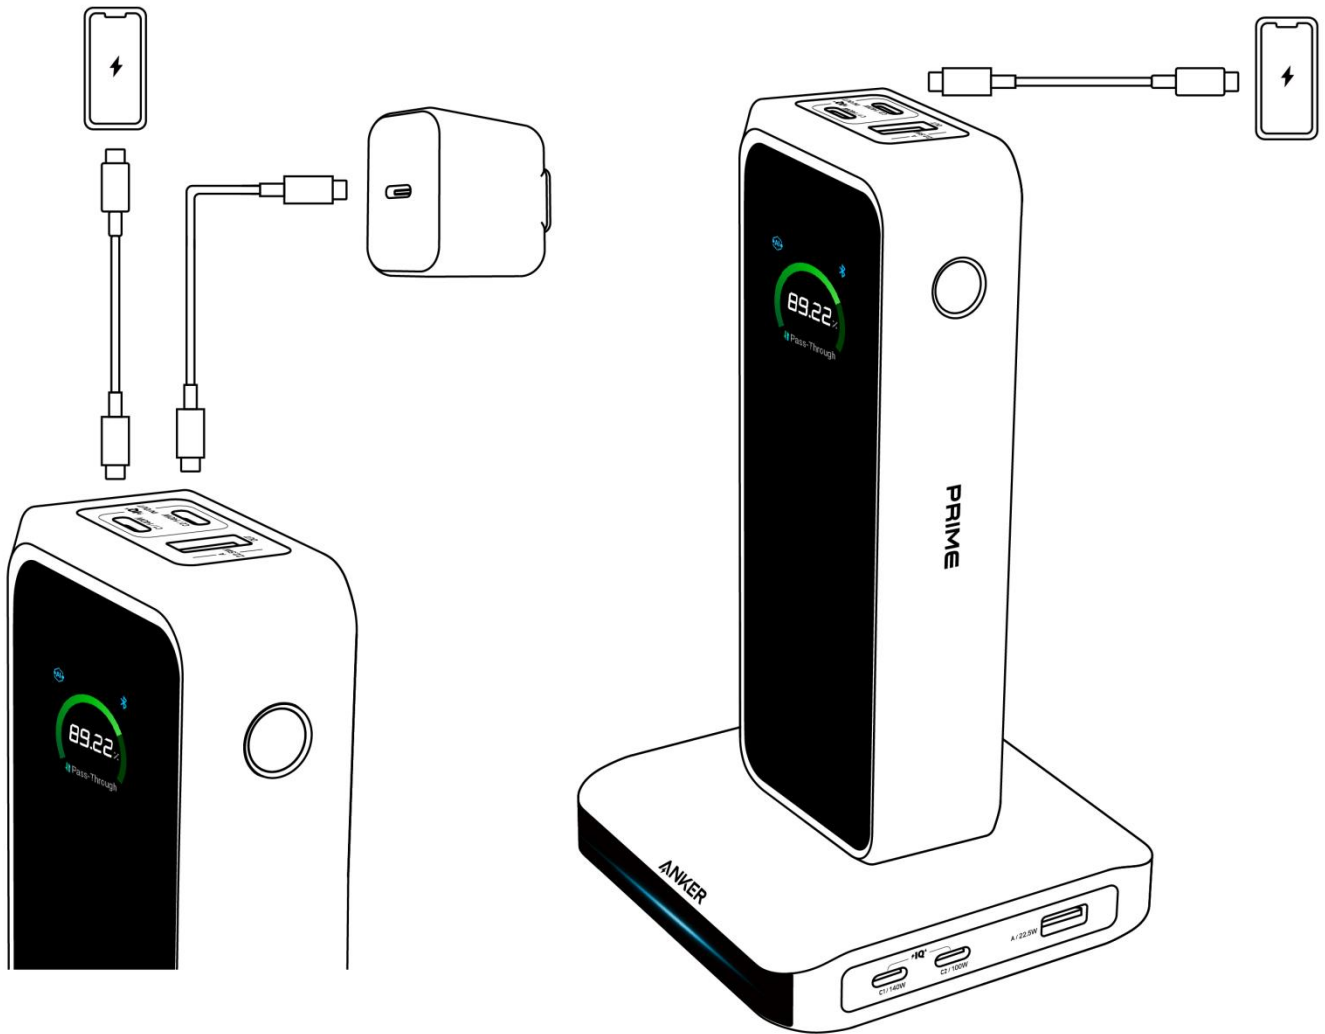

Note: The power bank cannot charge other devices while being recharged by Anker 100W Charging Base - model A1902. This function is only compatible with Anker Prime Charging Base (150W, 3 Ports) - model A1903.


In-App Combination of Charging Base and Power Banks

1. If you have purchased Anker Prime Charging Base (150W, 3 Ports) - model A1903, you can bind it with Anker Prime power banks in the Anker App. Before the combination, make sure that the charging base is connected to the Anker App properly.


For the User Guide of A1903, please click: <https://support.anker.com/s/article/manual?pn=A1903>

2. Device binding and group management:



- Place the power bank vertically on the charging base, and the power bank Bluetooth will be automatically turned on. Then you will receive a combination notice in the App.

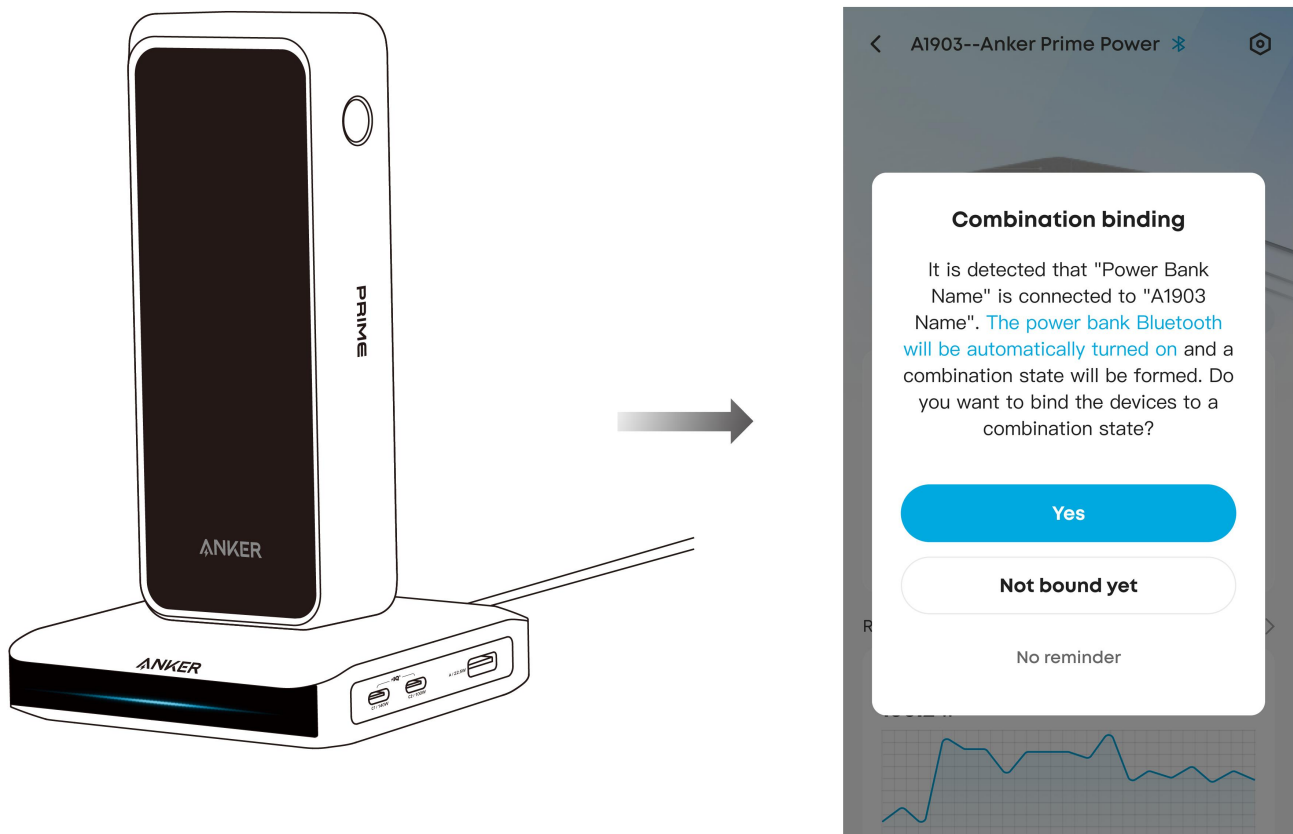

- If the power bank has already been added to your App account, you can also click on the "Settings" icon in the upper right corner of the product page of the charging base, and click on "Device Group Management" to bind the power bank.

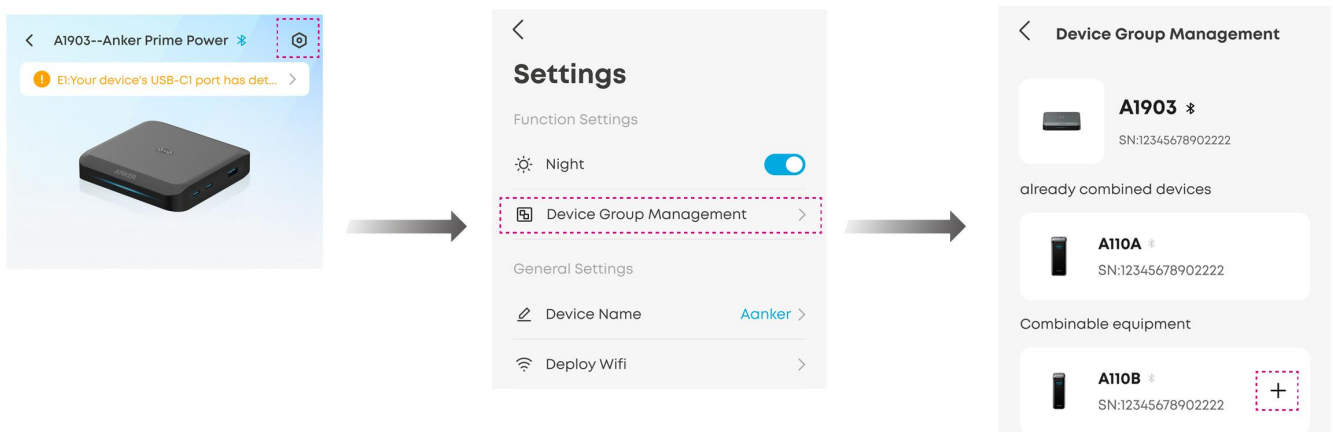


- After binding the power bank with the charging base, you can check the real-time data of the bound products.
- A combination group can include one charging base and multiple power banks. You can remove any product from the group.

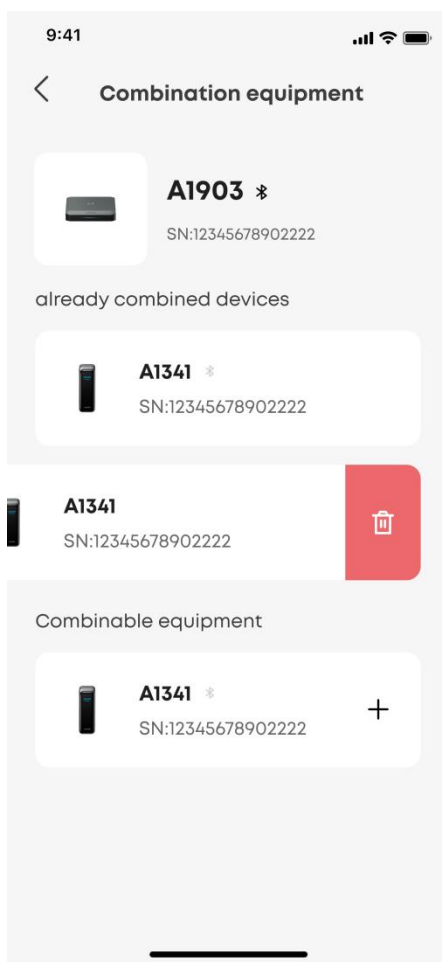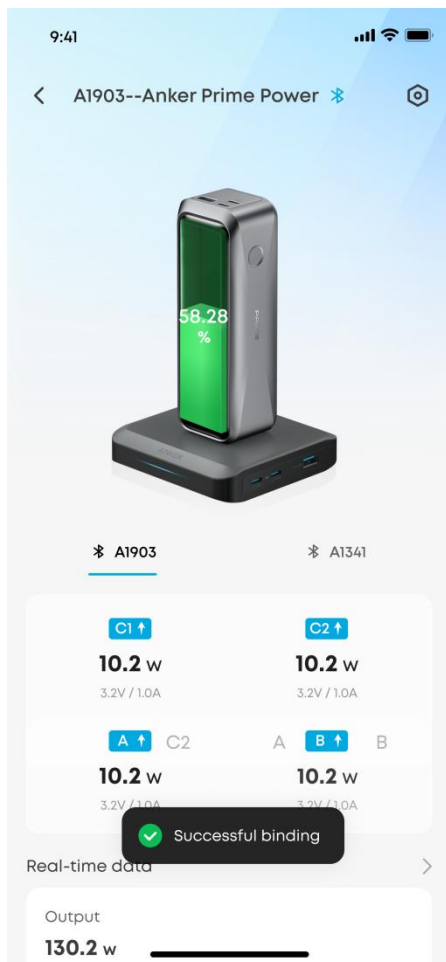

3. Wi-Fi connection: After pairing the charging base with your phone via Bluetooth, you can click on the "Settings" icon in the upper right corner of the product page, and click on "Deploy Wifi". Then pick a network from the list and enter the password.

Note: The charging base supports only 2.4 GHz Wi-Fi networks. 5GHz networks are not supported.

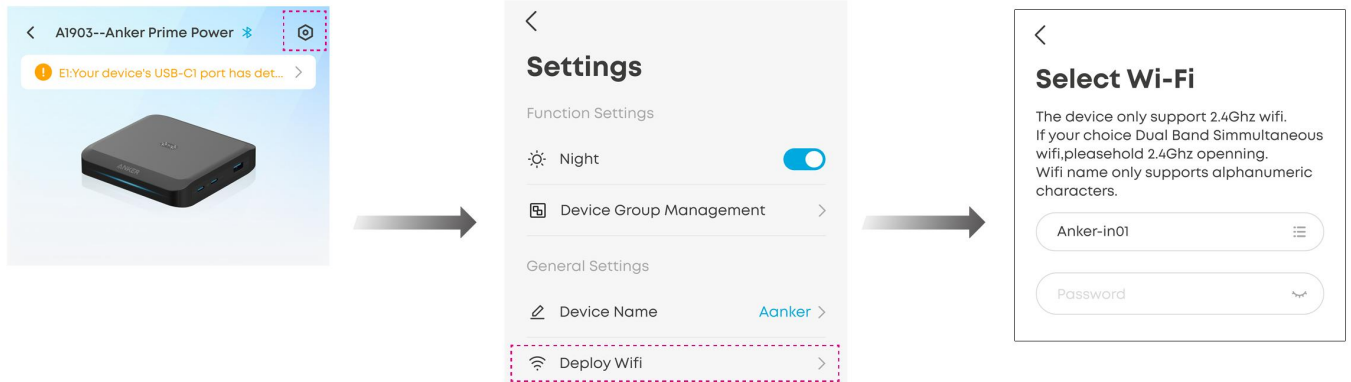

Wi-Fi connection allows you to:


- Check product information remotely (charging base + bound power banks)
- Perform automatic software or firmware upgrades during the night (charging base + bound power banks)
- Set the latest version of screensavers (bound power banks)

Trickle Charging Mode


When you charge low-power devices such as earbuds or handheld fans via the USB-A port, activate trickle charging mode. This function, available on certain Anker power banks, provides a steady, low current to prevent the power bank from shutting off.

1. Press the power button twice to activate trickle charging mode.


Note: Trickle charging mode can only be activated or deactivated on the main screen.

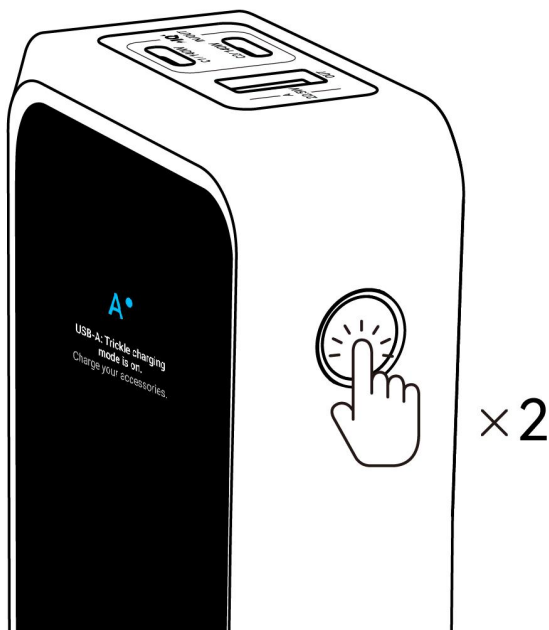

2. Charge your earbuds or other low-power devices via the USB-A port.

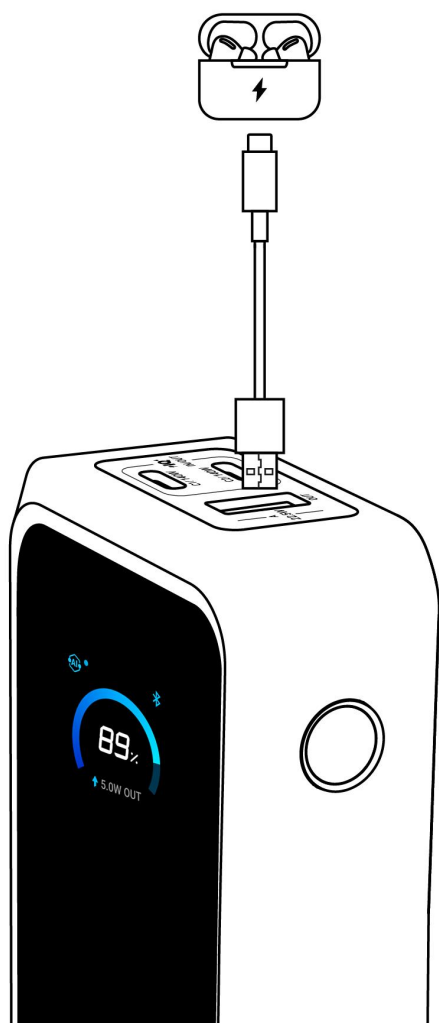


3. Press the power button twice to deactivate trickle charging mode. Trickle charging mode automatically turns off after 2 hours if the USB-A port is not in use.

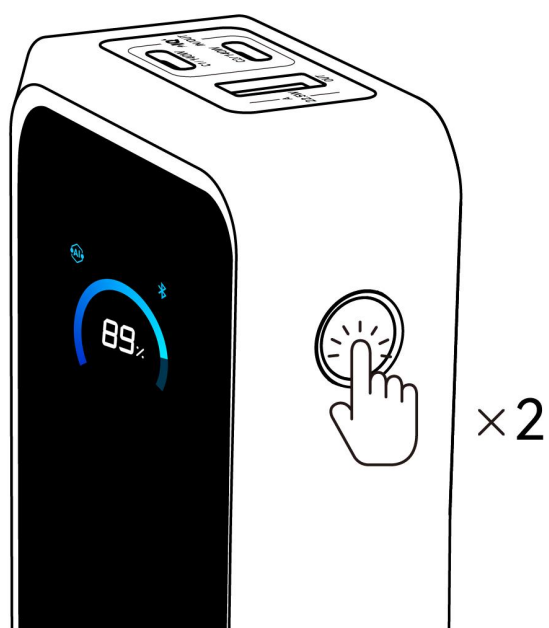

Other Screen Displays

Low Battery Alert

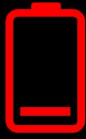

**Battery low (under 5%).
Please recharge.**

Non-Recharging Mode: Activates when the battery temperature is relatively high or low, suspending the recharging function of the power bank until the temperature normalizes.



**Recharge after power
bank warms up.**



**Recharge after power
bank cools down.**

Temperature Protection Mode: Activates when the battery temperature is too high or too low, suspending the operation of the power bank until the temperature normalizes.




**Please wait for power
bank to warm up.**



**Please wait for power
bank to cool down.**

Circuit Protection: Displayed when a current or voltage abnormality triggers the circuit protection. When you see this notice, try unplugging and reconnecting the device.

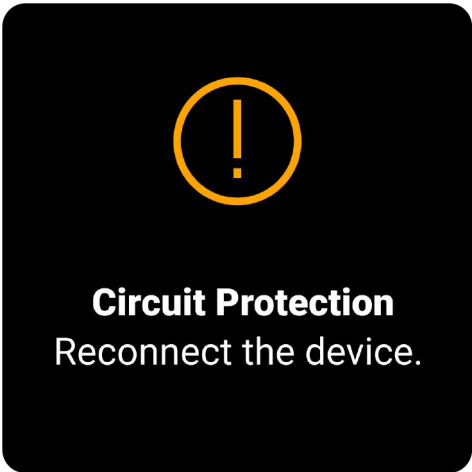

Specifications

Total Cell Capacity		26,250mAh
Battery Energy		99.75Wh / 19VDC (5,250mAh, 5 Cells in Series)
Input	Pogo Pin	15~22.1V== 10A (150W Max)
	USB-C1 / C2	5V== 3A / 9V== 3A / 12V == 3A / 15V== 3A / 20V== 5A / 28V== 5A (140W Max)
	USB-C1 / C2	28V== 5.36A (150W Max) (Anker Protocol)
Output	USB-C1 / C2	5V== 3A / 9V== 3A / 12V == 3A / 15V== 3A / 20V== 5A / 28V== 5A (140W Max)
	USB-A	5V== 3A / 9V== 2A / 10V== 2.25A / 12V== 1.5A (22.5W Max)
	Total Output	300W Max

Note: 150W Max recharging using one port can only be achieved under AI mode with these devices:

Charger	Cables
Anker Prime Charger (160W, 3 Ports, Smart Display) - model A2687	- Anker Prime USB-C to USB-C Cable (240W, Upcycled-Braided) - model A88E2 - Anker USB-C to USB-C Cable (3 ft / 6 ft, 240W, Upcycled-Braided) - model A82E2 - Anker Prime Thunderbolt 5 Cable (3.3 ft, 80Gbps, 240W) - model A84N1 - The cable in the A110A bundle

The USB-C1/USB-C2 output port of this product is only intended to be charged for 2021 Apple MacBook Pro (16") by USB-C1/USB-C2 output port to MagSafe 3 cable. Only connect your charger to 2021 Apple MacBook Pro (16") and cable to achieve max power (28VDC/5A) through USB-C1/USB-C2 output port.

Note: When using this product, please place it in the orientation where the base provides power supply.