


A1903

At a Glance

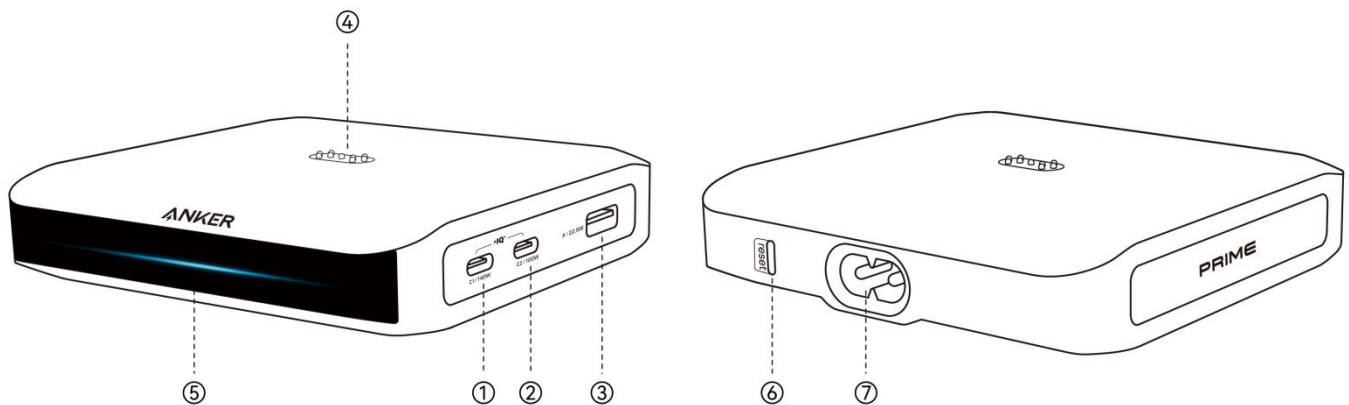


- ① USB-C1 Port
- ② USB-C2 Port
- ③ USB-A Port
- ④ Pogo Pin (charging connector)
- ⑤ LED Indicator
- ⑥ Reset Button
- ⑦ AC Input Port



Recharging the Power Bank

1. Connect the AC power plug to a power outlet. The LED indicator will light up from the center, flash once, and then remain solid blue.

Note: Press the reset button twice to turn off/on the light manually. You can also turn off/on the light in the Anker App after pairing the charging base with your phone via Bluetooth or Wi-Fi.

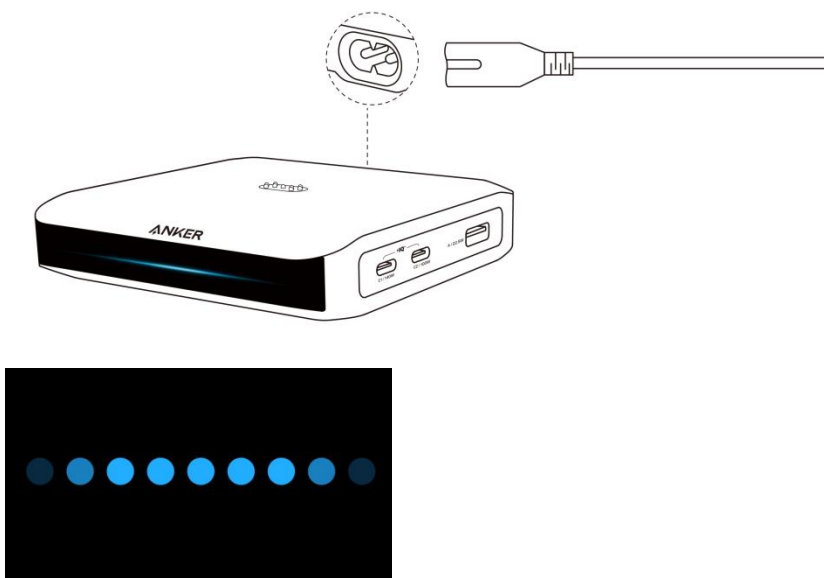


2. Align the bottom of the Anker Prime power bank with the Pogo Pin (charging connector), and place the power bank vertically on the charging base. The LED light will converge from both sides towards the center.

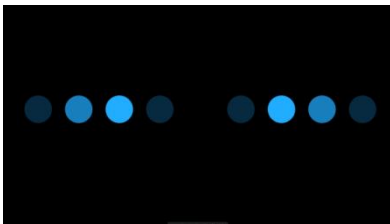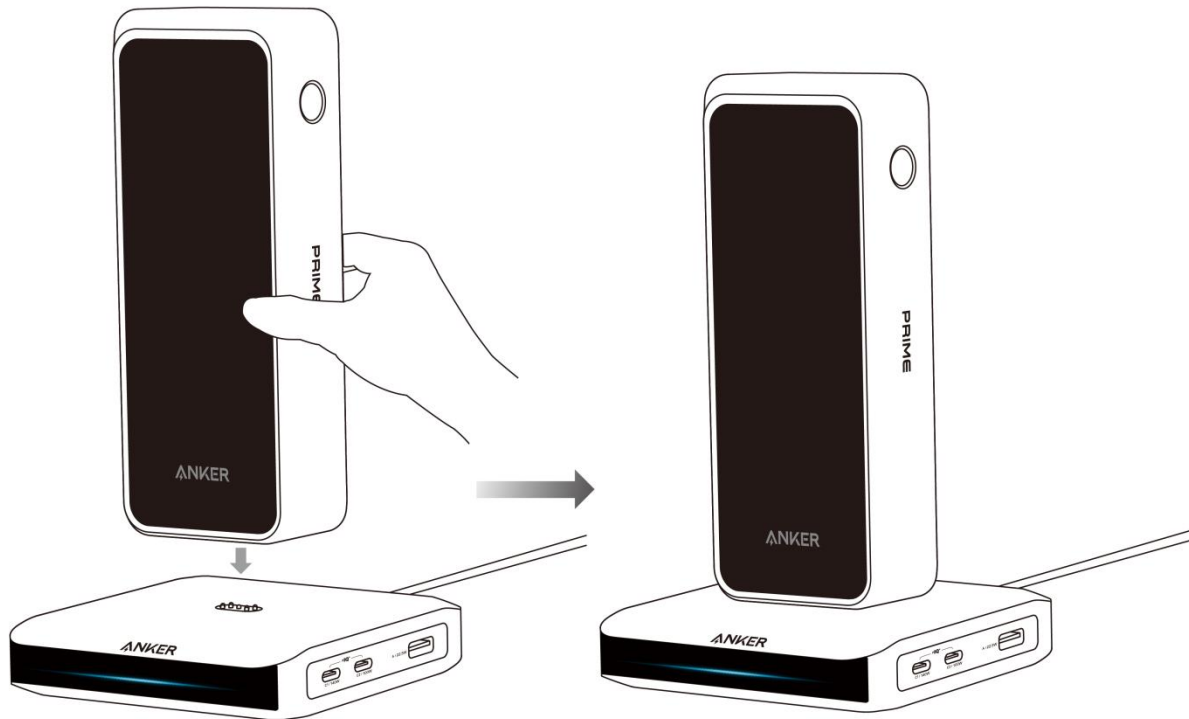

Pogo Pin charging is compatible with:



- Anker Prime 12,000mAh Power Bank (130W) - model A1335
- Anker Prime 20,000mAh Power Bank (200W) - model A1336
- Anker Prime 27,650mAh Power Bank (250W) - model A1340
- Anker Prime Power Bank (50K, 300W, Built-In Retractable USB-C Cable) - model A1341
- Anker Prime Power Bank (26K, 300W) - model A110A
- Anker Prime Power Bank (20K, 220W) - model A110B

3. To pick up the power bank, tilt it back slightly and lift it up.

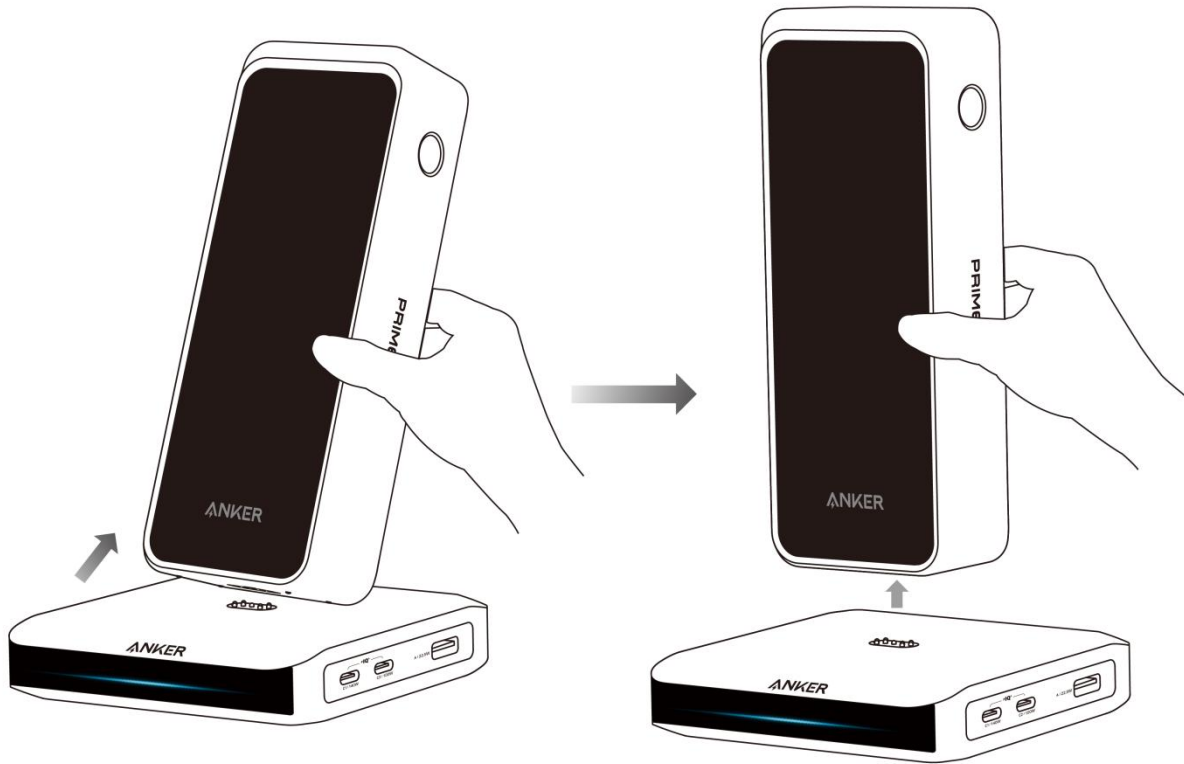

Charging Your Devices

You can also use the USB ports to charge your devices. The LED light will flash twice when a new device is connected.

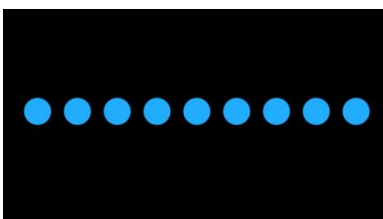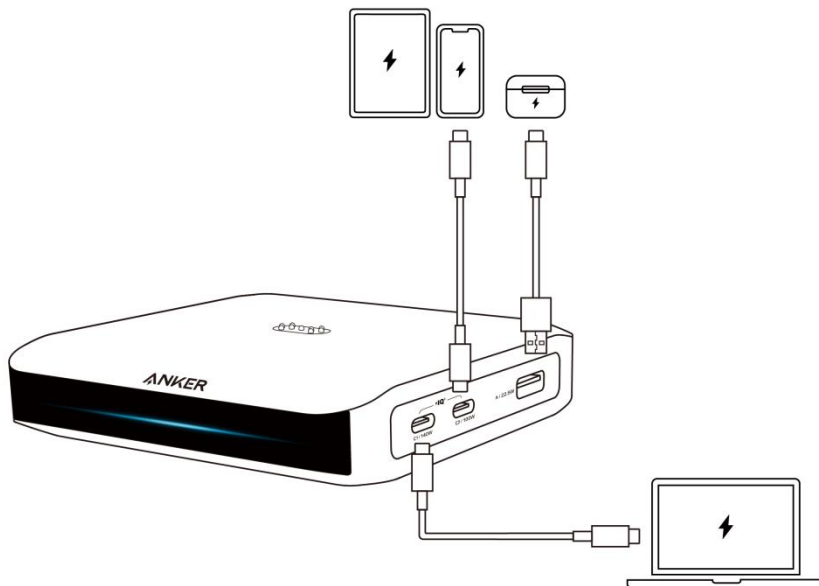


Bluetooth and Wi-Fi Connection

1. Before connection, please make sure to:

- Connect the AC power plug to a power outlet (Bluetooth is automatically turned on when the product is powered on)
- Maintain a strong Wi-Fi signal and put the product close to the router
- Download the Anker App at <https://www.anker.com/app-download>




2. Turn on Bluetooth on your phone, and tap the "+" icon in the upper right corner or select "Add Devices" at the bottom of the Devices page. Follow the in-app instructions to complete the connection setup.

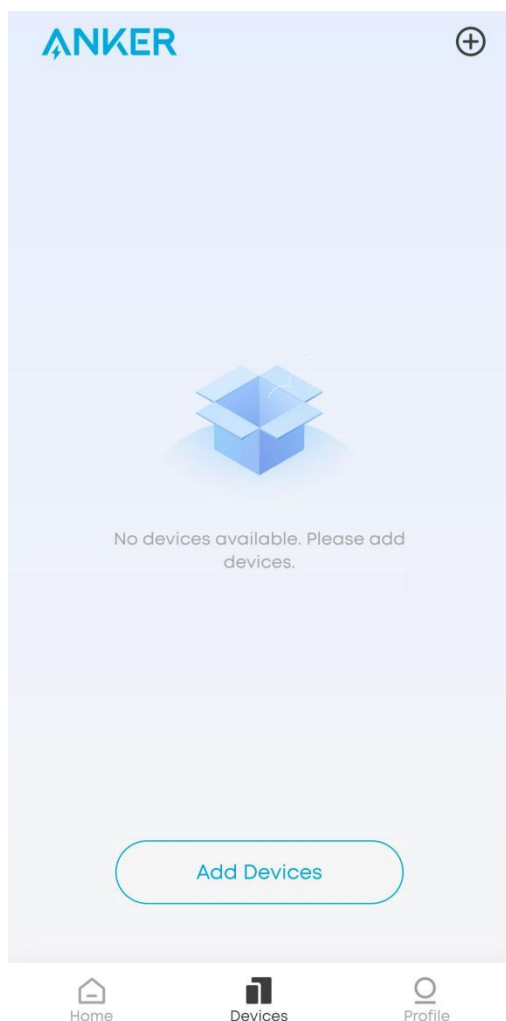

3. After a successful connection, you can check the real-time data of the product and make detailed settings in the App.

If connection fails, please check if:


- Bluetooth is enabled on your phone
- The Wi-Fi name and password are correct
- The network is 2.4GHz and functions normally

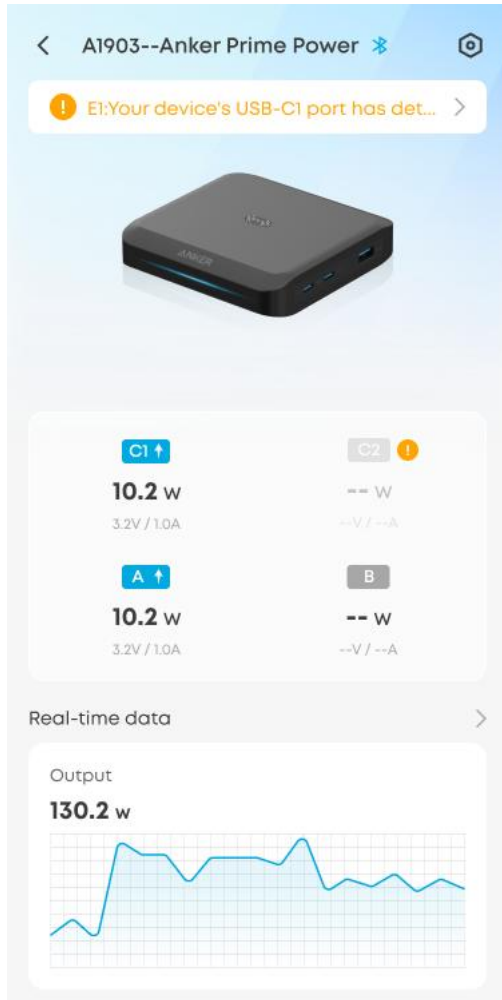


4. In-App combination of the charging base and power banks:

Before the combination, make sure that the charging base is connected to the Anker App properly.



- Place the power bank vertically on the charging base, and the power bank Bluetooth will be automatically turned on. Then you will receive a combination notice in the App.

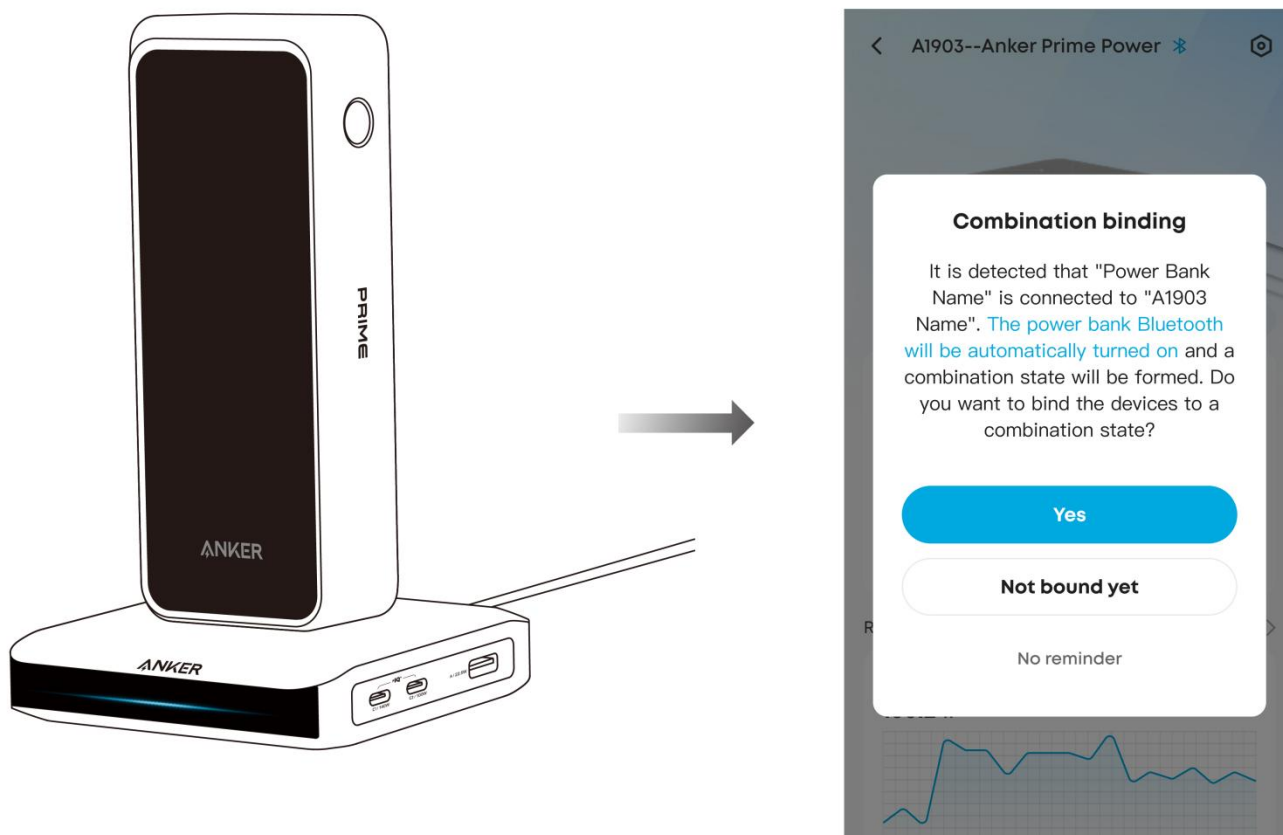

- If the power bank has already been added to your App account, you can also click on the "Settings" icon in the upper right corner of the product page of the charging base, and click on "Device Group Management" to bind the power bank.

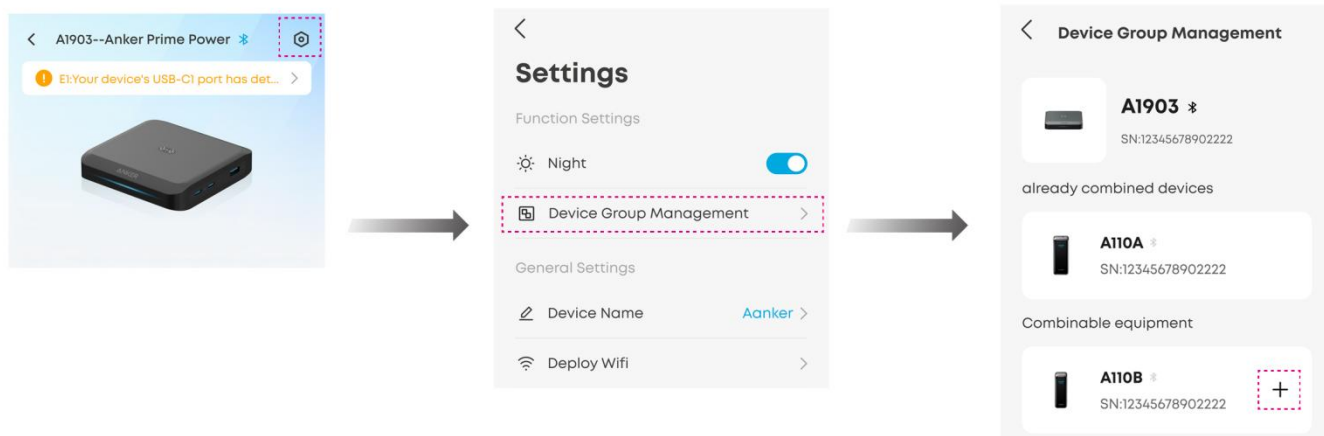


- After binding the power bank with the charging base, you can check the real-time data of the bound products.
- A combination group can include one charging base and multiple power banks. You can remove any product from the group.

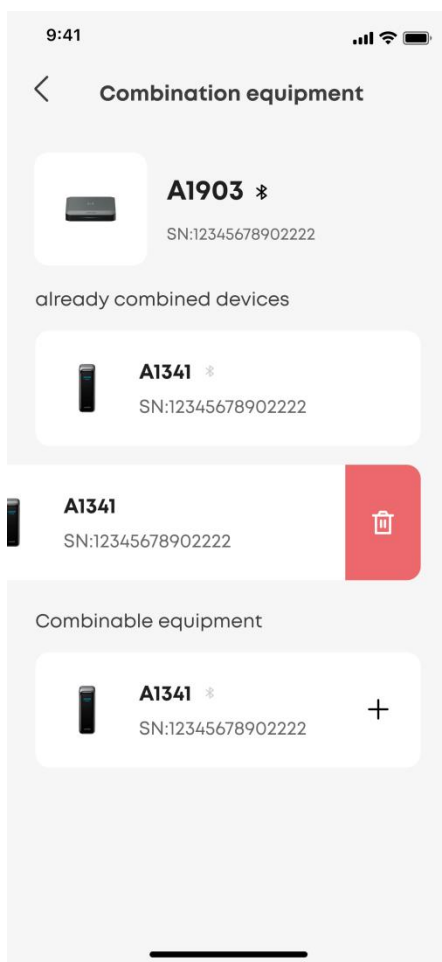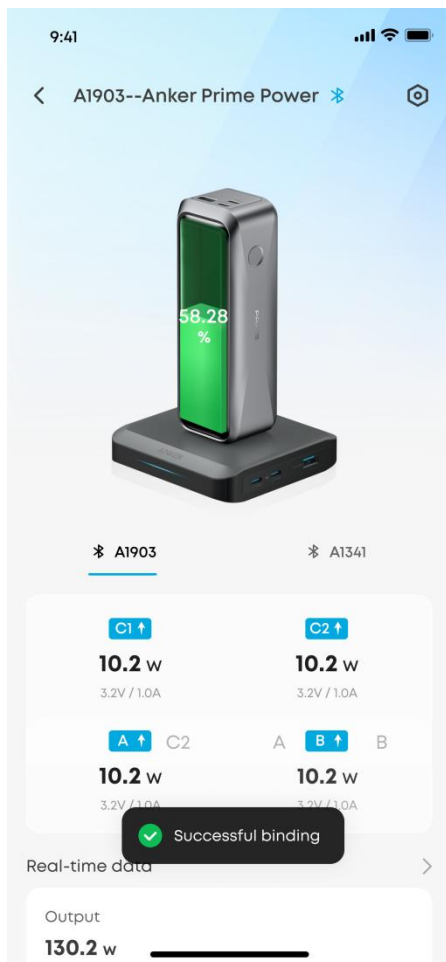

5. Wi-Fi connection: After pairing the charging base with your phone via Bluetooth, you can click on the "Settings" icon in the upper right corner of the product page, and click on "Deploy Wifi". Then pick a network from the list and enter the password.



Note: The charging base supports only 2.4 GHz Wi-Fi networks. 5GHz networks are not supported.

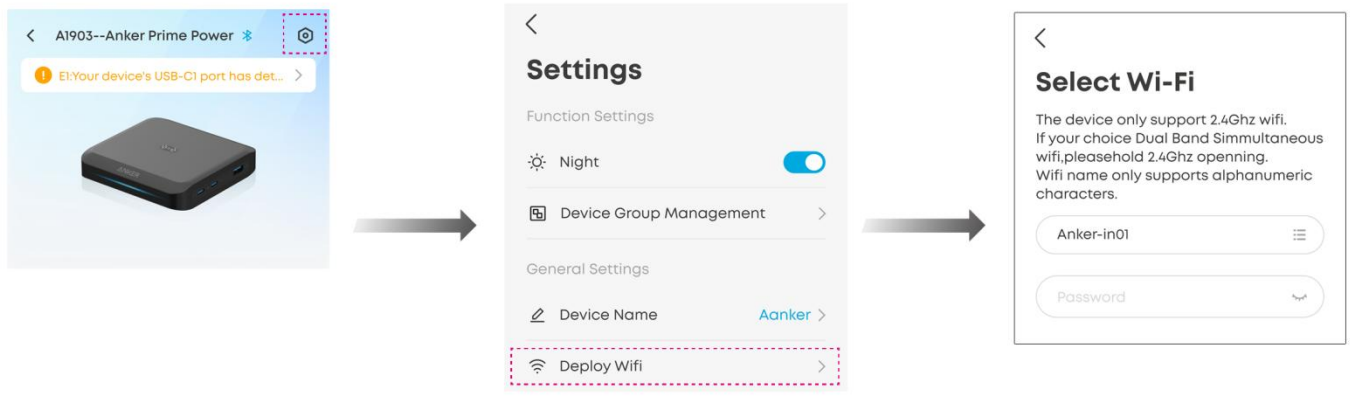

Wi-Fi connection allows you to:

- Check product information remotely (charging base + bound power banks)
- Perform automatic software or firmware upgrades during the night (charging base + bound power banks)
- Set the latest version of screensavers (bound power banks)

6. When you receive software or firmware update notifications, please update in time for better experience. The LED light will flash from left to right during the update process. Do not unplug the product until the update is complete.

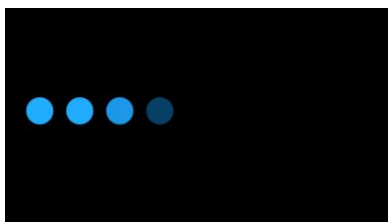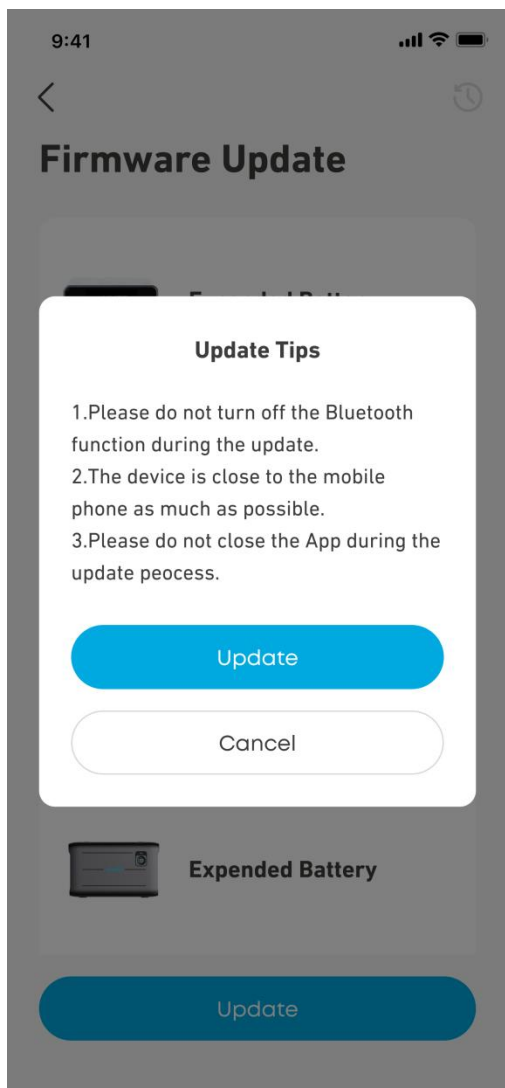

7. If Bluetooth or Wi-Fi connection is disrupted, press and hold the reset button for three seconds to activate the connecting function manually. The LED light will flash slowly until the product is reconnected.

Specifications

Input		100-240V~2.5A 50-60Hz
Output	USB-C1	5.0V≡ 3.0A, 15.0W / 9.0V≡ 3.0A, 27.0W / 15.0V≡ 3.0A, 45.0W / 20.0V≡ 5.0A, 100.0W / 28.0≡ 5.0A, 140.0W (140.0W Max)
	USB-C2	5.0V≡ 3.0A, 15.0W / 9.0V≡ 3.0A, 27.0W / 15.0V≡ 3.0A, 45.0W / 20.0V≡ 5.0A, 100.0W (100.0W Max)
	USB-A	5.0V≡ 3.0A, 15.0W / 9.0V≡ 2.0A, 18.0W / 10V≡ 2.25A, 22.5W / 12.0V≡ 1.5A, 18.0W (22.5W Max)
	Pogo Pin	15.0~22.25V≡ 10A (150.0W Max)
	Total Output	150.0W Max

Note: Connect this product's USB-C1 port to a 16" MacBook Pro using a USB-C to MagSafe 3 cable to achieve a max power output of 28V ≡ 5A.