 


Charging Your Devices


You can charge multiple devcies via the three USB-C ports simultaneously.

Connect the charger's USB-C1 port to a 16" MacBook Pro using a USB-C to MagSafe 3 cable to achieve a max power output of 160W. Similarly, USB-C2 or USB-C3 can each provide a max power output of 160W when using the same cable.

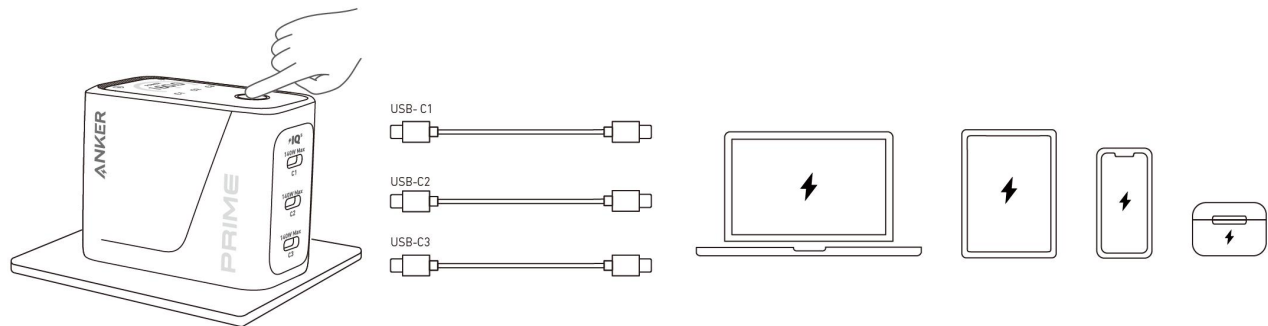

Screen Display Guide

To turn off the screen, press and hold the button for two seconds.

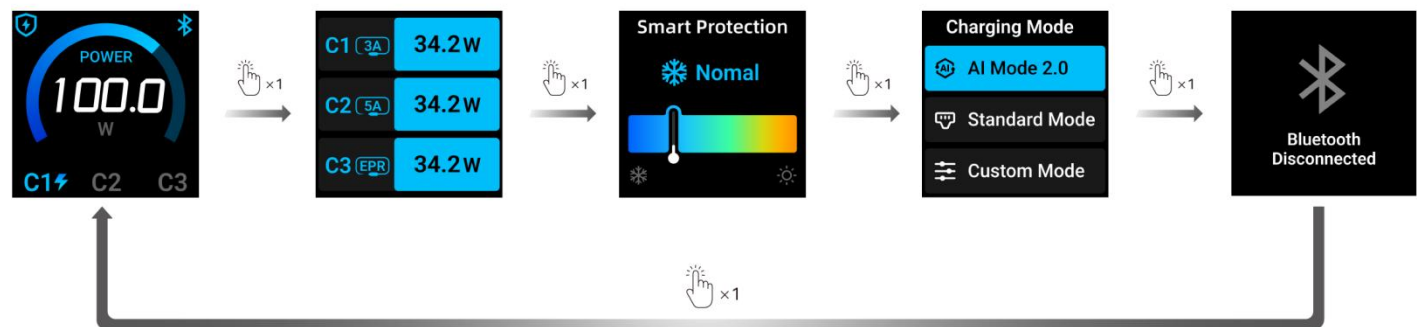

Startup Screen

The screen automatically adjusts its orientation based on the center of gravity. Press the button twice on the startup screen to rotate the orientation manually. You can also change screen rotation in the Anker App after paring the charger with your phone via Bluetooth.



	High temperatures will reduce charging speed and restrict power, which happens to all chargers. *ActiveShield™ technology enhances protection by intelligently monitoring temperature and adjusting power output to safeguard your connected devices.
	The Bluetooth icon changes in different situations. A: Bluetooth is connected B: Bluetooth is not connected C: Bluetooth is not turned on

Power Distributions


When connecting your devices to the charger, the power distributions to each port and the type of cable connected are displayed.

- 3A cable: supports 60W Max
- 5A cable: supports 100W Max
- EPR (Extended Power Range) cable: supports 240W Max




Temperature Smart Protection

The charger monitors its internal temperature to ensure safety. When the temperature is too high, the charger will reduce the power output appropriately until the temperature normalizes.

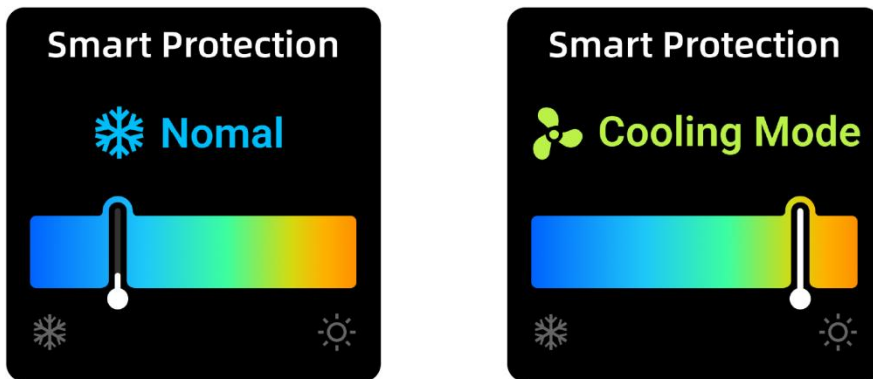

Bluetooth Connection


1. Press the button twice to turn on/off the Bluetooth function of the charger. Before connecting, ensure that Bluetooth is turned on and that the charger is no more than 33 ft (10 m) away from your phone.

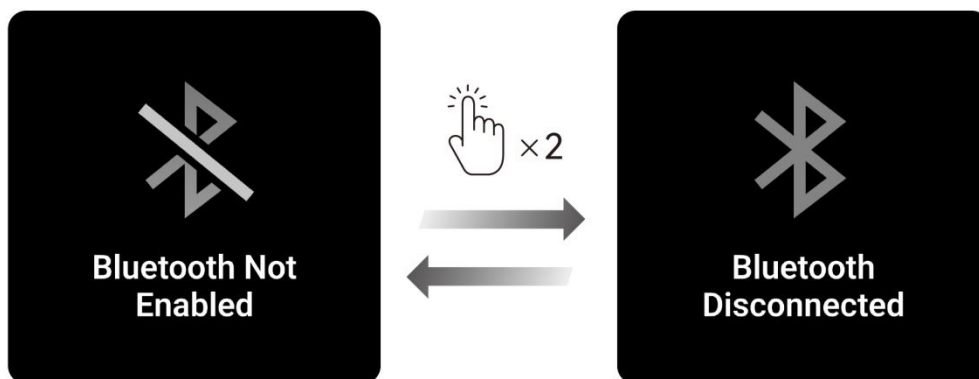

2. Download the Anker App at <https://www.anker.com/app-download>




3. Turn on Bluetooth on your phone, and tap the "+" icon in the upper right corner or select "Add Devices" at the bottom of the Devices page. Follow the in-app instructions to complete the connection setup.

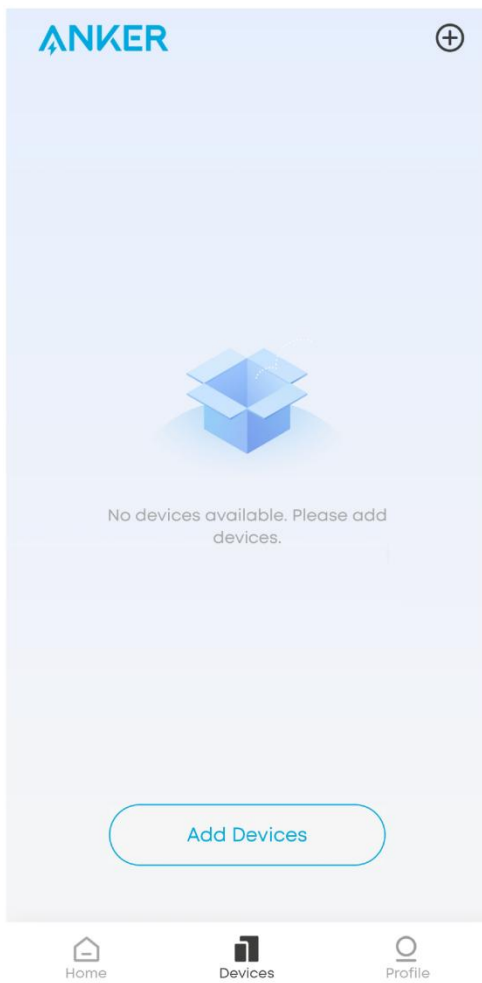


4. After successful connection, you can check the real-time data of the charger and make detailed settings in the App.

If connection fails, please check if:

- the charger is turned on and working normally
- the charger's Bluetooth is on
- the charger is close to your phone

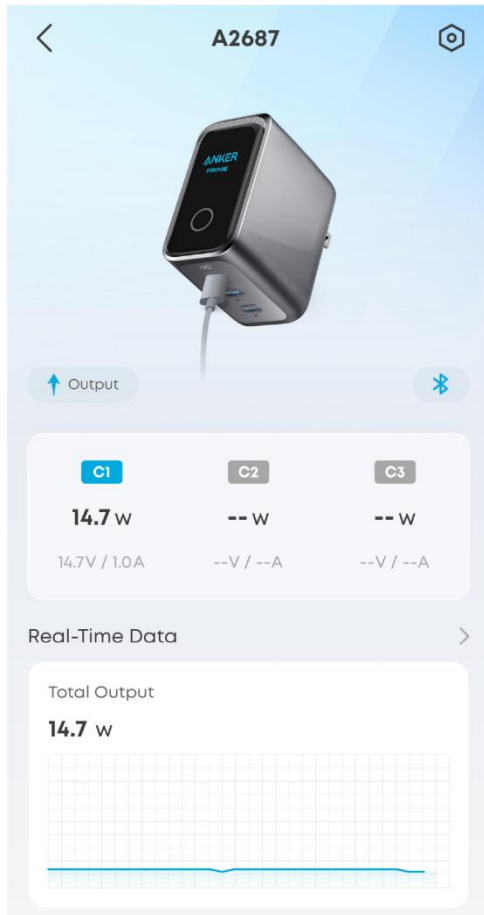

5. When you receive a software or firmware update notification, please update in time for better experience. Do not unplug the charger until the update is complete.

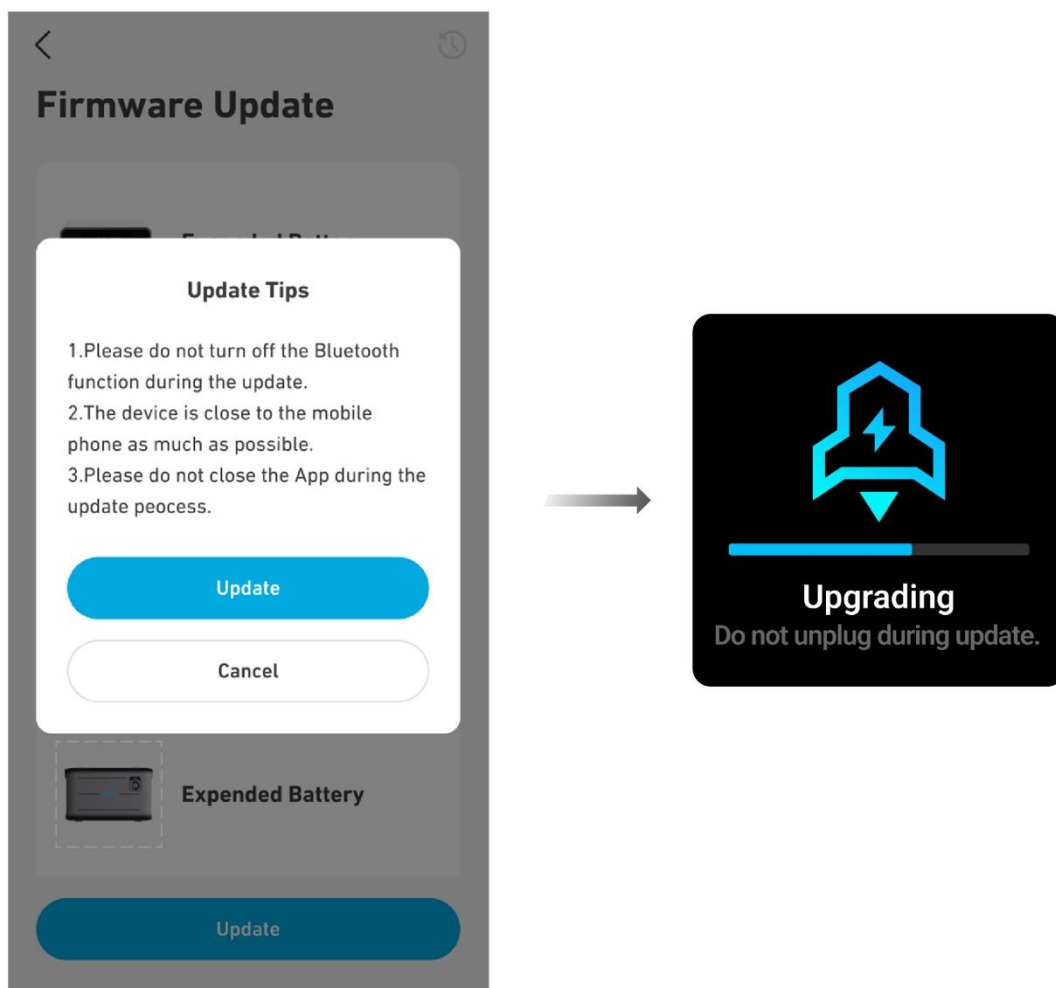


6. To reset the Bluetooth connection, press and hold the button for seven seconds. Then you can repeat the steps above to connect the charger to a new phone or new App account.




Charging Mode Settings


1. Press the button twice, and the blue part will start to blink.
2. Press once to switch between different charging modes, and press twice to confirm the mode you want.
3. On the next page, press the button once to switch between "Yes" and "No", and press twice to confirm your choice.

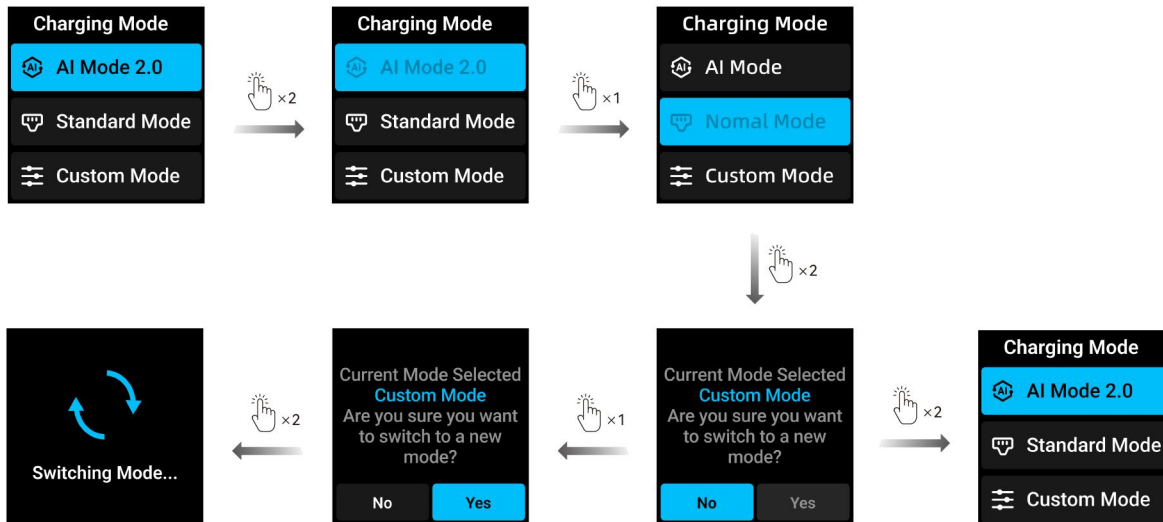


After pairing the charger with your phone via Bluetooth, you can click on the "Settings" icon in the upper right corner of the product page, and click on "Charging Mode" to select detailed power distribution plans.

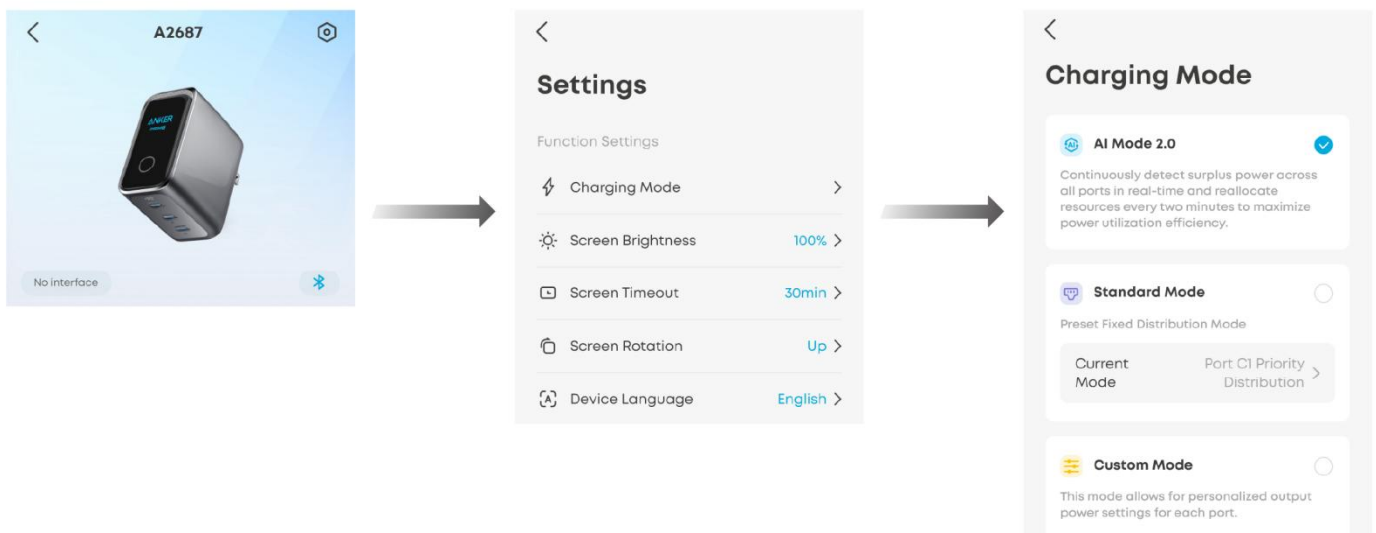

- **AI mode:** The charger continuously detects surplus power and redistributes power every two minutes to maximize charging efficiency.
- **Standard Mode:** You can select between two sub-modes in the App:
 - Port C1 Priority Mode: the charger distributes most power to the device connected to the C1 port.

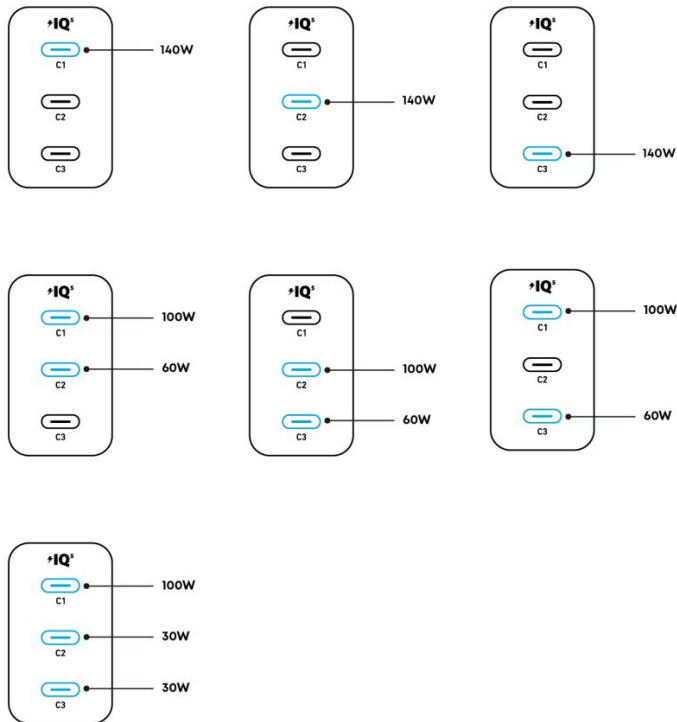

- Dual-Laptop Mode: when connected to two laptops, the charger distributes most power equally to the laptops.

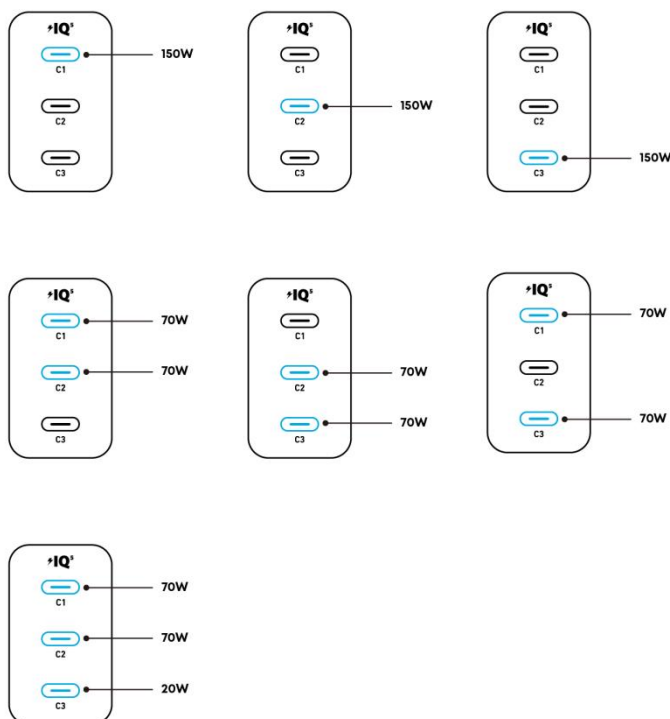


- **Custom Mode:** You can customize power distribution plans according to your preferences in the App.

Note: When linked to a new App account (including Tourist account), the charger will be set to AI mode automatically.

Resetting

- 1. To reset the charger, press the button six times in three seconds on any page.
- 2. Press the button once to switch between "Yes" and "No", and press once to confirm your choice. Do not unplug the charger until the resetting is complete.

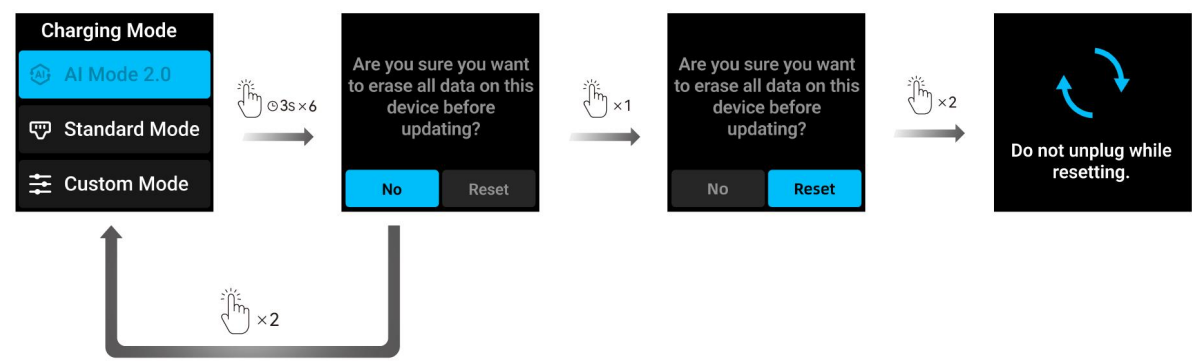

Specifications

Output	One Port in Use	USB-C1 / C2 / C3: 5.0V≡ 3.0A, 15.0W / 9.0V≡ 3.0A, 27.0W / 15.0V≡ 3.0A, 45.0W / 20.0V≡ 5.0A, 100.0W / 28.0V≡ 5.0A, 140.0W (140.0W Max)
	Two Ports in Use	160.0W Max
	Three Ports in Use	160.0W Max
	Total Output	160.0W Max

This product is designed to supply power for information and communication technology equipment with brand: Apple, Samsung, Huawei, Xiaomi, Oppo, Vivo, HP, Lenovo, Dell, HONOR, Redmi, Realme, Oneplus, Meizu, iqoo, NOKIA, duoqin, AGM, KTouch, SONY.