 
 


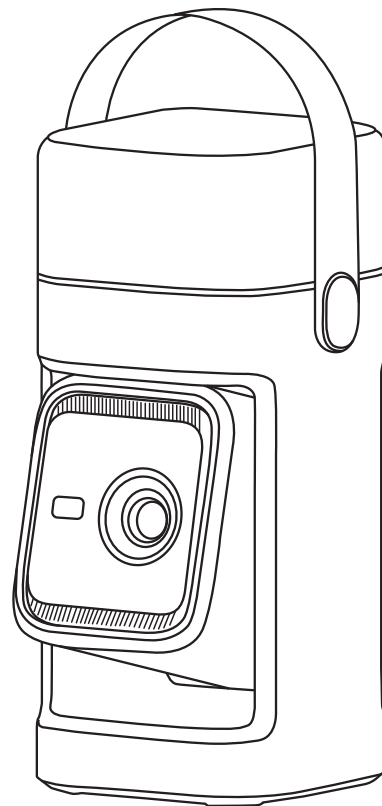


料号 VI

Nebula P1
Quick Start Guide


At a Glance

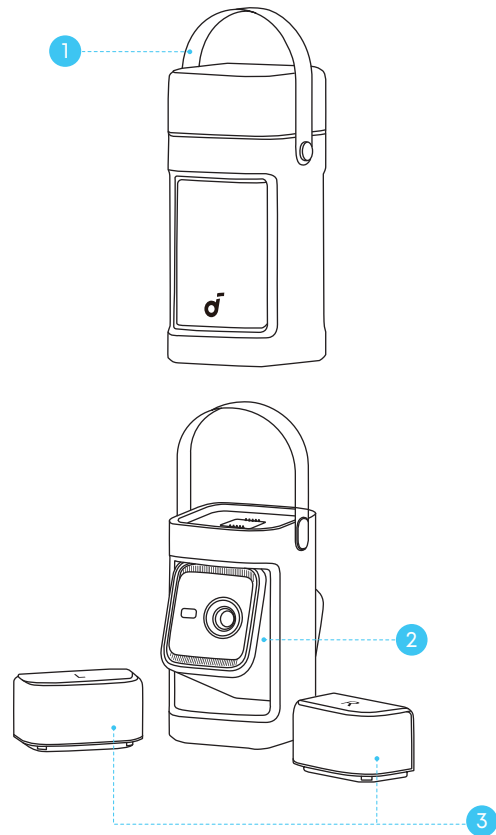

 
1. Front View

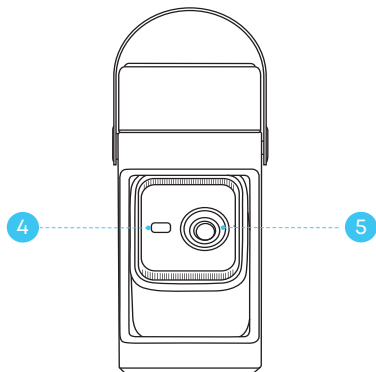

 
2. Rear View

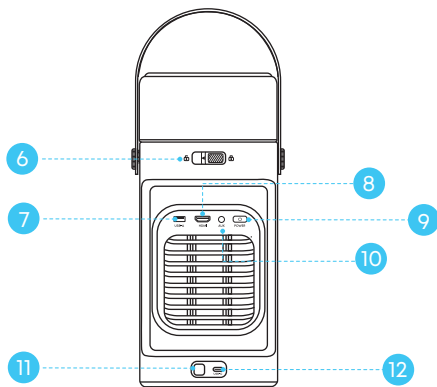

 3. Bottom View

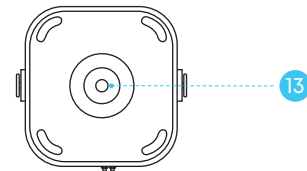

 4. Detachable Satellite Speakers

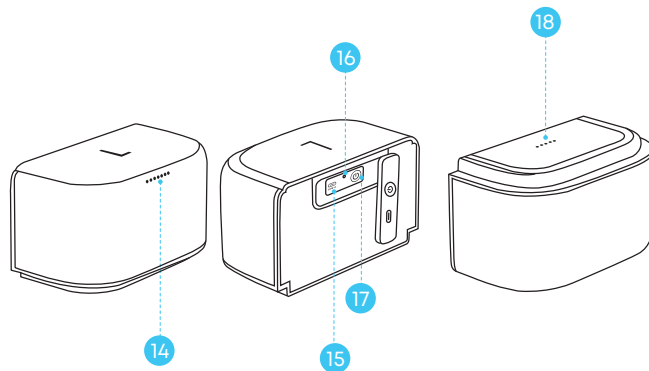


- 1 Handle
- 2 Projector
- 3 Detachable Satellite Speakers
- 4 ToF (Time of Flight) Sensor
- 5 Lens
- 6 Speaker Unlock Switch
 - Slide left and detach both speakers.
- 7 USB-A Port
 - Connect to a USB storage device, such as a flash drive or hard drive.

- 8 HDMI Port
 - Connect to a playback device with HDMI output.
- 9 Power Button
 - Press and hold to power on the projector.
 - See the Power On/Off section for more information.
- 10 Aux
 - Connect to headphones or an external speaker.
- 11 Infrared Sensor
- 12 USB-C port
 - Connect the projector to a power outlet with the provided adapter.
 - Connect to a power outlet with the provided adapter.
- 13 1/4" Tripod Socket
 - The 1/4" Tripod Socket can be used to connect a tripod, stand, ceiling mount, etc.
- 14 Indicator Light
- 15 USB-C Port
 - Connect the USB-C cable to charge the speakers.
- 16 Reset
 - Insert a paperclip (not included) and hold for 2 seconds to reset the projector.
- 17 Power Button
 - Press once to power the speaker on or off.
- 18 Charging Contacts
 - The speakers automatically start charging when the projector is connected to a power source, and the speakers are attached on top.

Remote Control

 1. Overview

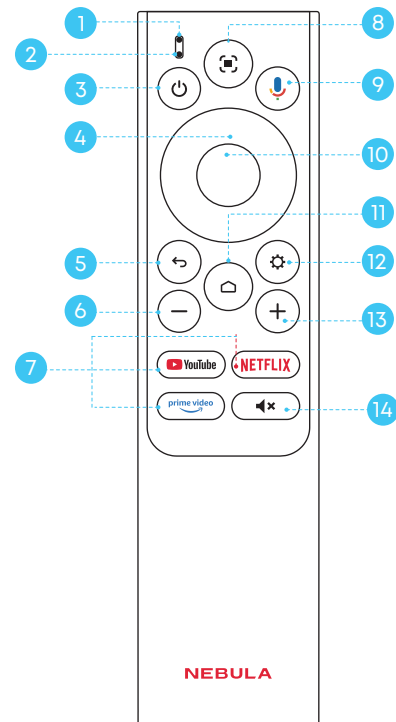

- 1 Status Indicator
- 2 Microphone
- 3 Power
 - Press to power on / off, switch to standby mode, or wake up.
- 4 Navigation
 - Control the cursor on the screen.
- 5 Return
 - Return to previous page.

- 6 Volume Down
 - Press to reduce volume.
- 7 Streaming Apps
 - Press to open YouTube, Netflix, or Prime Video.
- 8 Auto Image Adjustment
 - Press to enable auto image adjustment.
 - Long press to perform manual adjustment.
- 9 Google Assistant
 - Press and hold to talk to Google Assistant.
- 10 Confirm
 - Press to select, pause, or resume.
- 11 Home
 - Press to go to the home page.
- 12 Settings
 - Press to go to settings.
- 13 Volume Up
 - Press to increase volume.
- 14 Mute
 - Press to mute / unmute the sound.

Getting Started

1. Position Your Projector

To achieve optimal projection quality, choose the appropriate installation method and projection direction based on your setup.

Installation Methods:

Default: The projector is placed upright on a table or the floor. This is the most common way to position the projector for quick setup and portability.

Ceiling: The projector is mounted upside down on the ceiling. The ceiling/wall mount kit is required.

Projection Directions:

Front: The projector is positioned on the same side as the audience, projecting directly onto the front of the screen.

Rear: The projector is placed behind a translucent screen, projecting the image from the rear, with the audience positioned opposite the projector.




- After powering on the projector, press the Settings button on the projector, then go to **Advanced Settings > Projector Mode** and select a setting.
- There is no need to tilt the projector toward the screen, as this device features auto focus and auto keystone correction.
- You can also install the projector on a tripod (sold separately).
- The distance between the projector lens and the screen determines the projection screen size.


Recommended Distance Between Device and Projection Surface			
60"	80"	100"	120"
1.59 m / 5.22 ft	2.13 m / 6.99ft	2.66 m / 8.73ft	3.19 m / 10.47 ft

2. Connect the Projector to Power On

 Plug the cord into the adapter, then connect the projector to a power outlet. Then tilt the projector upward until it is facing forward.

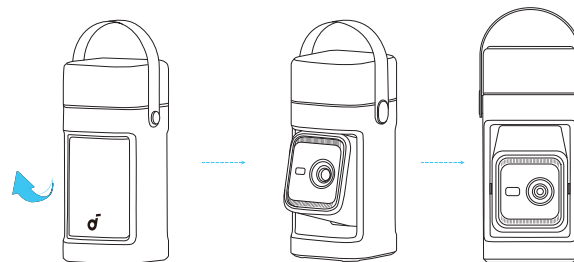

 Once connected, the power button on the projector will light up red.

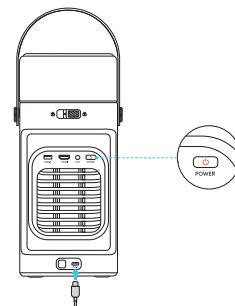

3. Power Your Projector On/Off

 


- **Power On:**
Short-press the power button when the projector is off.
If the projector is in Standby Mode, press the power button once.
When powered on, the power button will display a steady white light.
Note: Return the projector to its factory position to power it off.
- **Power Off:**
Step 1: Press and hold the power button until a prompt appears on the screen.
Step 2: Confirm power off with the remote control or wait 20 seconds for automatic power off.
- **Standby Mode:** Short-press the power button to enter standby mode.

4. Using Your Speakers

There are two ways to use your speakers:

- ① Slide the Speaker Unlock Switch to the left and detach both speakers. Place them on either side of the curtain, or wherever you see fit.

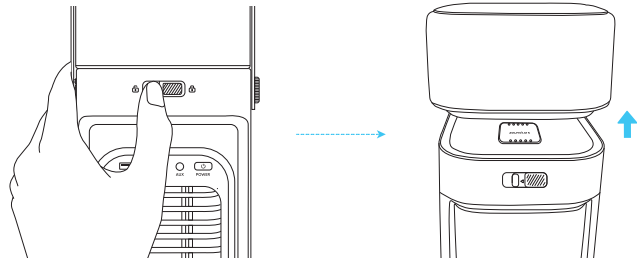

- ② Leave the speakers locked in place on top of the projector.
Once the projector is turned on, it will automatically pair with the speakers.

The indicator lights on the speakers will flash blue during pairing, then turn steady white when successfully connected.

- ③ You will be notified once a new firmware version of the speakers is detected when connected to the app.

Note:

When the battery is low, the indicator lights will flash red slowly.
While charging, the indicator lights will stay red.

 
Once fully charged, the indicator lights will turn steady green.

While connecting Bluetooth, the indicator lights will flash blue.

Once connected, the indicator lights will stay white.

5. Prepare the Remote

- ① Slide to open the battery compartment.
- ② Insert new batteries matching the polarity (+/-) and close the battery compartment.

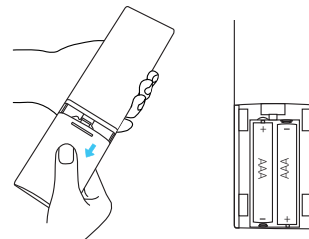

The distance between the remote and the projector should not exceed 10 m / 33 ft.

6. Network Settings

There are two methods to connect the projector to a wireless network:

- ① Press the Settings button on the remote and turn on Wi-Fi.
- ② Open the NEBULA Connect app, select your projector model, then go to Settings and turn on Wi-Fi.

Nebula Connect App

To easily control the projector, we recommend you download the Nebula Connect app.



Download the **NEBULA Connect** app to control the projector using a smartphone.



- 1 Download the Nebula Connect app from the App Store (iOS devices) or Google Play (Android devices).
- 2 Enable Bluetooth on your smartphone.
- 3 Open the Nebula Connect app and select **NEBULA P1** as the device to be connected.
- 4 Follow the on-screen instructions to complete the setup.

Googlecast Built-In

You can wirelessly cast photos, videos, and music from your phone or tablet to your projector.

- 1 Make sure the projector and your phone are connected to the same wireless network.
- 2 Play a video on your streaming app, then tap the cast icon on the screen.
- 3 Select "NEBULA P1" to play the content on your projector

Wireless Screen Mirroring

You can mirror your phone's screen on your projector.

To enable screen mirroring, please make sure the projector and your phone are connected to the same wireless network.

For iOS:

- 1 Download and open the NEBULA Cast app on your iPhone.
- 2 Open your device's control center and tap "Screen Mirroring."
- 3 Select "NEBULA P1" in the device list.

For Android:

 
- 1 Open the Google Home app on your phone and select "NEBULA P1."
- 2 Tap "Cast My Screen" to start casting.



Copyrighted and DRM-protected content from streaming services like Netflix and Disney+ cannot be mirrored.

Light Guide

Projector

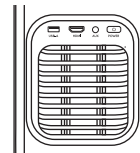

Steady White	Powered On
Steady Red	Powered Off / Standby Mode
Flashing Red When Powered Off	The adapter power is insufficient, and an adapter with a power rating above 100W and a 5A cable are needed.

Speakers

Flashing Blue	Bluetooth Pairing
Steady White	Bluetooth Connected
Steady Red	Charging
Flashing Red	Low Battery
Steady Green	Fully Charged

Bluetooth Speaker Mode

The projector can also be used as a Bluetooth speaker.

- 1 Go to **All Settings > Display & Sound > Sound**, then turn on **Bluetooth Speaker Mode** to switch the satellite speakers to Bluetooth mode.
Alternatively, you can enable **Bluetooth Speaker Mode** via **Dashboard > Sound**.

 
- 2 Enable Bluetooth on your smartphone and select NEBULA P1.

Note: Please keep the projector facing forward.

Playing Video from HDMI/USB Devices

This projector supports connections with various HDMI playback devices such as TV sticks, TV boxes, DVD players, set-top boxes (STB), game consoles, and other devices.

With this projector, you can also enjoy music, videos, and pictures stored on a USB storage device (including FAT32, NTFS).

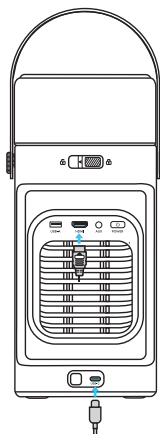

Pairing Remotes and Bluetooth Accessories

You can connect external Bluetooth accessories to your projector, including speakers, headphones, and keyboards.

- ① Go to **All Settings > Remotes & Accessories > Pair Accessory**.
- ② Put your remote or Bluetooth accessory into pairing mode.
- ③ Select the device that you want to connect to.

Important Safety Instructions

- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, do not use this device in an environment that exceeds the recommended low or high temperature.
- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, avoid exposing your device to direct sunshine or excessively wet environments.
- The suitable temperature for the equipment is 0°C to 35°C (32°F to 95°F) for

the projector.

- The suitable temperature for the equipment is 113°F / 45°C maximum for the remote.
- When supplying, please place the equipment in an environment that has a normal room temperature and good ventilation.
- The Type-C port of the projector is for data transfer only and cannot be used to power other devices.
- The power supply should be installed near the equipment and for pluggable equipment, the socket-outlet must be easily accessible.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.
- Possibly hazardous optical radiation emitted from this product may be harmful to the eyes. Do not stare at operating beam.
- Do not open the enclosure of the product. When the enclosure of the product is damaged, please do not use it anymore.
- Please ensure that you only use the adapter provided by the manufacturer. Using an unauthorized adapter may be dangerous and violate the Terms of Use and the product warranty.
- Potential hazards may exist during lamp or product servicing.
- Service shall be performed only by authorized, trained service personnel.
- Do not use the equipment in any way other than described herein in order to avoid personal injury or property damage.
- User should comply with the laws and regulations of the corresponding countries and regions where the equipment is located (used), abide by professional ethics, pay attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purposes. Our company will not be responsible for any violators' legal liability under any circumstances.

Warning:

- Replacement of a battery with an incorrect type that can defeat a safeguard;
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Attention:

- Remplacement d'une batterie par un type incorrect pouvant supprimer une protection;
- Mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion;
- Maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables;
- Batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.

**Remote controller**

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



ATTENTION RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN TYPE INCORRECT. ÉLIMINER LES BATTERIES USÉES SELON LES INSTRUCTIONS.

Notice (United States of America)**FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

(Projector) The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

(Remote Control) According to the Federal Communications Commission (FCC) Radiation Exposure Statement, the device has low power and does not require calculation of RF exposure. This device can be used without restrictions under portable exposure conditions.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

FCC ID:2AOKB-XXXXX

The following importer is the responsible party

Company Name: Fantasia Trading LLC

Address: 5350 Ontario Mills Pkwy, Suite 100, Ontario, CA 91764

Telephone:1-800-988-7973

5150~5350 MHz can be used indoors only.

