

What's in the Box



Baby Bottle
Washer Sterilizer &
Dryer



Drainage Hose



Power Cord



Detergent
Tablets × 30



Water
Softener × 1





Flexible
Rack × 6




Quick Start
Guide

At a Glance

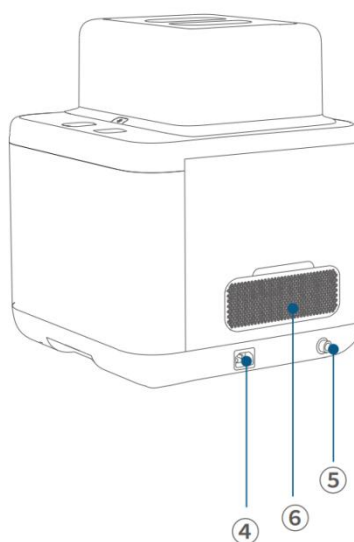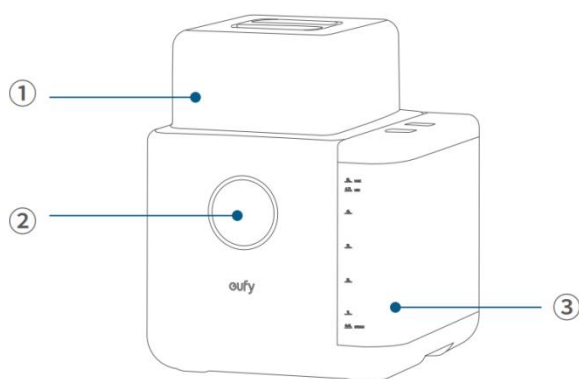

1. Top Cover
2. Control Panel
3. Water Tank
4. Power Port
5. Drain Port
6. Air Filter

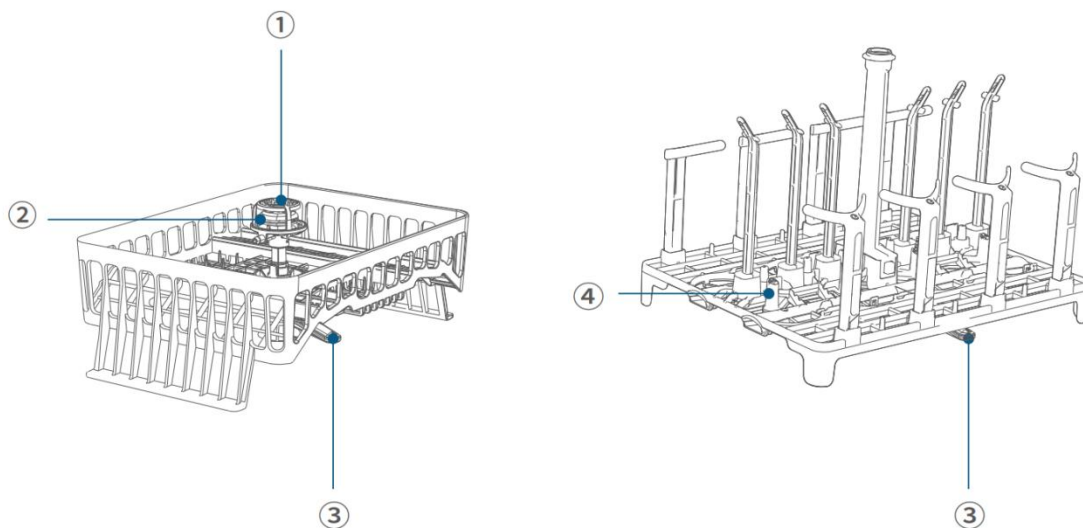


1. Detergent Tablet Holder
2. Nozzle
3. Rotating Spray Arm
4. Water Outlet

Before Use

1. Download eufy App & Add Bottle Washer S1

Download the eufy app, and follow the in-app instructions to add Bottle Washer S1.


Make sure your app is updated to the latest version.

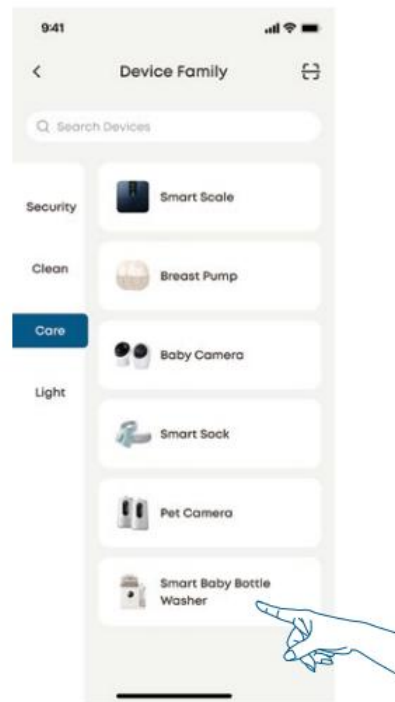

2. Choose a Location


Recommended Location:

- Out of reach of children
- Flat surface near the sink
- Clear space above
- > 18 in (45 cm) gap to countertop if there is an overhead cabinet

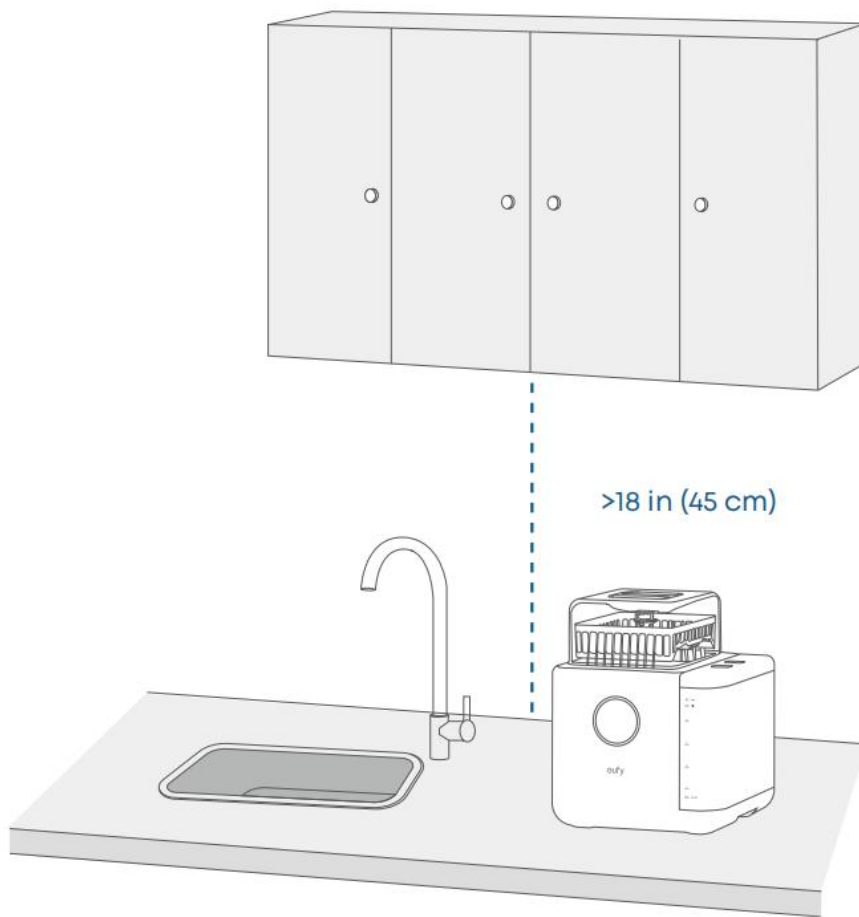


3. Connect the Drainage Hose

Attach the drainage hose to the drain port and direct the other end into a sink.

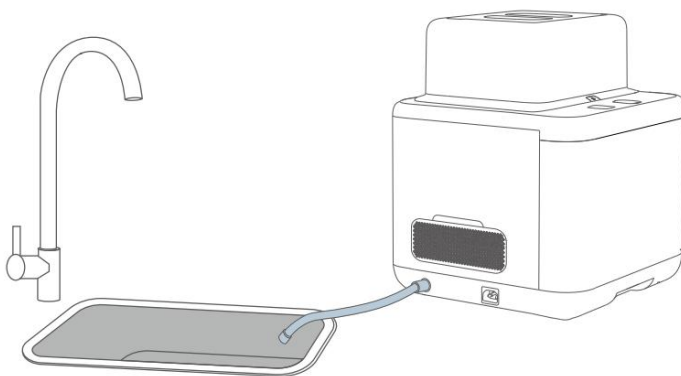


4. Install Water Filter

Attach the water filter to the water tank bottom; the magnet will secure it.

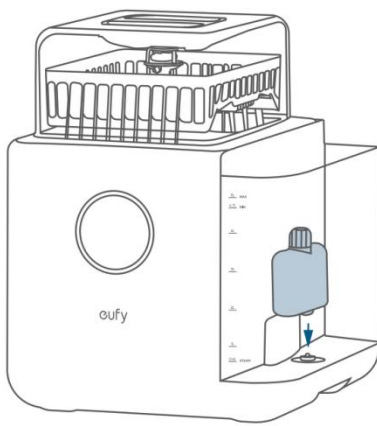

5. Install Flexible Racks


- ① Install spray arms.
- ② Install the center post.
- ③ Install flexible racks.
- ④ Install outer racks.
- ⑤ Mount the upper rack onto the center post.

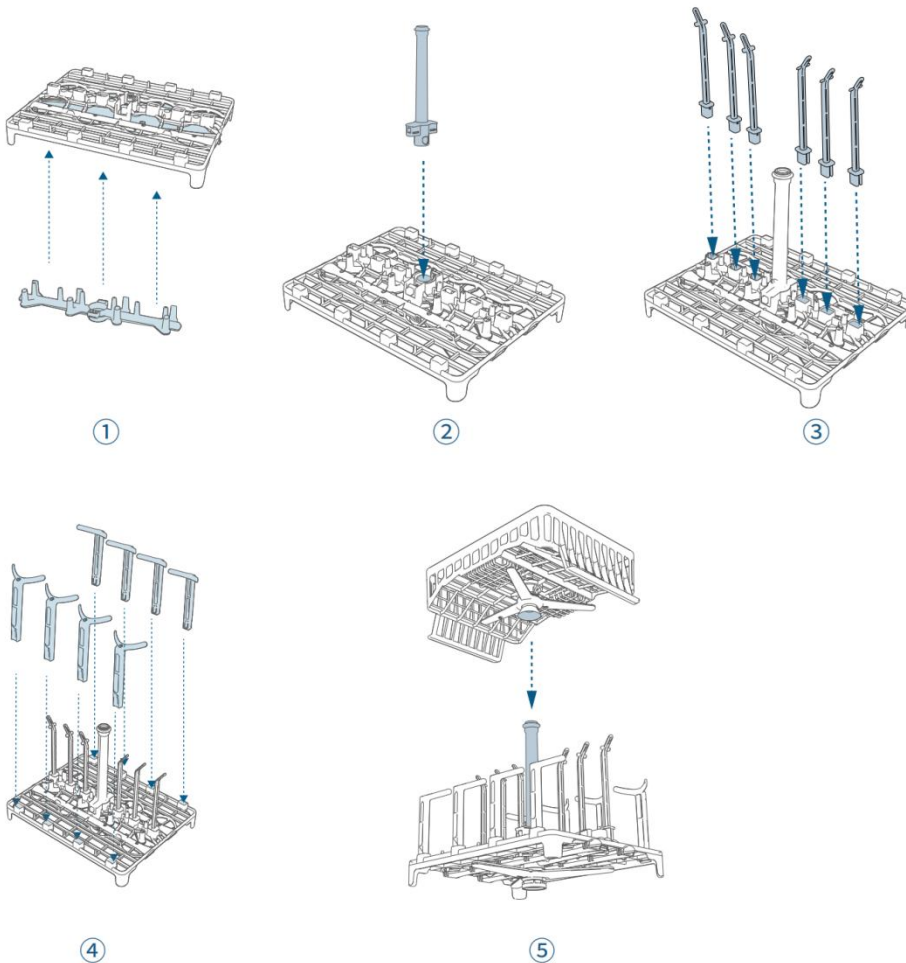

Use Your Bottle Washer S1


1. Connect to Power

Attach the power cord to the power port and plug it into a wall outlet.

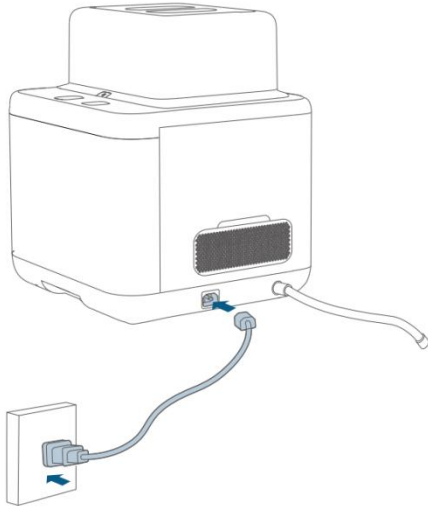

2. Fill Water Tank

Fill the water tank with distilled or purified water for the optimal cleaning performance.

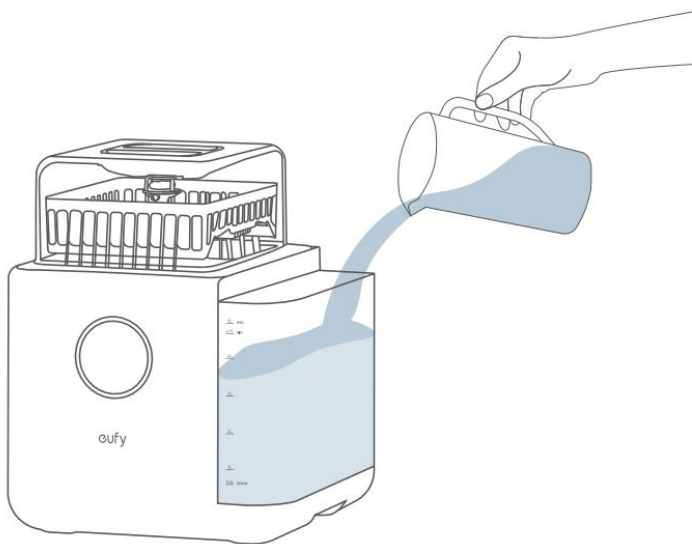


- Use room-temperature purified water for best results. Tap water is safe for babies, but it may leave white residue.
- Do not add hot water above room temperature into the water tank, as







this may cause damage.

- Do not add water directly into the cleaning chamber.

3. Baby Bottles and Breast Pump Parts


- Keep the mouth of the bottle down to prevent water from pooling.
- Avoid stacking items to prevent blocking the rotating spray arm or lifting the top cover.
- Place large items in the lower rack and small items in the upper rack.
- Align bottles with the spray nozzles. Fit anti-colic tubes (with the wide end) down to avoid blocking the spray arm.
- Place cleaning tablets in the center hole on the upper rack.

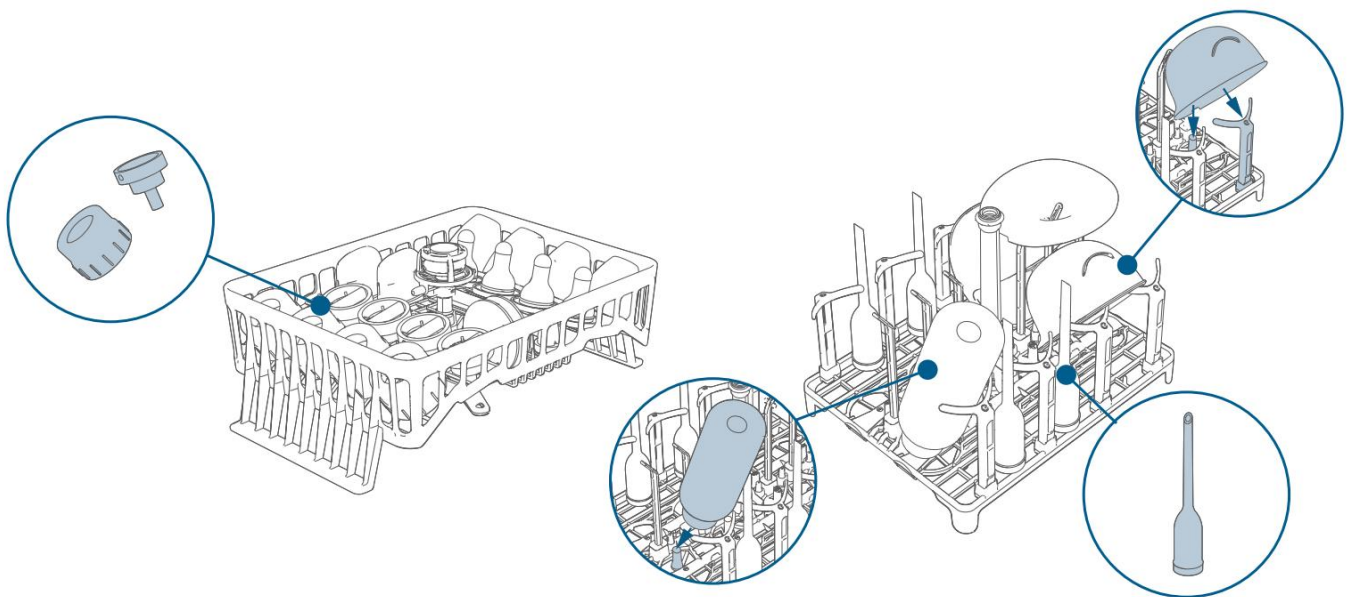

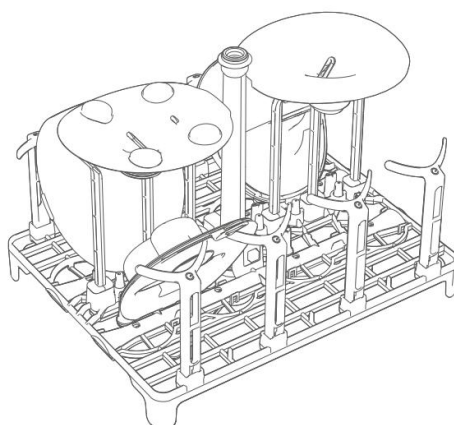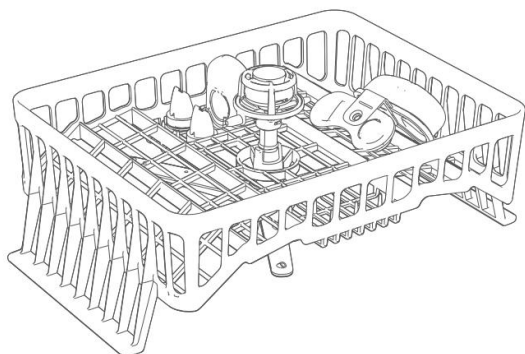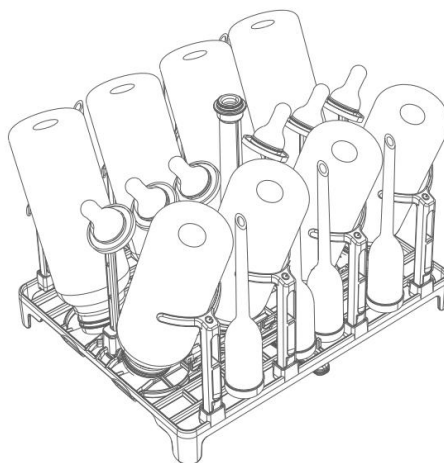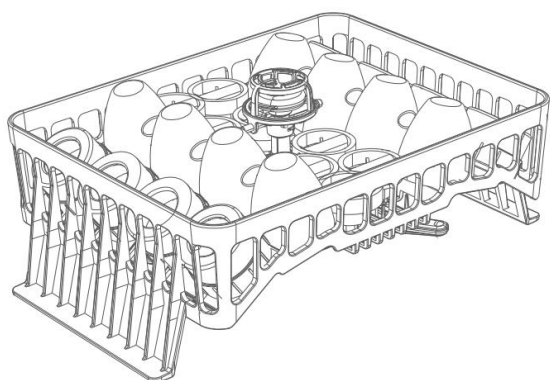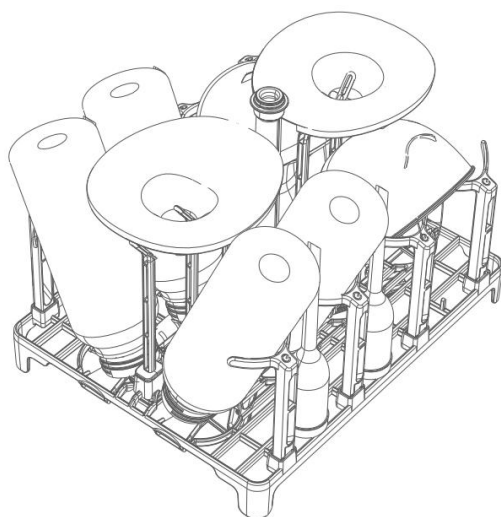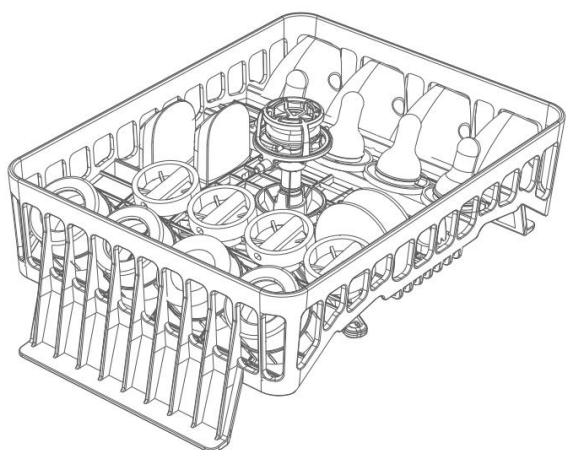

4. Control Panel

- The washer automatically pauses when the cover is opened to prevent scalding. If you must open it during a wash cycle, press **Start / Pause** and wait until the spray arm has fully stopped.
- After drying, wait 10 minutes before unloading to avoid burns.

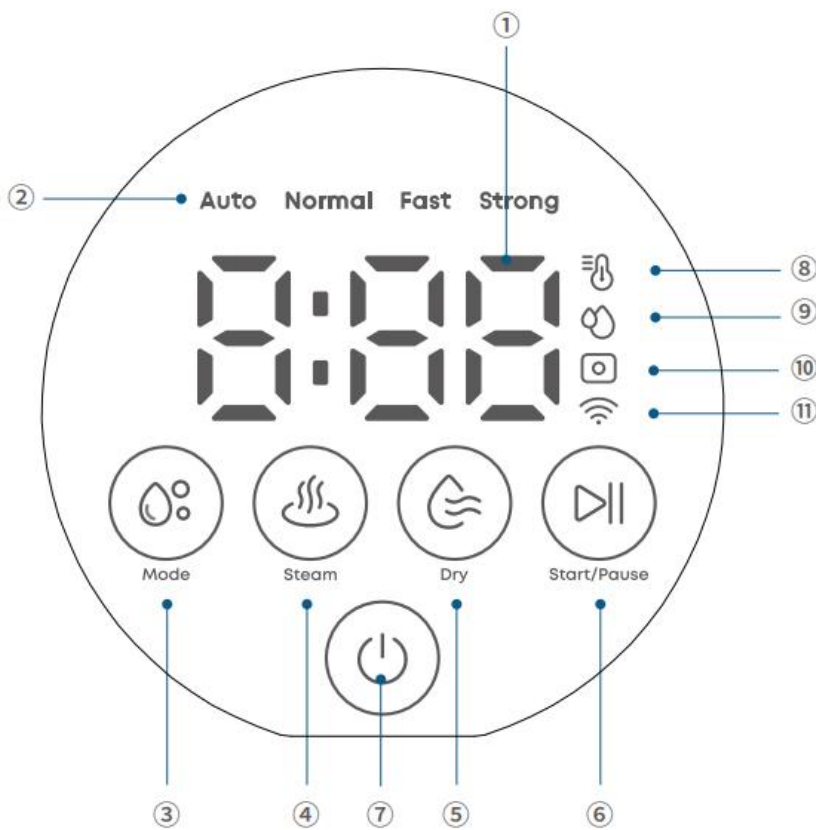

1. Countdown Timer

2. Cleaning Mode

- Normal & Fast: For breast milk or formula stored naturally within 1 day.
- Auto & Strong: For breast milk or formula stored naturally for more than 1 day, up to 3 days.
- If stored for more than 3 days, pre-rinse before using.

3. Cleaning Mode Button

- Press to select a cleaning mode.
 - Solid white: selected.
 - Blinking white: cleaning in progress.

4. Steam Button

- When the **Mode** button is pressed, the **Wash + Sterilize + Dry Mode** will be turned on by default. Press the **Steam** button to turn off / on the **Sterilization Mode**.
- Solid white: selected.
- Blinking white: sterilizing in progress.

5. Dry Button

- When the **Mode** button is pressed, the **Wash + Sterilize + Dry Mode** will be turned on by default. Press the **Dry** button to turn off / on the **Drying Mode**.
- Solid white: selected.
- Blinking white: drying in progress.

6. Start / Pause Button

- Short press to start or pause.

7. Power Button

- Short press to power on.
- Long press (3s) to power off.

8. Storage Mode Button

9. Water Refill Indicator

10. Cleaning Tablet Refill Indicator

11. Wi-Fi Connection Status

Note: If an error code appears on the display, please refer to the table above for troubleshooting.

Error Code	Description	Solution / Note
F1	Lid not properly closed	The device will resume operation once the lid is closed.
F2	Ambient temperature too low	-
F3	Water tank empty	Refill the tank and press Start to continue.
F4	Water hardness too high	-
F5	Detergent tablet	-

	missing	
--	---------	--

Important Safety Instructions

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- Read all instructions.*
- The recommended temperature range for the devices and accessories is 2°C to 45°C (35.6°F to 113°F).*
- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, do not use the devices in an environment that exceeds the recommended low or high temperature.*
- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, avoid exposing your devices to direct sunshine or excessively wet environments.*
- Do not use the product in any way other than described herein in order to avoid personal injury or property damage.*
- Users should comply with the laws and regulations of the corresponding countries and regions where the equipment is located (used), abide by professional ethics, pay attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purposes. Our company will not be responsible for any violators' legal liability under any circumstances.*
- To protect against risk of electrical shock do not put base in water or other liquid.*
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.*
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet.*

Never pull from the power cord.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.*
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.*
- Do not use outdoors.*
- Do not let cord hang over edge of table or counter.*
- Household use only.*

Special Safety Instructions for this Machine

- Only operate this machine under supervision.*
- Place the machine on a smooth, flat and stable working surface.*
- Do not insert the mains plug of the machine into the power socket without having installed all the necessary accessories.*

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure conditions. The min separation distance is 20cm.

The following importer is the responsible party:

Company Name: POWER MOBILE LIFE, LLC

Address: 10800 NE 8TH ST #900, BELLEVUE, WA, 98004, UNITED STATES

Telephone: 1-800-988-7973

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with CAN ICES (B) / NMB (B)

IC RF Statement

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

Important Safety Instructions

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

Bottle Washer S1 Pro (Model: T6010) Rated Voltage: 220-240V-, 50/60Hz, Rated Power: 850W.

- The recommended temperature range for the devices and accessories is 2°C to 45°C (35.6°F to 113°F).
 - Unless specifically indicated that it is safe to do so in the user guide or instruction manual, do not use the devices in an environment that exceeds the recommended low or high temperature.
 - Unless specifically indicated that it is safe to do so in the user guide or instruction manual, avoid exposing your devices to direct sunshine or excessively wet environments.
 - Do not use the product in any way other than described herein in order to avoid personal injury or property damage.
 - Users should comply with the laws and regulations of the corresponding countries and regions where the equipment is located (used), abide by professional ethics, pay attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purposes. Our company will not be responsible for any violators' legal liability under any circumstances.
 - For pluggable equipment, the socket outlet should be easily accessible.
 - Use only the adapters provided by the manufacturer. Using unauthorized adapters may cause danger and violate the Terms of Use and warranty article.
 - The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately.
 - When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
 - Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged. Do not try to repair the appliance on your own. Always contact an authorized technician. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Use only original spare parts.
 - During use, please be mindful of the steam coming out of the steam vent. Always use oven gloves when handling hot parts; avoid hot steam rising from the steam vent at all times when in use.
 - The appliance can hold up to 8 baby bottles per cycle.
 - To close the top cover, align it with the opening and gently lower it until it rests in place. Always make sure the cover is securely closed before starting any cleaning session.
2. This appliance incorporates an earth connection for functional purposes only.
 3. Pay careful attention to the following "Special Safety Instructions".

Children and Frail Individuals

- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene

etc.) out of their reach.

Caution! Do not allow small children to play with the foil as there is a **danger of suffocation!**

- This device is not a toy. Children shall not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Special Safety Instructions for this Machine

4. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
 - Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Do not use appliance for other than intended purpose.
 - **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
 - Do not interfere with any safety switches.
5. Place the machine on a smooth, flat and stable working surface.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
 - Children should be supervised to ensure that they do not play with the appliance
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
 - This appliance is intended to be used in household and similar applications such as: – staff kitchen areas in shops, offices and other working environments; – farm houses; – by clients in hotels, motels and other residential type environments; – bed and breakfast type environments.
 - This appliance shall not be used by children. Keep the appliance and its cord out of reach of children
 - This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years
7. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
 - **CAUTION: Ensure that the blender is switched off before removing it from the stand.**

Cleaning

Body Cleaning	1. Do not immerse the machine in the water. Do not use water to shower directly on top of the machine to prevent the host body from entering the water to avoid short circuits, electric shock, leakage, rust, and other failures. 2. Do not use a dripping wet towel to wipe the machine 3. Do not use detergent/vinegar/salt and other corrosive, strongly acidic, strong alkaline cleaning products to clean the machine body, otherwise accessible to damage the machine's surface. 4. Do not use sharp and rough tools such as wire balls to brush the accessories. Otherwise, it is easy to damage the surface of the accessories.
Accessory Cleaning	1. Do not put the cast aluminum parts into the dishwasher or wash them with corrosive, strongly acidic, or alkaline cleaning products. Please do not put them into the dishwasher for cleaning. (Except for stainless steel parts or surface-treated Teflon parts and electrophoresis parts) 2. Do not soak for a long time in detergent, saltwater, vinegar, and other corrosive liquids; use in time to clean accessories. 3. After cleaning, dry the accessories, mainly to keep the internal parts dry in time.
Preservation and Maintenance	When not in use, you can cover the machine with a packaging bag and place it in a dry environment.

Disposal

	Do not dispose of the device in normal domestic waste. Dispose of the device over a registered waste disposal firm or through your communal waste disposal facility. Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.
---	--

EU Declaration of Conformity



This product complies with the radio interference requirements of the European Community.

Hereby, Anker Innovations Limited declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. For the declaration of conformity, visit the website: <https://support.eufy.com/s/articleRecommend?type=Download&secondType=doc>.

UK PSTI Statement

Hereby, Anker Innovations Limited declares that this device is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. For the Statement of Compliance, visit the website <https://www.eufy.com/uk/psti-related>.

EU RF Exposure Information

The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirements, use products that maintain a 20cm distance between the device and human body.

Frequency bands and power are as below:

Model	Function	Bands	Operation Frequency	Max. Power
T6010	Sub-1G	Sub-1G		
	Wi-Fi	2.4GHz		
		5GHz		

The following importer is the responsible party (contact for EU matters only):

Anker Innovations Deutschland GmbH | Prinzenallee 15, 40549 Düsseldorf, Germany



This product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol means the product must not be discarded as household waste, and should be delivered to an

appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Customer Service



12-month limited warranty



(US/CA) +1 (800) 988 7973



support@eufy.com



support.au.eufy.com

Anker Innovations Limited

Unit 56, 8th Floor, Tower 2, Admiralty Centre, 18 Harcourt Road, Hong Kong