

What's in the Box

 
For Camera Installation




Camera




Magnetic Mounting
Bracket

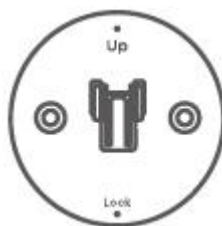


Mounting Base

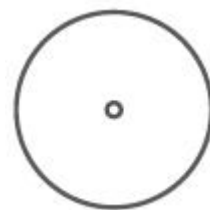 

Metal Plate

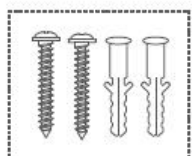 

Screw Pack

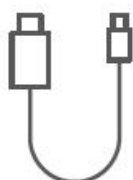 

Power Cable

 
For HomeBase* Setup *Only available in 2-cam / 4-cam kits.




HomeBase Mini



Power Adapter

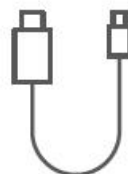

Power Cable

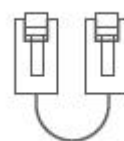 

Ethernet Cable

Other



Quick Start Guide

Tools You Will Need



Phillips Screwdriver



Power Drill

Drill Bit: 15/64 in (6 mm)



 
Hammer

Before Mounting


1. Download the eufy App




2. Add HomeBase Mini (Optional)

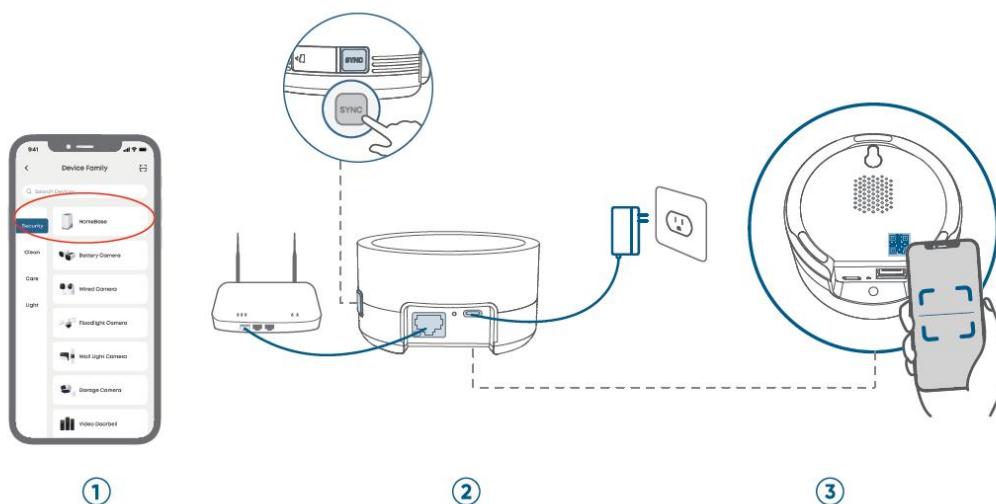

 3. Add the Camera

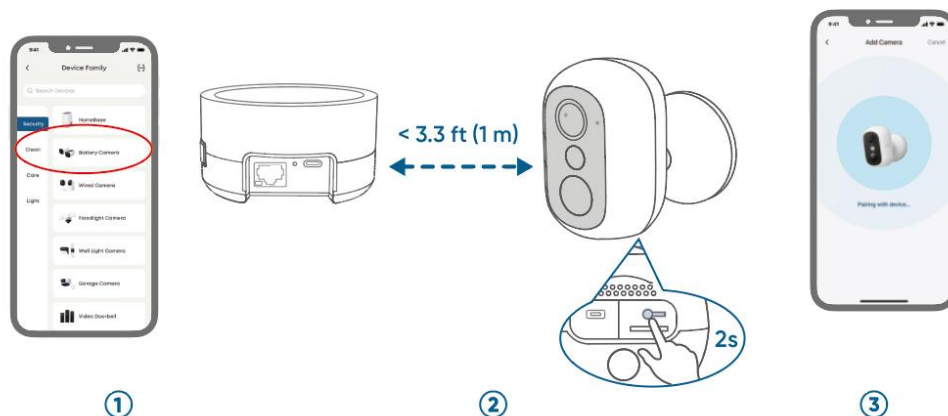

 4. Fully Charge the Camera

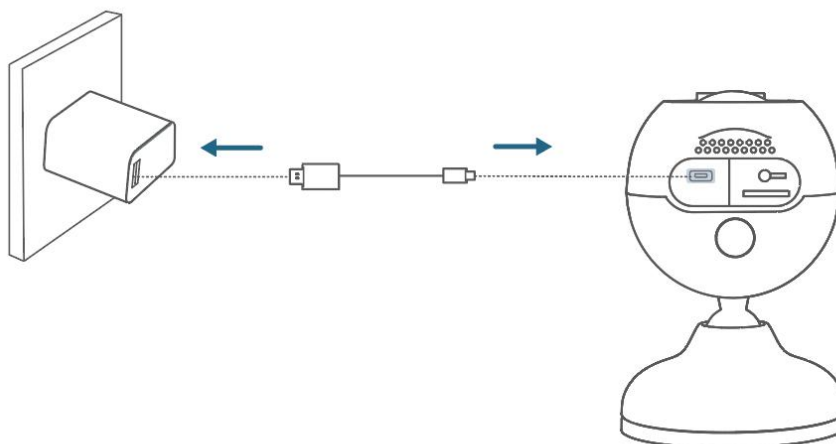


You can check the battery level in the app.

Mounting the Camera


1. Choose a Location

Recommended Location:

 - Height of less than 2 m (7 ft)
- 7 m (23 ft) field of view
- Strong Wi-Fi signal



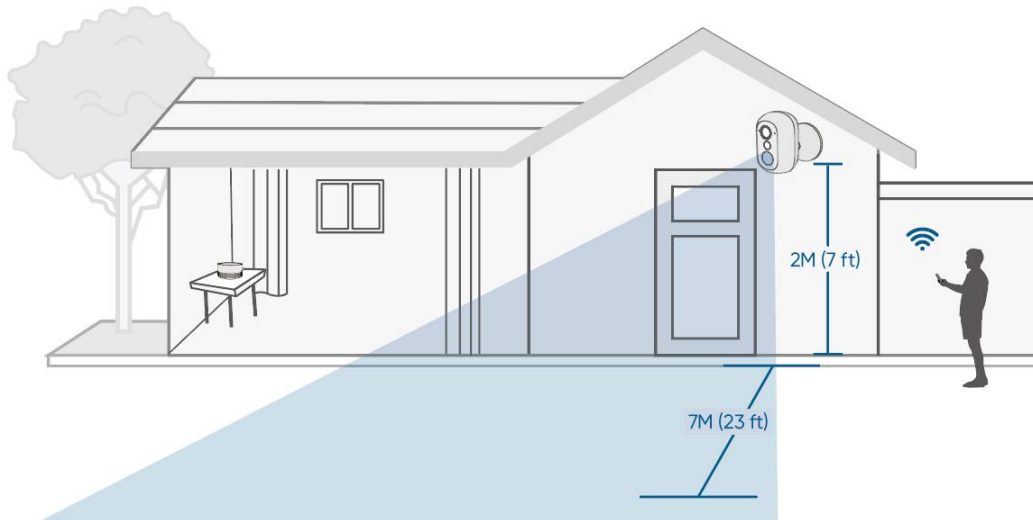


 2. Install the Mounting Bracket

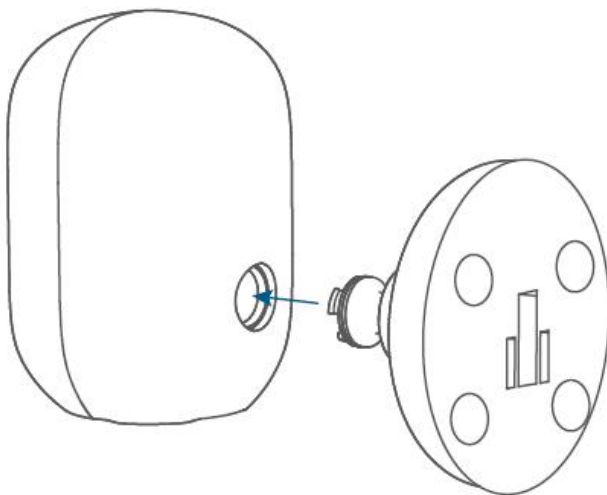


3. Select a Mounting Option

   Always position the camera upright to prevent water intrusion.

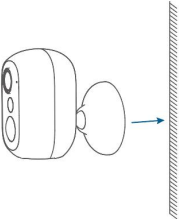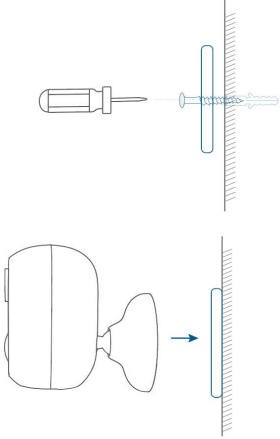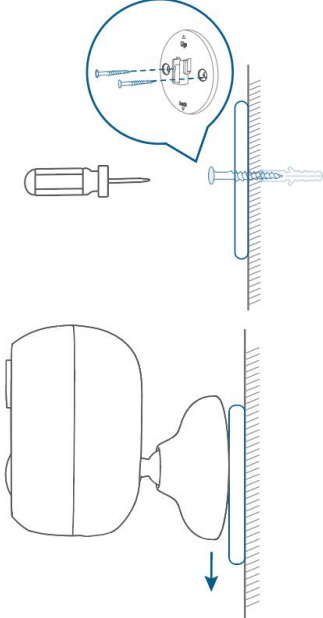
Magnetic Mount		Screws
Metallic Surface	Non-metallic Surface	
		

 3.1 Attach the Camera to a Metallic Surface

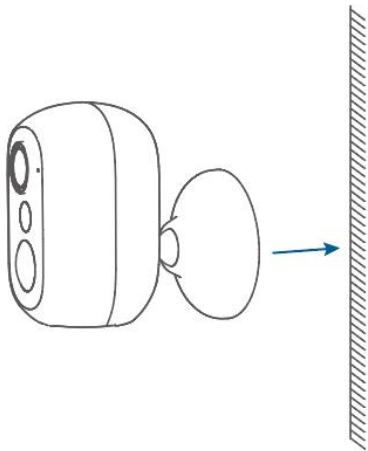


Position and Attach the Camera

 
3.2 Attach the Camera to a Non-metallic Surface

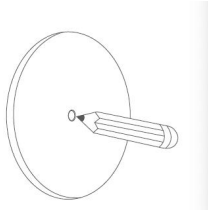

 
1. Position

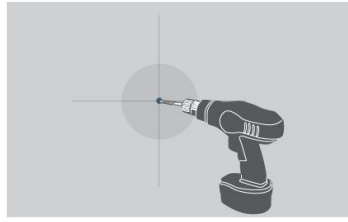

 
2. Drill Holes

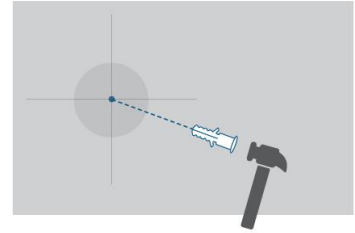

 3. Insert Anchors
(Skip for Wooden Walls)

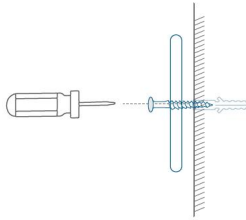


 4. Install the Metal Plate

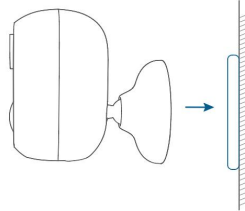


5. Attach Camera to the Plate

 
3.3 Install the Camera with Screws

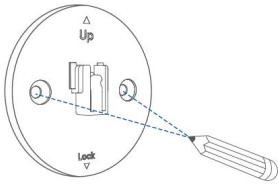

 
1. Position

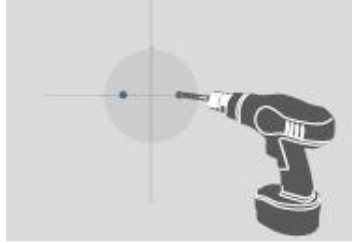

 
2. Drill Holes

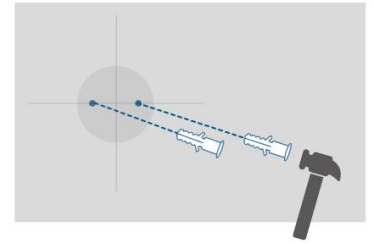

 
3. Insert Anchors
(Skip for Wooden Walls)

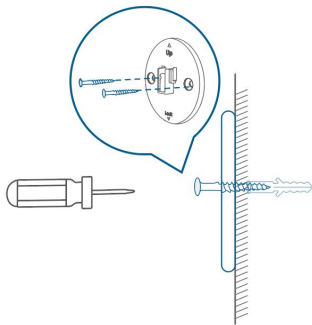

 4. Install the Mounting Base

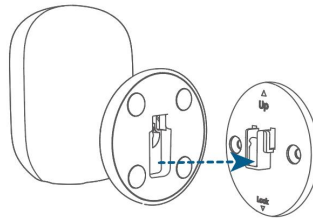

 
5. Slide the Camera onto the Mounting Base

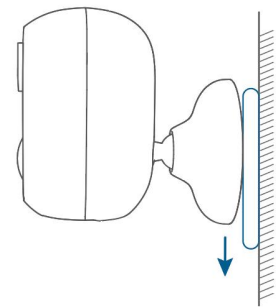

4. Adjust the Camera Field of View



 1. Remove Protective Film

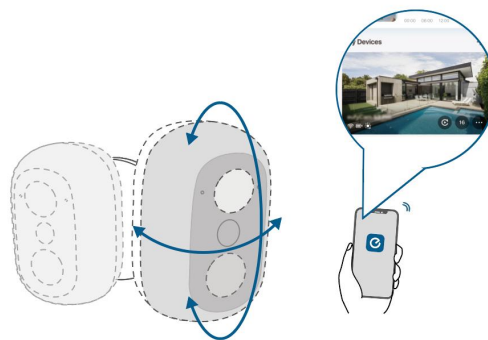

2. Rotate to Get the Optimal Angle



Congratulations!

Now you're all set to use your eufyCam C35!

Please explore more in the eufy app.

Important Safety Instructions

- Do not insert or remove the MicroSD card while the device is powered on.
- The recommended temperature range for the devices and accessories is -20°C to 45°C (-4°F to 113°F).
- The recommended temperature range for T8025 is -10°C to 50°C (14°F to 122°F).
- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, do not use the devices in an environment that exceeds the recommended low or high temperature.
- Unless specifically indicated that it is safe to do so in the user guide or instruction manual, avoid exposing your devices to direct sunshine or excessively wet environments.
- Do not use the product in any way other than described herein in order to avoid personal injury or property damage.
- Users should comply with the laws and regulations of the corresponding countries and regions where the equipment is located(used), abide by professional ethics, pay attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purposes. Our company will not be responsible for any violators' legal liability under any circumstances.
- When charging, place the devices in an environment that has a normal room temperature and good ventilation.
- For pluggable equipment, the socket outlet should be easily accessible.
- Use only the adapters provided by the manufacturer. Using unauthorized adapters may cause danger and violate the Terms of Use and warranty article.

Warning

- Replacing a battery with an incorrect type may bypass safeguards and create danger;
- Disposal of the battery in a fire or a hot oven or other source of significant heat, or mechanically crushing, or cutting of the battery, may result in an explosion or leakage of

flammable liquids or gases;

- Leaving the battery in an extremely hot environment may result in an explosion or leakage of flammable liquids or gases;
- Subjecting the battery to extremely low air pressure may result in an explosion or leakage of flammable liquids or gases.

Child Safety

- THIS DEVICE IS NOT A TOY.
- Choking Hazard: This product contains (or comes with) small parts, plastic elements, cables, and parts that may cause choking hazards. Keep your camera and its accessories out of the reach of small children. Consult a physician immediately if small parts are swallowed.
- Strangulation Hazard: Children get strangled in cords. Keep cords out of the reach of children (more than 3 ft / 0.9 m away).