

KIDDOS™

VIDEO WALKIE-TALKIES

User Guide



AGES 4+

Keep your KIDDOS connected with this video walkie-talkie set. With a secure, single connection, your little ones can safely talk, make faces, and share laughs from a distance. Perfect for indoor or outdoor adventures, they will enjoy hours of fun wherever they roam. Let's get them set up!



FEATURES

- HD Video Chat Enabled
- Long Range for Indoor/Outdoor Use
- Voice Modifiers for Extra Fun
- Single-Channel Connection for Privacy

WHAT'S INSIDE THE BOX

- KIDDOS Video Walkie-Talkies
- 2 USB Type-C Charging Cables
- 2 Lanyards
- User Guide

PRODUCT DIAGRAM

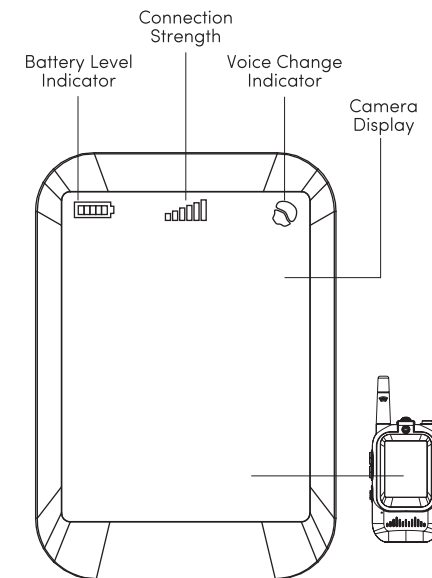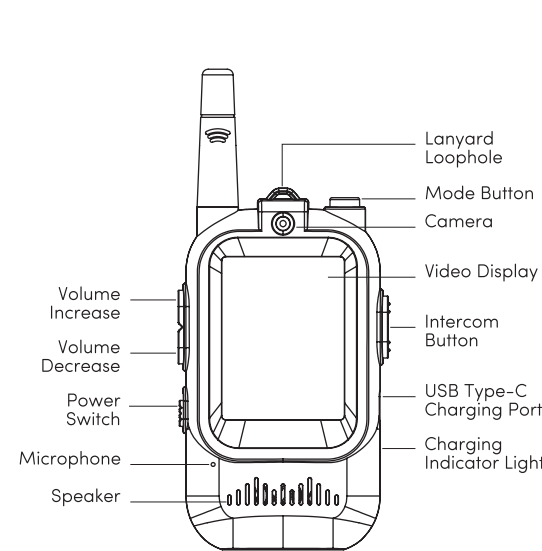


CHARGING THE WALKIE-TALKIES

1. Plug one end of the included charging cable into the walkie-talkie's USB Type-C port, and the other end into a USB power source. The indicator light will turn red while the product is charging, and will turn off when it's fully charged.

USING THE WALKIE-TALKIES

1. To attach the lanyard, thread the loop on the lanyard through the loophole on top of each walkie-talkie. Then thread the lanyard into the loop, as shown in the diagram.

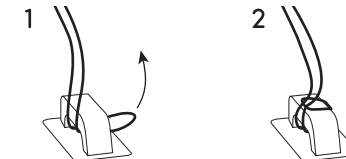

CUSTOMER SERVICE

If you have any questions regarding this product, we are here to help. Call or email us and a customer support representative will be happy to assist you: **1-855-GO-TZUMI** or support@tzumi.com.

KIDDOS™

2. Slide the Power Switch from the OFF to ON position, as shown in the diagram. The walkie-talkie will display its own camera if only one is turned on. It will show both cameras on each unit if both walkie-talkies are on.



1. Press the Mode Button to cycle through the four camera display options.

- Camera Modes: Dual Camera (Receiving Talkie Main), Dual Camera (User Talkie Main), Single Camera (User Talkie Main), Single Camera (Receiving Talkie Main)
- 2. Press and hold the Mode Button for two seconds to select one of the six voice modifiers.
- Voice Modifiers: Normal, Static, Robot, Extreme High Pitch, Low Pitch, Medium High Pitch
- 3. Press and hold the Intercom Button to send a voice message to the other walkie-talkie, and release the button when you're finished. For the walkie-talkie receiving the message, a mic icon will appear in the

bottom left corner when the other walkie-talkie is in use.

NOTES

- It's recommended to wait at least 2 seconds before speaking into the microphone so the recipient hears the entire message.
- When either walkie-talkie is turned off, voice and camera settings reset. Be mindful of connection strength; when the bars reach zero, the walkie-talkies won't work.

CARE & MAINTENANCE

- To clean the product, wipe with a soft, dry cloth.

PRODUCT SPECIFICATIONS

- Input: 5V/1A
- Battery: 650 mAh
- Charging Time: 2 hrs.
- Working Time: 2-5 hrs.
- Call Distance: 1000 ft. without obstructions
- between walkie-talkies.
- Size: 4.88 x 2.12 x 0.90 in.
- Weight: 0.13 lb.

WARNINGS & SAFETY INFORMATION

Before using this product, please read the following safety precautions carefully, and keep this user guide for future reference.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna.

- (2) Increase the separation between the device and receiver.
- (3) Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

- RF warning for portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
- Do not drop this device.
- Only use this product for its intended purpose.
- Keep this product away from water and all other liquids.
- Do not use the product if it is wet, or if it has been exposed to water or any other liquid.
- Keep this product away from humidity and extreme temperatures.
- Keep this product away from flammable objects and substances.
- Do not attempt to disassemble or modify this product. There are no user-serviceable parts inside this unit.

Before using this product, please read the following safety precautions carefully, and keep this user guide for future reference.

- Do not drop this device.
- Only use this product for its intended purpose.
- Keep this product away from water and all other liquids.
- Do not use the product if it is wet, or if it has been exposed to water or any other liquid.
- Keep this product away from humidity and extreme temperatures.
- Keep this product away from flammable objects and substances.
- Do not attempt to disassemble or modify this product. There are no user-serviceable parts inside this unit.