



MX **WiFi**[®]
S E R I E S

MXi|MX I N S T R U C T I O N M A N U A L

Thank You For Your Recent Purchase

At Vaultek® we stand behind our product and you our customer. On behalf of the entire team thank you for your purchase. We believe personal defense should be handled seriously and we're excited for you to experience the ultimate performance in smart-security.

STAY SAFE. VAULTEK® SAFE.

Table of Contents

Product Overview 01 / 02

Introduction / Warnings 03 / 04

Battery Operation / Battery Maintenance 05 / 07

 Battery Installation 05

 Charging the Battery 06

Master Code Programming 08

Smart Align Biometric Scanner (MXi Only) 09 / 12

 Helpful Programming TIPS 09

 Programming 1st and 2nd Fingerprints 10

 Programming Additional Fingerprints 3-20 11

 Deleting Fingerprints 12

Smart Key Operation / Smart Key Warnings 13 / 16

 Smart Key Pairing 13

 Toggle Smart Key Entry Modes 14

 To Unpair Smart Key 14

 Multiple Safe Management 15

Hot Keys 16 / 18

 Tamper Detection 16

 Toggle Stealth Mode 16

 Toggle Travel Mode 16

 Toggle Open Door Alarm 16

 View Battery Status 17

 Delete Fingerprints 17

 Toggle Interior Light 17

 Toggle LCD Brightness 17

 View Temperature/Humidity 17

 Toggle Fahrenheit/Celsius 18

 Toggle Smart Key Modes 18

 Toggle DMT Sensitivity 18

 Toggle Dual Entry Mode 18

 Factory Reset 18

Securing Your Safe 19

Modular Interior 19

 Adjust Interior Shelf Height 19

Product Registration 20

FAQ 21 / 22

Troubleshooting 23

Customer Support / Warranty 24

Box Contents

Vaultek® MXi/MX Safe	Twin Pistol Rack
Smart Key Nano and Battery	Hardware Mounting Kit
18650 Rechargeable Lithium-ion Battery	Owner's Manual / Quick Start Guide
AC Power Adapter and Charging Cable	Backup Keys (2)


GET STARTED

VaultekSAFE.COM/
MXWIFISERIES-SUPPORT

ONLINE TUTORIALS
Setup and Wi-Fi® guide.

Product Overview

Get to know your Vaultek® MX Series safe.

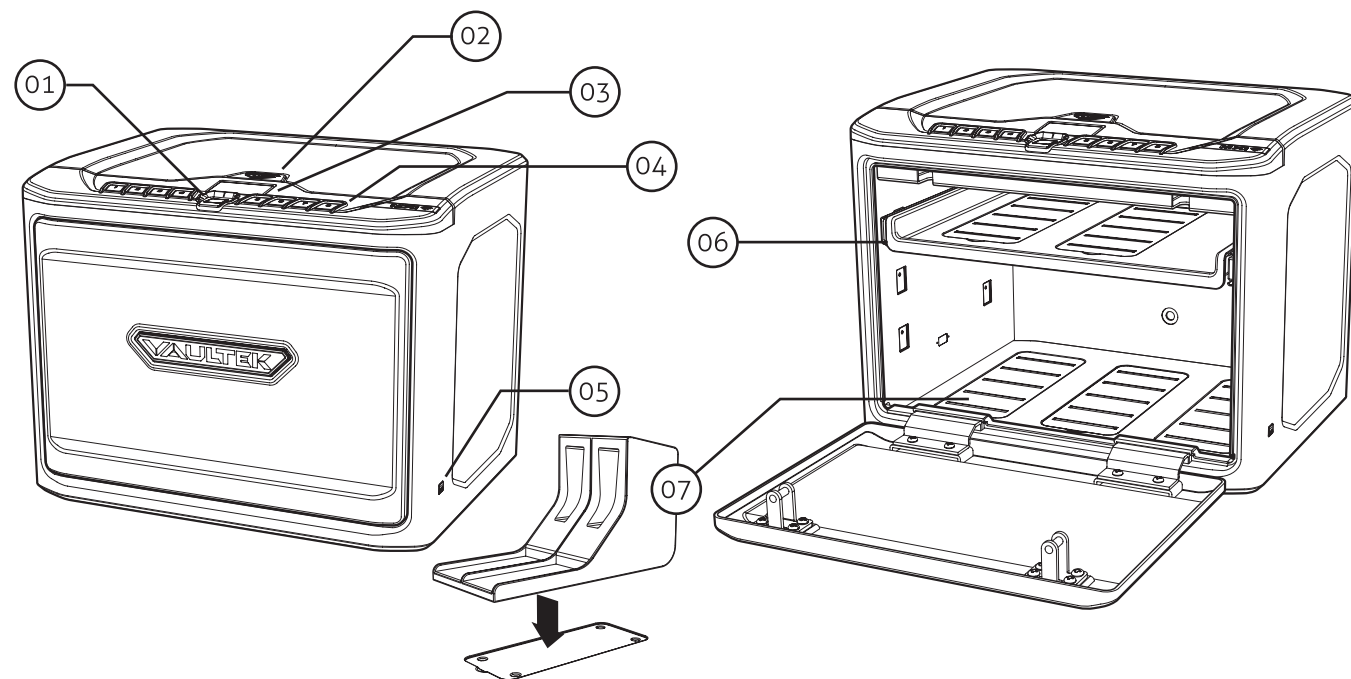

01. Smart Align Biometric Scanner (MXi Only)

02. Silicone Key Hole Cover

03. LCD Screen

04. Numeric Keypad


05. Micro-USB Charging Port

06. Adjustable Shelf

07. Module System
(Twin Pistol Rack)

01 Vaultek®

LCD Screen Format

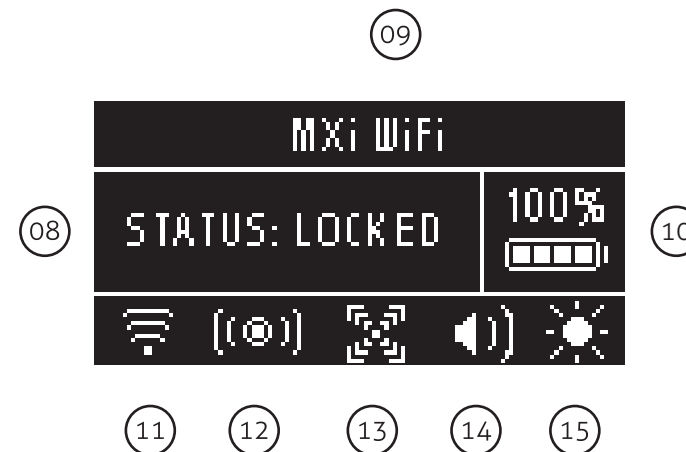

08. Safe Status

09. Safe Name

10. Battery Level


11. Wi-fi® On/Off

12. Smart Key Setting

13. DMT Setting

14. Sound On/Off

15. Interior LEDs On/Off

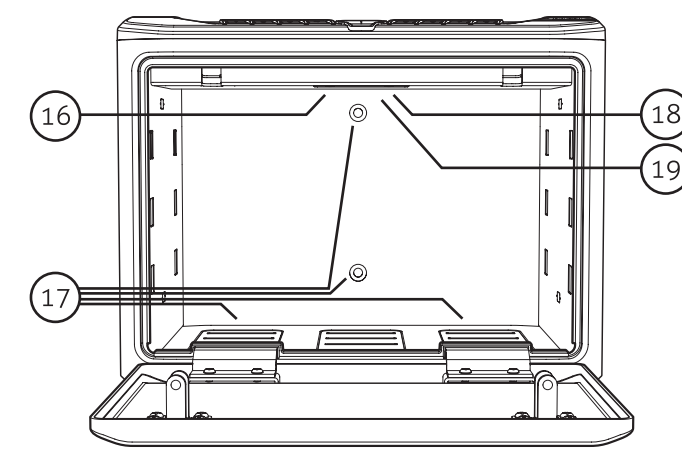

16. PROGRAM Button

17. Pre-Drilled Mounting Holes

18. LED Light Button

19. Battery Compartment

02 Vaultek®

Introduction

The Vaultek® MX Series is a tough and rugged, quick access, Wi-Fi® enabled smart safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. Powered by a rechargeable lithium-ion battery, the safe combines high security with complete access control.

Secure Access How to open your Vaultek® Safe.

Biometric Scanner: Personalized access for up to 20 unique fingerprints. See pages 09 to 12 for more information.

Keypad: The numeric keypad responds quickly for rapid access and has a built-in proximity sensor that lights up when your hand brushes against the safe. See page 08 for more information.

Smart Key: Remote for On Demand access. See page 13 and 16 for more information.

Key: Two keys are provided for manual access to the safe in the event the battery dies.

Secure Defense How your Vaultek® Safe keeps people out.

Anti-Impact Latches: Built to withstand forceful impacts and heavy slams.

No External Access Points: A combination of interior mounted hinges and extended anti-pry reinforcement bars help prevent unwanted tools from attempting to break the safe open.

Security Sleep Mode: Activates when six (6) consecutive incorrect keypad entries are entered or (6) incorrect fingerprint scans are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will beep. The security sleep mode can be cleared upon unlock of the safe by any authorized access method including the backup keys.

DMT (Impact Detection): Motion activated alarm can be disabled or enabled with three levels of sensitivity (Low, Medium, and High) using the safe's hot key functions, online dashboard, or Vaultek® Wi-Fi® app.

Alert Notifications: Wi-Fi® connectivity allows you to receive alerts such as push notifications and text alerts during critical safe activity. This includes battery levels, impacts, extreme temperatures, tampering, and anytime the safe is opened.

Warnings

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

DO NOT PLACE OR STORE THE BACKUP KEYS INSIDE THE SAFE AT ANY TIME. IF THE BATTERY FAILS, YOU WILL BE UNABLE TO OPEN THE SAFE.

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

DO NOT get fingerprint sensor wet.

ALWAYS check to make sure door has latched when closing; door requires a firm press and locks automatically.

DISCLAIMERS:

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE VAULTEK® SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH. VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.

Check page 16 for Smart Key warnings.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.



Battery Operation

Your safe uses a 3.7V 18650 rechargeable lithium-ion with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

Battery Installation

- 1 To get started, insert one of your backup keys into the keyhole at the top of the safe (see Figure A). Push key in and rotate the key 90 degrees clockwise to open the safe.
 - 2 Locate the battery compartment inside the safe beneath the control panel (see Figure B).
 - 3 Remove the battery cover by pressing down on the tab near the top of the cover.
 - 4 Insert the 18650 rechargeable lithium-ion battery (included in accessory box) into the battery compartment. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.
- TIP!** For easy removal make sure to place the pull string over the battery before replacing the cover.
- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up.
 - 6 Once you hear the tone replace the battery cover. You are now ready to program your safe.

IMPORTANT Your Vaultek® safe will automatically lock when you fully close the door.

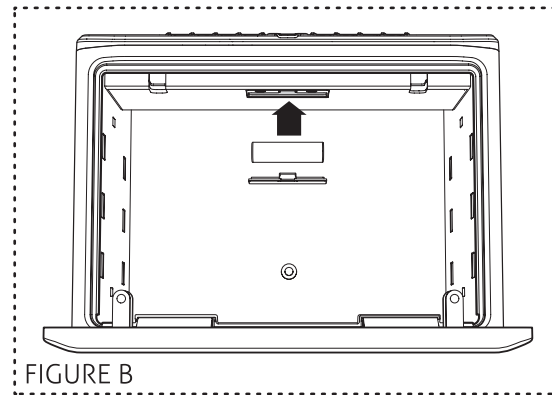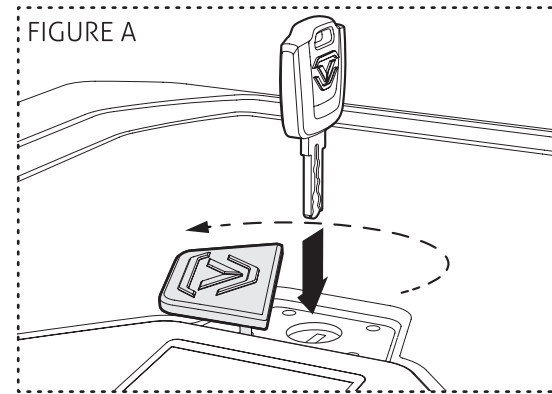

Continue on next page for more information about the battery.

Charging the Battery

Your Vaultek® safe is powered by a rechargeable lithium-ion battery and comes with a charging kit which includes an AC power adapter and a micro-USB cable. Safe and micro-USB cable can be used with all international power adapters. Under normal usage, a fully charged battery can last up to one month.

Due to powerful features with MX Series it is recommended to keep the safe plugged in.

- 1 **To recharge the safe**, plug the micro-USB cable into the micro-USB receiving jack located on the lower right side of the safe (Figure C) and connect to a standard USB port or wall outlet using the AC power adapter. Approximate recharge time is 2.5 hours.
- 2 When charging the LED light above the micro-USB jack (Figure C) will be solid RED and GREEN indicating charged.

Charging TIPS

- A After installing the battery, use the charging kit provided to charge the unit 100%.
- B The charging kit can also function as an external power supply, which means you can open your safe even when the battery is depleted.
- C Leaving your safe plugged in continually will **not** harm the safe or battery. However, to preserve battery life we suggest that you unplug occasionally to allow the battery to cycle down.
- D A specially designed Vaultek Powerpack is available as a separate accessory to extend operation time.
- E The adapter used to charge the battery should output 5V/2000mA or above when using micro-USB cable.

See the FAQ section for additional information about the battery.

