


Functional panel diagram

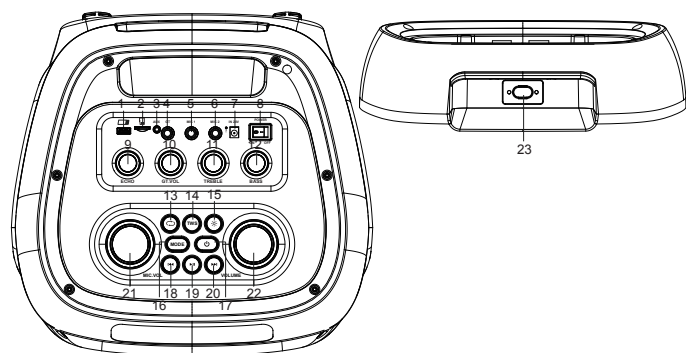

Button function description.

1. USB input
2. TF card slot
3. AUX: Audio input
4. GT: The entrance connecting the guitar.
5. MIC 1: Microphone input 1.
5. MIC 2: Microphone input 2.
7. IN 20V: adapter input, 20V/5A
8. Power switch: "-" represents turning on the power, "O" represents turning off the power.
9. ECHO: Press this key, and then adjust the volume knob to adjust the sound effect of echo.

10. GT VOL: Press this key, and then adjust the volume knob to adjust the guitar volume.
11. TREBLE: Press this key, and then adjust the volume knob to adjust the treble sound effect.
12. BASS: Press this key, and then adjust the volume knob to adjust the sound effect of bass.
13. : Press this button to enter loop mode. When the screen displays "ONE", the current music will be played in a loop. When the screen displays "ALL", all music will be played. When the screen displays "RAND", all music will be played randomly. When the screen displays "FOLD", all music in the current folder will be played in a loop.
14. TWS: In wireless mode, press within a few seconds to pair TWS, and press twice to disconnect.
15. : Short press this button to select different lighting display modes, with a total of 7 lighting display modes to choose from.
16. MODE: The starter automatically enters wireless mode. Press the short switch mode, enter FM-USB-TF-AUX mode in sequence, and then press to return to wireless mode. In FM mode, short press "" to start channel search, and then short press "" again to stop search.
17. : Long press to turn on, long press again to turn off.
18. : Short press to play the previous song, and in FM mode, short press to play the previous channel.
19. : Press briefly to play music, then press again to stop.

20. : Short press to play the next song, in FM mode, short press to play the next channel.
21. MIC VOL: Press this key, and then adjust the volume knob to adjust the microphone volume.
22. VOLUME: Adjust the volume.
23. AC input ~120-220V 50/60Hz

Specifications

Speaker Size: 10"x2 +1"x2
 Frequency Response: 50Hz - 20KHz
 S/N Ratio: ≥75dB
 Output Power: 50W+10Wx2
 Battery Capacity: 7.4V/8000mAh
 Power: AC 120-220V 50/60Hz

Accessories


Power cable	1 PC
Microphone	1 PC
Instruction manual	1 PC



Professional Party Speaker

Model: FS-L2310

Operation Manual

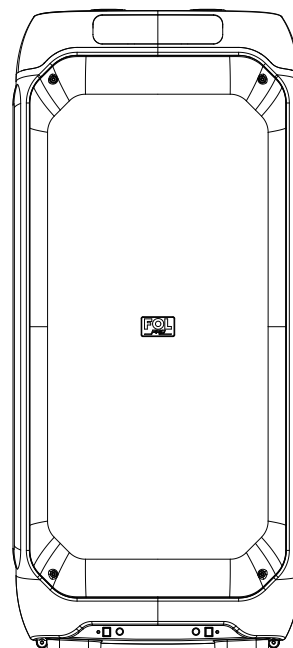

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.