
Roxy

User Operating Manual

TS401

LX-02

Contents

Contents	- 2 -
1 Introduction	1
1.1 Acknowledgements.....	1
1.2 Safety Notice.....	1
2 Brief introduction for TS401 product.....	3
2.1 Diagram for TS401 complete machine	3
2.2 Introduction to accessories of TS401	5
2.3 TS401 state and notice	5
3 Alexa Voice Service.....	6
3.1 First boot settings.....	6
3.2 Alexa Voice Service	8

1 Introduction

1.1 Acknowledgements

Many thanks for you choosing this TS401. It is also equipped with a piece of touch LCD of high definition, which can be used to watch vedios and pictures of high definition. It supports installation of multiple application programs. The fantastic operation interface will give you a brand-new user experience.

This manual systematically introduces diversified functions, using skills and matters needing attention of this TS401, please read this manual carefully before using it.

1.2 Safety Notice

Before using TS401, please read information in this section, and make your children learn about the information. About more detailed information, please refer to safety instructions and matters needing attention.

- Please don't use TS401 when you are driving, for fear of hindering safe driving.
- In medical places, please observe relevant stipulations and regulations. And in regions near the medical devices, please shut down TS401.
- Please shut down TS401 or enable the airplane mode when boarding, so that the wireless signals will not interfere control signal of the airplane.
- Please shut down TS401 neighboring electronic equipments with high accuracy, otherwise, breakdown of electronic equipments may be brought about.
- Please don't dismantle the TS401 and its accessories on yourself, and only the authorized agency can maintain this TS401.
- Please keep TS401 far away from magnetic equipment, radiation from TS401 will erase information stored on the magnetic equipment.

-
- Please don't use TS401 in places with high temperature and inflammable gas (such as nearby gas station).
 - Please put TS401 and its accessories in places beyond children's touch, please don't let children use TS401 without supervision.
 - During using of this TS401, please observe related laws and regulations, respect privacy and legitimate rights of others.
 - Please strictly abide by relevant explanations in this manual when using USB data line, otherwise, TS401 or personal computer may be damaged.
 - Please don't use the TS401 in humid environment such as bathroom, etc., and the TS401 being soaked or rinsed by liquid must be avoided.

2 Brief introduction for TS401 product

2.1 Diagram for TS401 complete machine

TS401 front view:

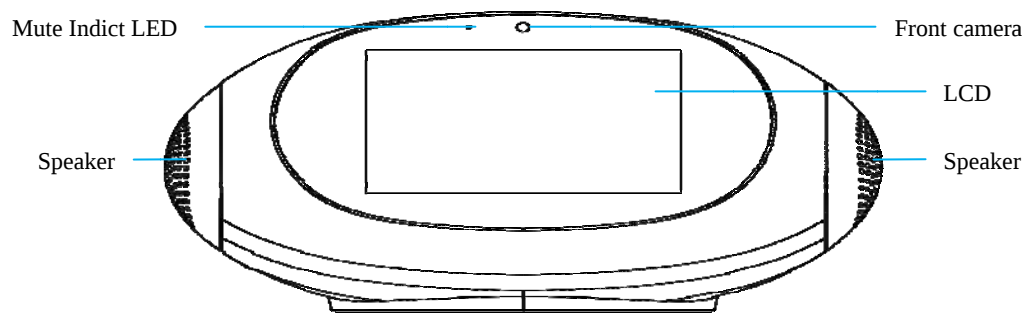 


Figure2-1

TS401 side view:

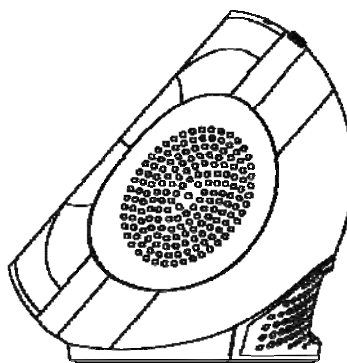 


Figure2-2

TS401 back view:

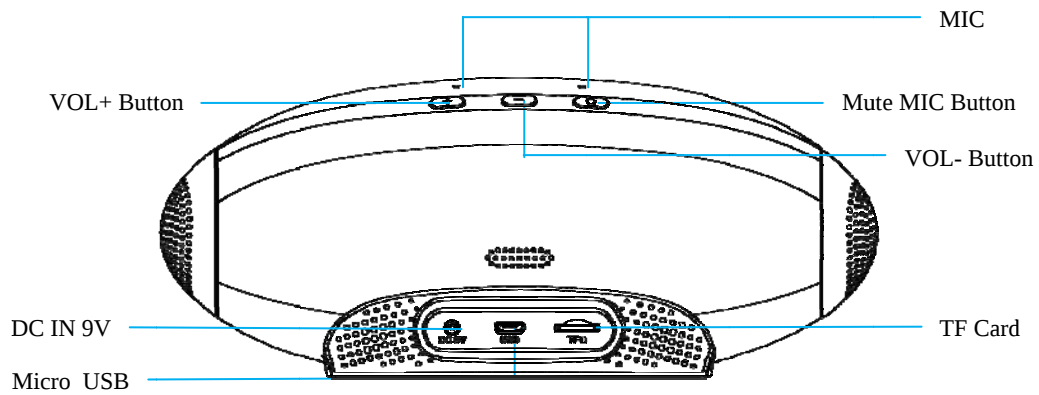 


Figure2-3

Function of Mute MIC Button:

- Press this key for a long time to start up.
- Under starting up state, press this key for a long time to pop up shutdown option.
- Under starting up state, when pressing this button, the mute indict led will display the red light, and Alexa can stop the voice service.



Figure2-4

2.2 Introduction to accessories of TS401

Packing list

The following articles are included in your packing box of TS401:

- Complete machine of TS401
- Power adaptor
- USB connecting line

2.3 TS401 state and notice

Iconograph for notification

When a prompt message shows on your notice panel, please click the column box and slide on the screen with your finger to open the notice list. Click options needing to check to see detailed information. Then you may click the message box and slide upwards to close the message window. The following are iconography for icons in status bar:

	WIFI service is connected, netwrk is available		Battery symbol
	Airplane mode		Do not disturb
	Bluetooth is already connected		Location

3 Alexa Voice Service

3.1 First boot settings

WIFI Connection

Insert the DC power adapter, the speaker will automatically turn on, enter the main interface after the system is turned on, select “ALWAYS ALLOW” according to the instructions.

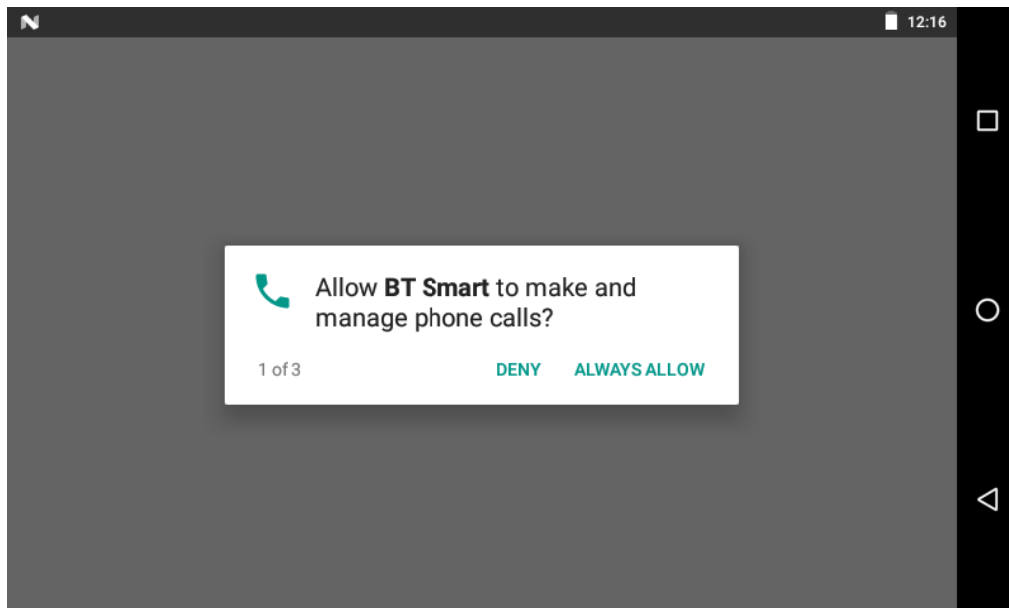 


Figure 3-1

For the first time to use Alexa, we need to connect WiFi network first.:

1. On the homepage interface, click and select the meun key and pop up the meun setting;
2. Click and select the **System Setting**;
3. Click Wi-Fi and open wi-fi switch;
4. After openingWi-Fi, the searched Wi-Fi network can be scanned automatically from the equipment in the windows on the right.
5. Select the Wi-Fi network required to be connected, if the password is added, pop up the password input windows and input the corresponding password.
6. Click the **Connection**

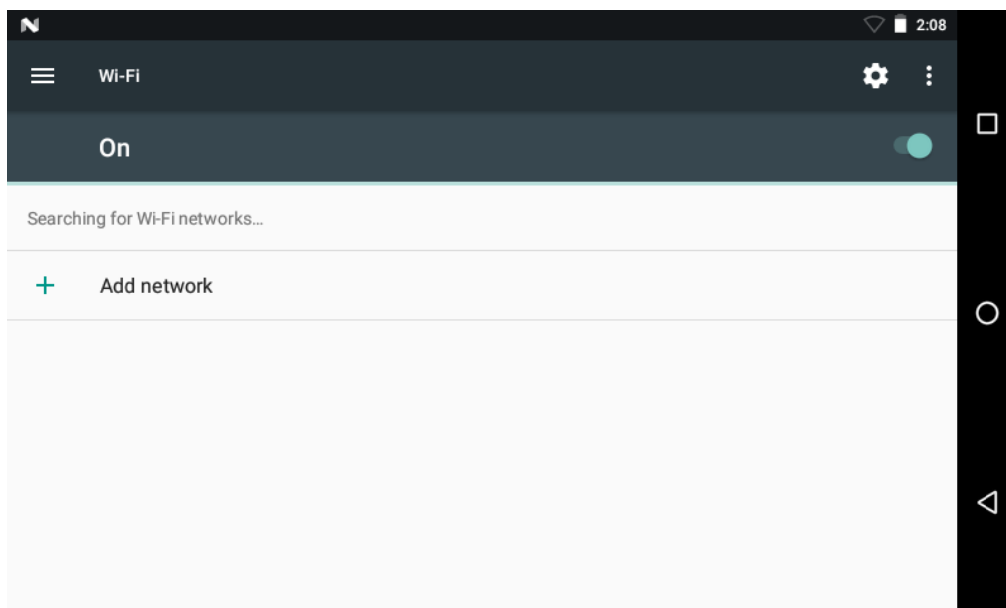 


Figure 3-2

Sign in Amazon

1. After WiFi network connected, open the APP "BT Smart" and register and log in to your personal Amazon account as required.

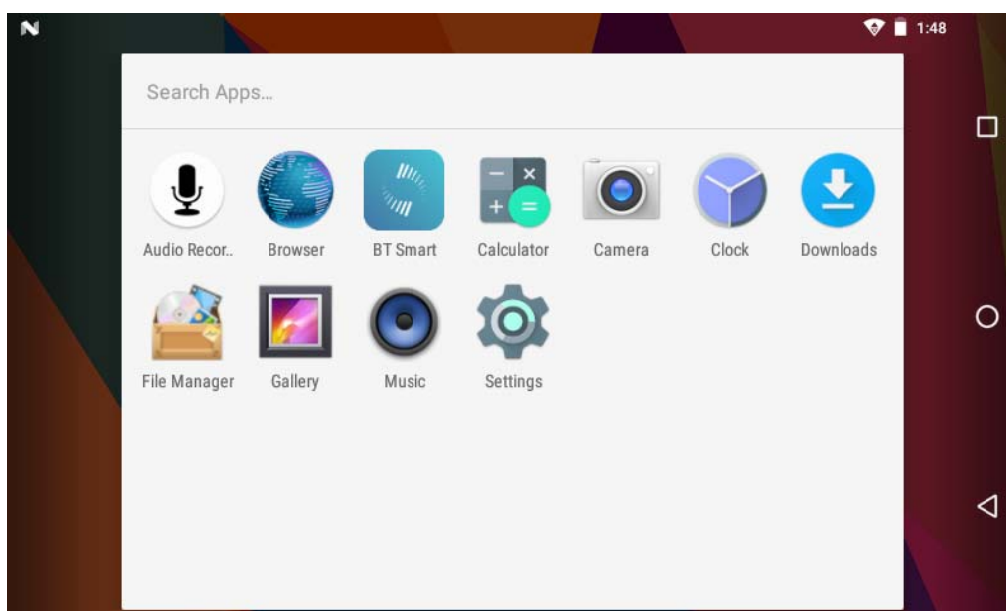 


Figure 3-3

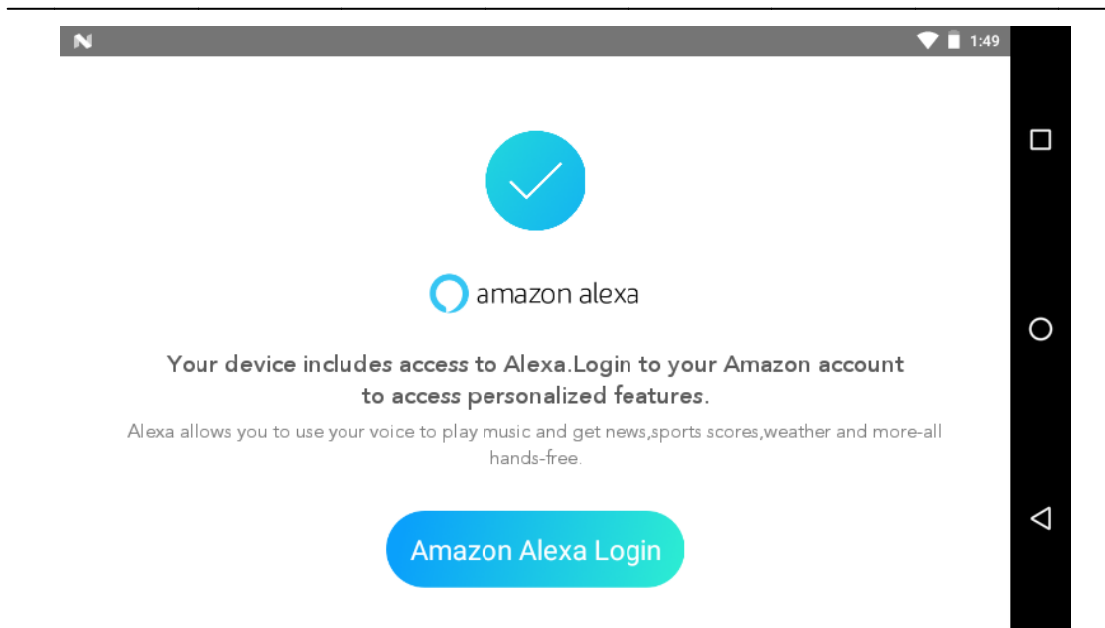 


Figure 3-4

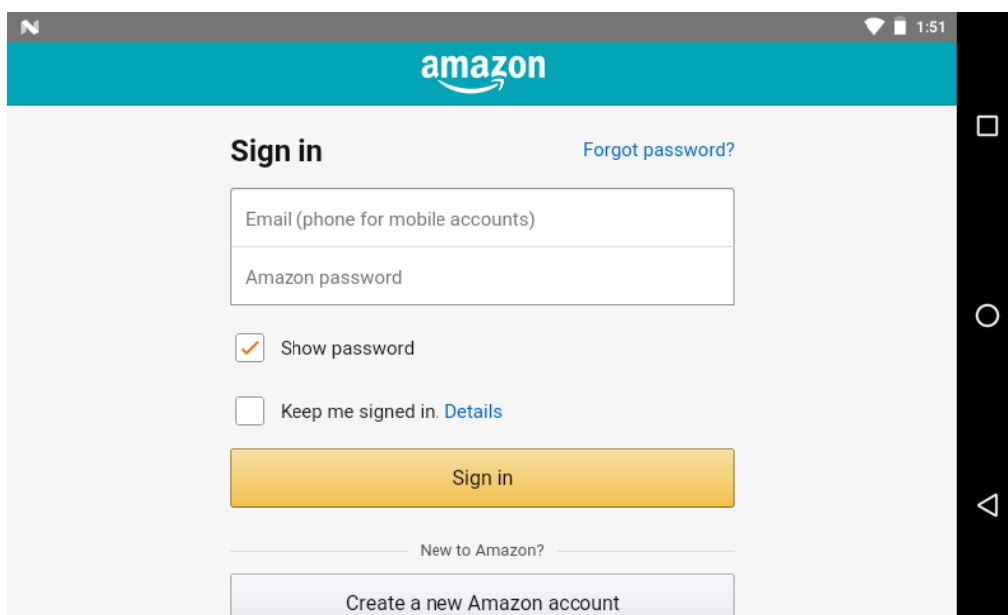 


Figure 3-5

3.2 Alexa Voice Service

After the account is signed in, you can start Alexa voice service.

Things to try:

“Hello Alexa, What’ s thr weather today?” 。

“Hello Alexa, Play my Flash Briefing.”

“Hello Alexa, Set a time for 20 minutes.”

.....

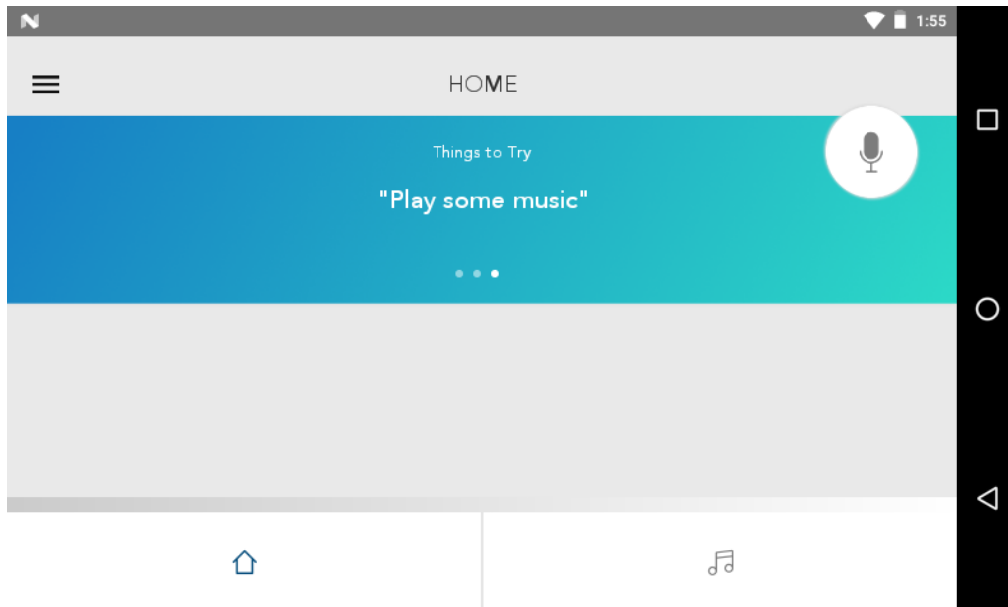 


Figure 3-6

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device

The distance between user and products should be no less than 20cm

ADVERTENCIA IC

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

La distance entre l'utilisateur et de produits ne devrait pas être inférieure à 20cm