


Product Name:Sound-bar Speaker
Model No.:SP-198



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

OPERATING INSTRUCTIONS

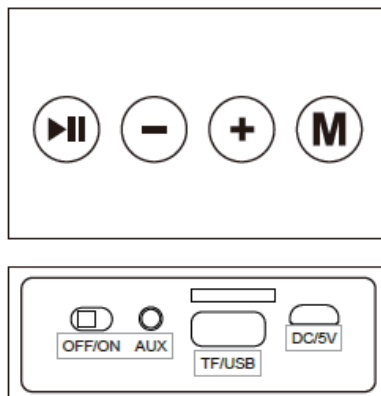

Powering On

1. Slide the "OFF/ON" switch to the "ON" position. The device will automatically enter **Blue-Connect (Blue-Connect) mode**.

Charging the Device

1. Connect one end of the **USB Type-C charging cable** to the **DC 5V port**.
2. Plug the other end into a power adapter.
3. The indicator light will turn **red** during charging and turn **off** when fully charged.

Switching Modes

- Press the **"M" button** to switch between the following modes:
 - **TF Card Mode**
 - **USB Mode**
 - **FM Mode**
 - **AUX Mode**
 - **Blue-Connect (Blue-Connect) Mode**
- Press and hold the **"M" button** to change the lighting effects.

FM Radio Mode

- Short press the **“+” or “-” buttons** to manually search for FM channels.
- Press and hold the **“+” or “-” buttons** to perform an **automatic scan** of available FM channels.
- **Tip:** For better FM signal reception, keep the USB charging cable connected.

Music Playback Controls

- **Play/Pause:** Press the **play/pause button** to start or pause music playback.
- **TWS Connection:** Press and hold the **play/pause button** to connect/disconnect **TWS (True Wireless Stereo)** mode.

- **Hands-Free Calls:** Short press the **play/pause button** to answer or end a phone call.

Track & Volume Control

- **Previous Track / Volume Down:**
 - Short press “-” to play the previous track.
 - Press and hold “-” to decrease the volume.
- **Next Track / Volume Up:**
 - Short press “+” to play the next track.
 - Press and hold “+” to increase the volume.

WIRELESS BLUE-CONNECT (BLUE-CONNECT) MODE

1. Power on the speaker. It will automatically enter **Blue-Connect pairing mode**.
2. On your mobile device, enable **Bluetooth**, then scan for available devices.
3. Select “**IVSP2186**” from the list.
4. Once connected, you will hear a confirmation prompt, and you can start playing audio from your device.

TWS FUNCTION (TRUE WIRELESS STEREO MODE)

Important: Do not enable Bluetooth on your smartphone before completing step 3.

This feature allows two **IVSP2186** speakers to play music simultaneously.

1. **Power on** both speakers. Their lights will turn on.
2. On one speaker, press and hold the **TWS button** until the lights on the second speaker start blinking.
3. Enable Bluetooth on your smartphone and connect to “**IVSP2186**”
4. The TWS connection is now established.

INCLUDED ACCESSORIES

- **1 x Blue-Connect Speaker**
- **1 x User Manual**
- **1 x USB Type-C Charging Cable**

TECHNICAL SPECIFICATIONS

Specification	Details
Battery Capacity	3.7V / 1200mAh
Connectivity	Wireless
Transmission Range	Up to 10 meters
Output Power	6W

Specification	Details
Playback Time	2-3 hours (at medium volume)
Supported Devices	PC, DVD, VCD, CD, LD, TV, MP3, radio, electronic piano
Storage Support	USB & TF Card (Max 128GB)

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.