

Card Reader/Encoder (E5) User Manual

Product appearance



Product Specifications

Model: E5

Dimensions: 90mmx110mmx21.3mm


Powerinterface: USB Type-A

Powerinput: 5V/500mA

Radio frequency: 13.56Mhz

Supportcard type: MIFARE Classic 1K、CPU

Description of light/sound status

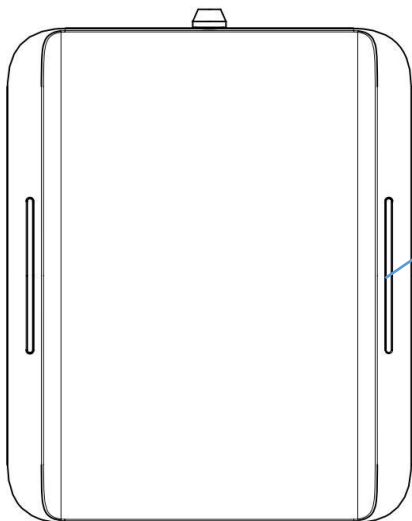

Standby: Blue light stays on constantly


Waiting for card release: Blue light flashing

Read/Write Card Success: Green light on, one beep

Read/Write Card Failure: Red light is on, two beeps

Steps:

1、 Connect the USB cable with PC

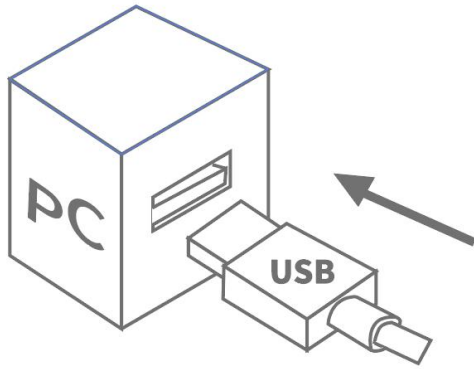

2、 Follow the instructions of the software to the use the Encoder

Product warranty instructions:

- 1、 Within 7 days from the date of purchase, if there is a quality issue with the product that is not caused by human factors, you can choose to return it at the purchase price or replace it with a product of the same model;
- 2、 From the date of purchase until the fifteenth day, if there is a quality problem with the product that is not caused by human factors, you can choose to replace it with a product of the same model for free;
- 3、 Within 12 months from the date of purchase of the product, if there is any non-human damage to the performance of the product, free warranty service will be provided.

Disclaimers:

Our company reserves the right to change the design due to product improvements without prior notice; All information has been carefully verified for accuracy, but errors may still occur. Our company does not assume any consequences arising from this.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).