

智能锁网关

G5

使用说明

智能锁网关 G5

产品型号	G5
尺寸	75mm x 75mm x 24mm
网络	WiFi 2.4G/5G
IEEE标准	802.11 b/g/n/ac/ax
电源接口	Type-C USB
电源输入	DC 5V/500mA

灯光状态说明



通过APP添加网关

1 打开 APP



 
2 点击屏幕左上角的“≡”




3 下拉列表中选择 [网关]



4 选择 [G5]



5 给网关接通电源

 

6 红蓝两色灯交替闪烁时，点击“+”



7 配置网络



8 选择要使用的网络 (支持 5G WIFI) 并输入密码。



⚠ 注意：如果超时未绑定成功，请断电重新尝试

产品保修说明

- 1、自购买产品之日起 7 日内，若产品出现非人为损坏的质量问题，可以选择按购买价格退货或更换同型号产品；
- 2、自购买产品之日起至第十五日内，若产品出现非人为损坏的质量问题，可以选择免费更换同型号的产品；
- 3、自购买产品之日起 12 个月内，若产品出现非人为损坏的性能故障，提供免费保修服务。

免责声明：

本公司保留因改进产品而变更设计的权利，届时恕不另行通知；所有资料经过仔细核对力求精准但仍可能产生误差，本公司不承担由此产生的后果。

SMART LOCK GATEWAY


G5

User Manual

SMART LOCK GATEWAY G5

Model :	G5
Dimensions :	75mm x 75mm x 24mm
Network :	WiFi 2.4G/5G
IEEE standard :	802.11 b/g/n/ac/ax
Power interface :	Type-C USB
Power input :	DC 5V/500mA

 Light Status

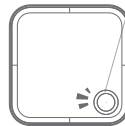

When the Gateway is powered on:

- Flashing Red/Blue lights:
Stand-by mode - Ready to Pair
- Blue light: Normal mode
- Red light: Network failure

Pair the Gateway with APP

1 Open the APP



 
2 Touch the "☰" icon on the top left of the screen




3 Select [Gateway]




4 Select [G5]



5 Plug in the Gateway and power it on

 

 6 While the light is flashing alternately in red and blue, press "+" sign

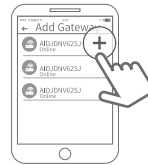

7 Add Gateway



8 Select the network (supporting 5G WIFI) and enter the password.



⚠ Notice: If the above process times out, please power off and try again.

Limited Warranty

- For any defect in material and workmanship, the original purchaser of the product can:
 - Return or ask for a replacement within 7 invoice days.
 - Ask for a replacement within 15 invoice days.
 - Ask for free repair in 365 invoice days.
- This warranty does not cover defects caused by modification, alteration, misuse or physical abuse of the product.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.

SMART LOCK GATEWAY

G5

User Manual

SMART LOCK GATEWAY G5

Model :	G5
Dimensions :	75mm x 75mm x 24mm
Network :	WiFi 2.4G/5G
IEEE standard :	802.11 b/g/n/ac/ax
Power interface :	Type-C USB
Power input :	DC 5V/500mA

Light Status



When the Gateway is powered on:

 
- Flashing Red/Blue lights:
Stand-by mode - Ready to Pair
- Blue light: Normal mode
- Red light: Network failure

Pair the Gateway with APP

1 Open the APP




2 Touch the “≡” icon on the top left of the screen




3 Select [Gateway]



 4 Select [G5]



5 Plug in the Gateway and power it on

 

6 While the light is flashing alternately in red and blue, press "+" sign



7 Add Gateway



8 Select the network (supporting 5G WIFI) and enter the password.



⚠ Notice: If the above process times out, please power off and try again.

Limited Warranty

- For any defect in material and workmanship, the original purchaser of the product can:
 - Return or ask for a replacement within 7 invoice days.
 - Ask for a replacement within 15 invoice days.
 - Ask for free repair in 365 invoice days.
- This warranty does not cover defects caused by modification, alteration, misuse or physical abuse of the product.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.