

ATTACHMENT PHOTOGRAPHS OF EUT

Photo 1



Photo 2

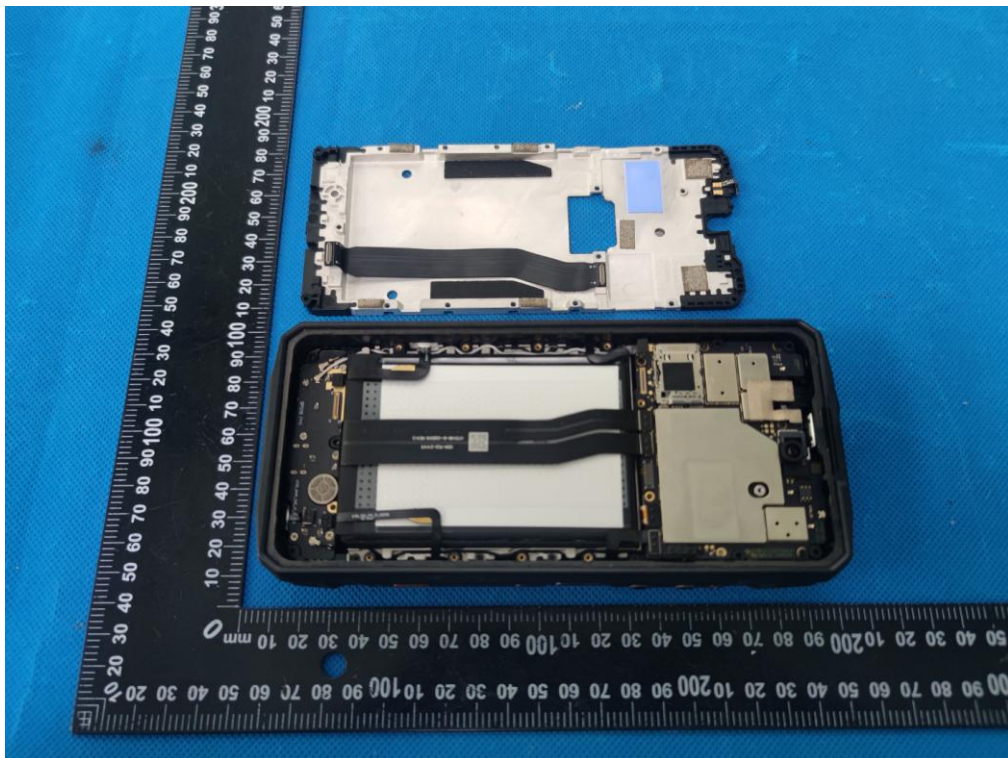


Photo 3

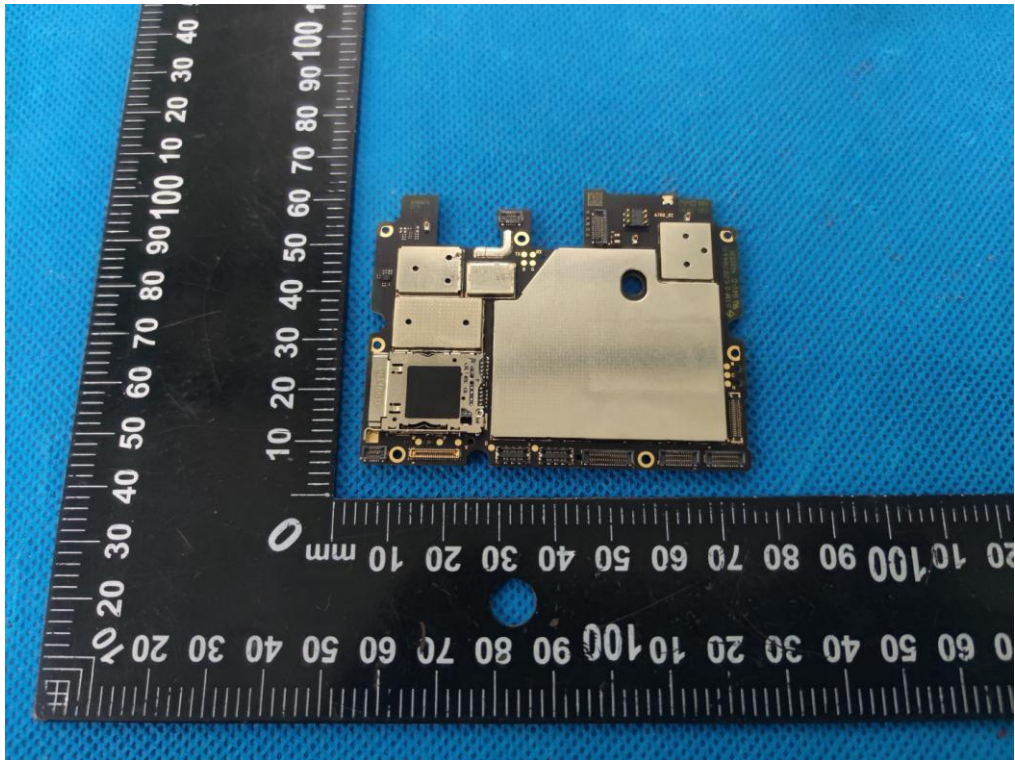


Photo 4

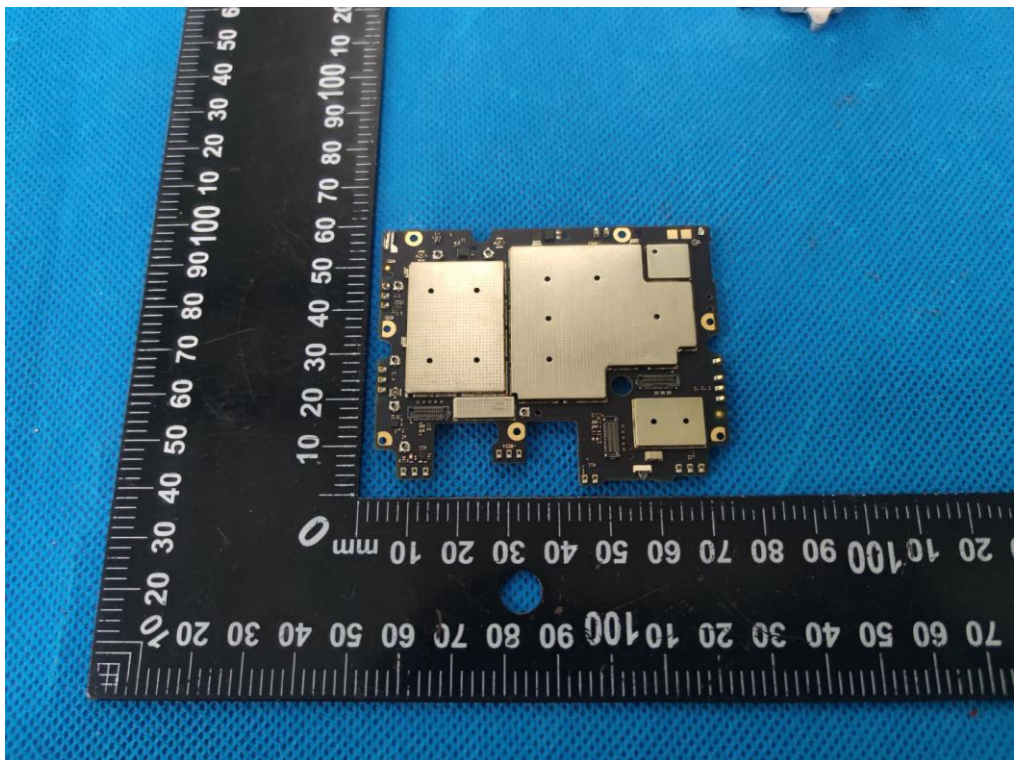


Photo 5

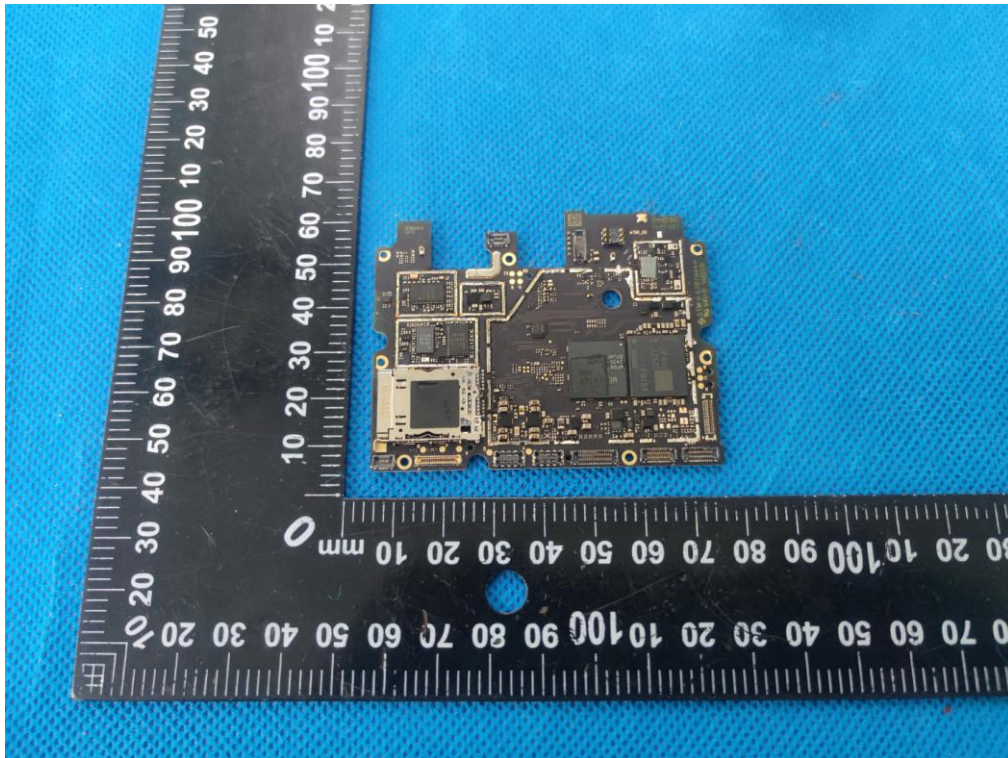


Photo 6

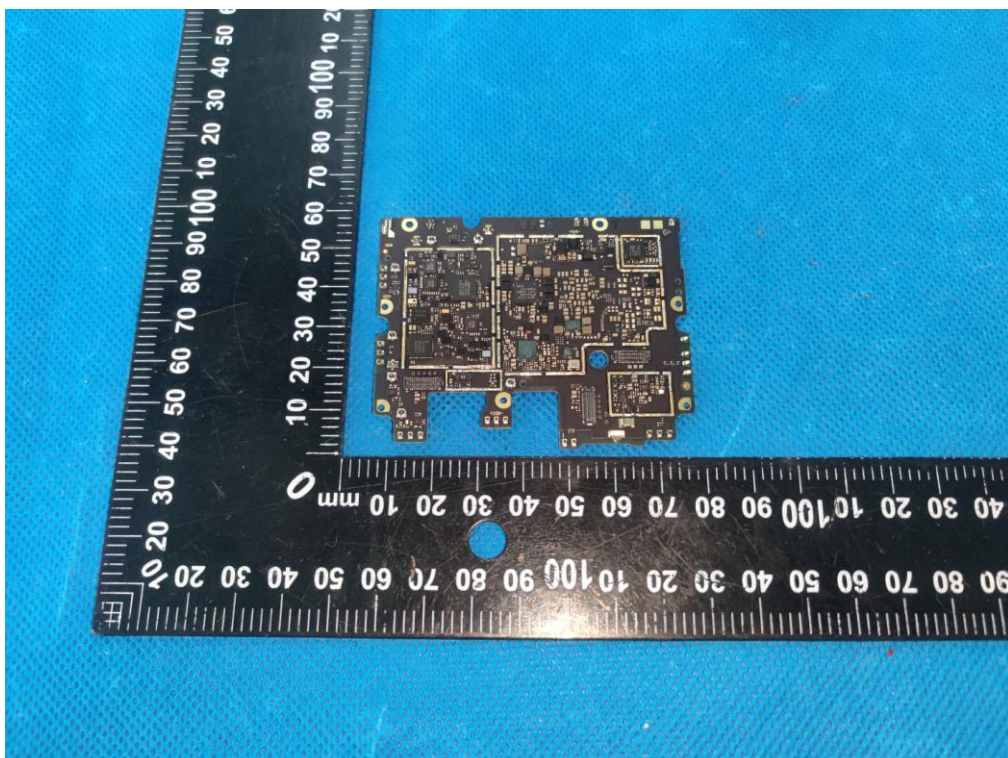


Photo 7

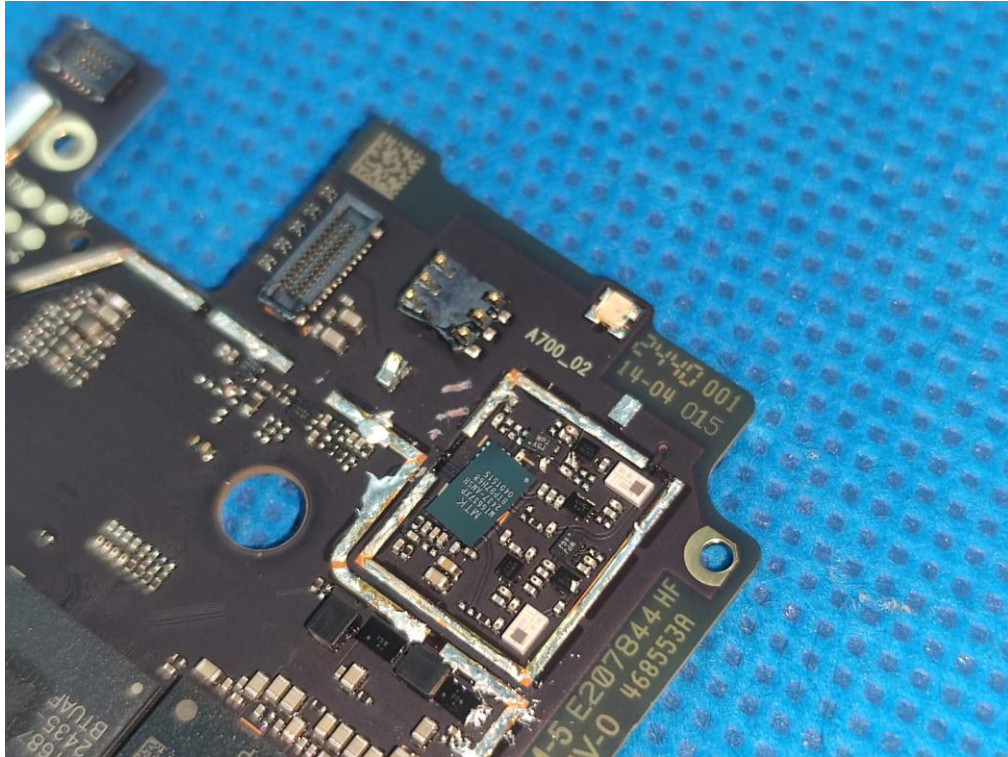


Photo 8

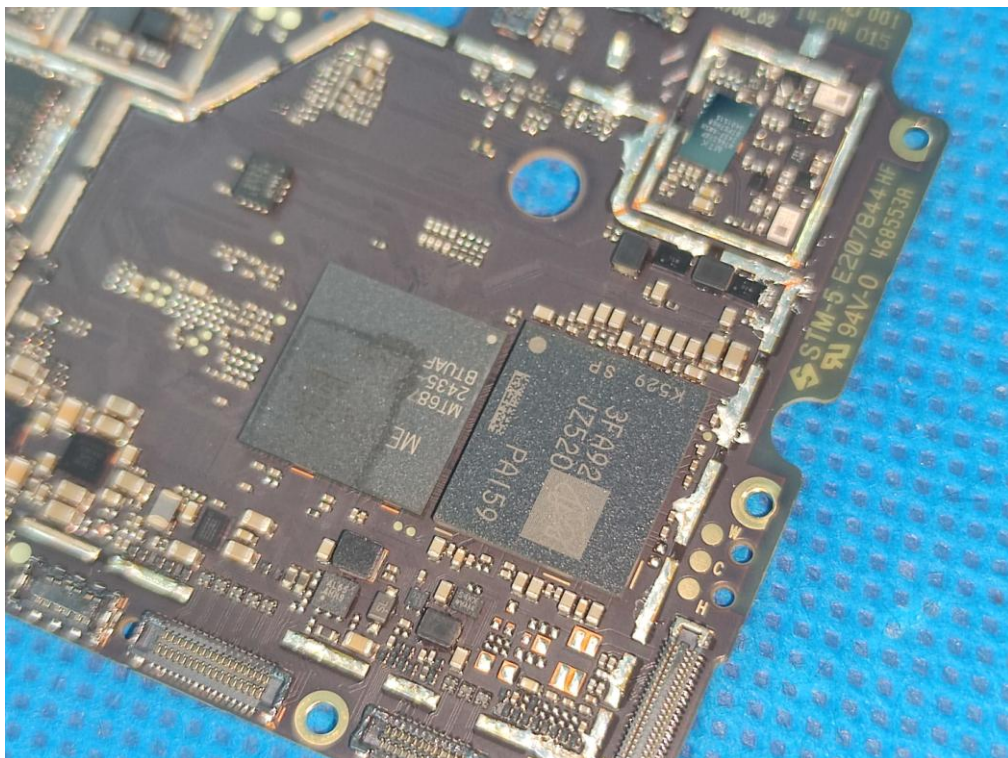


Photo 9

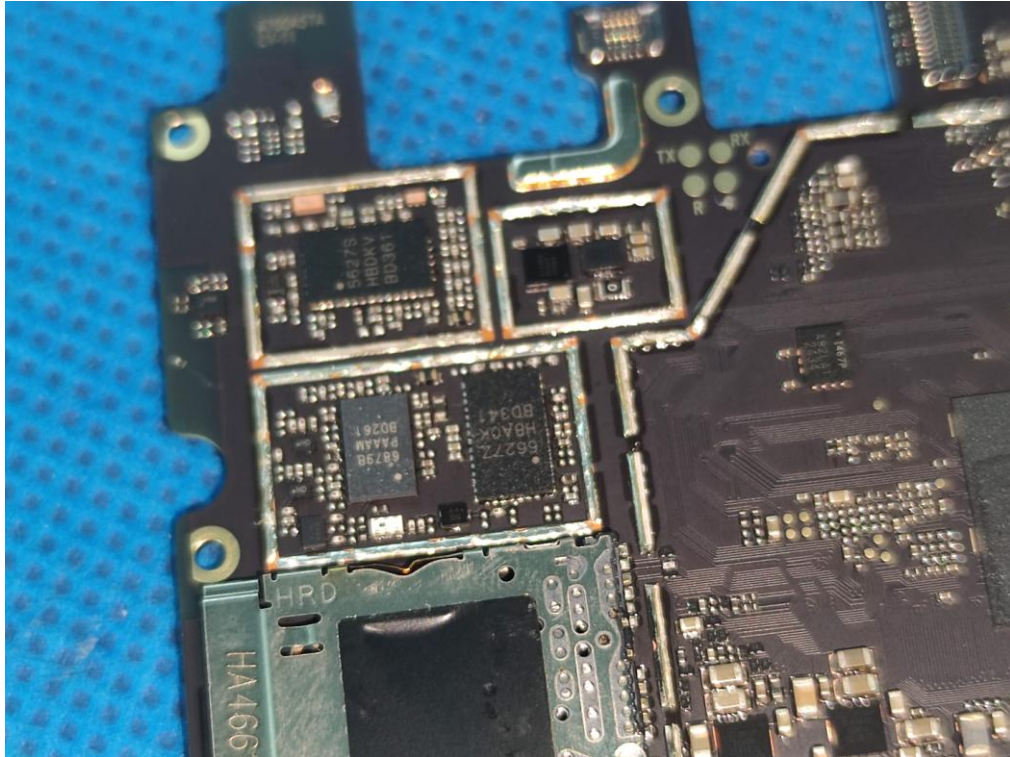


Photo 10

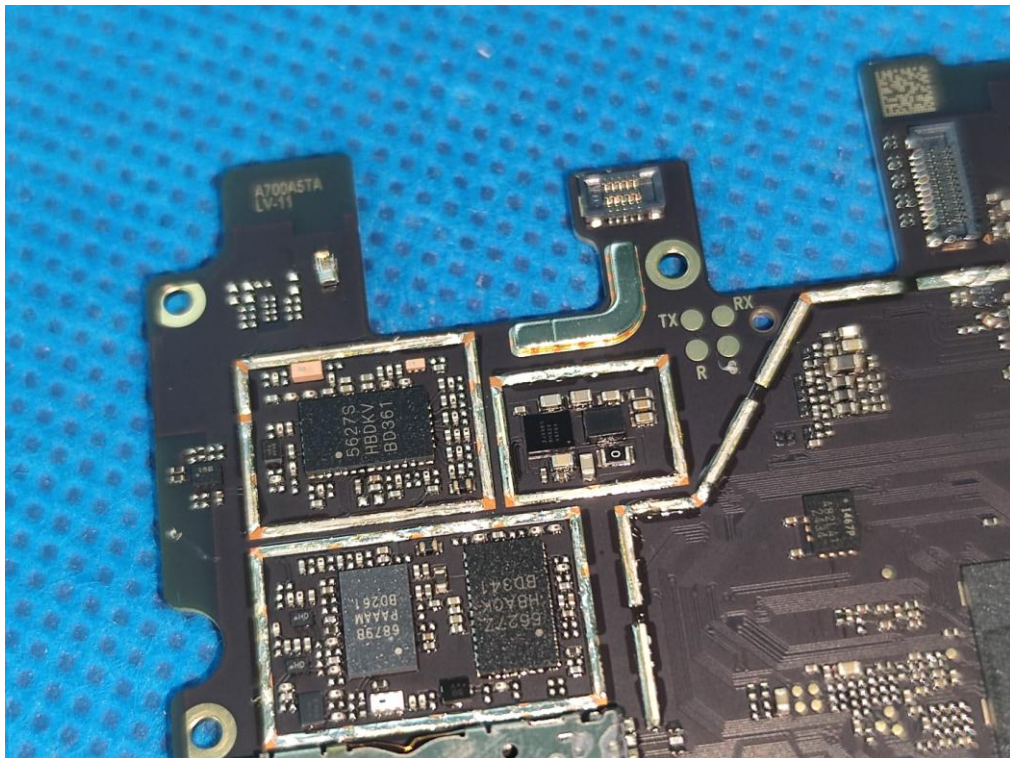


Photo 11

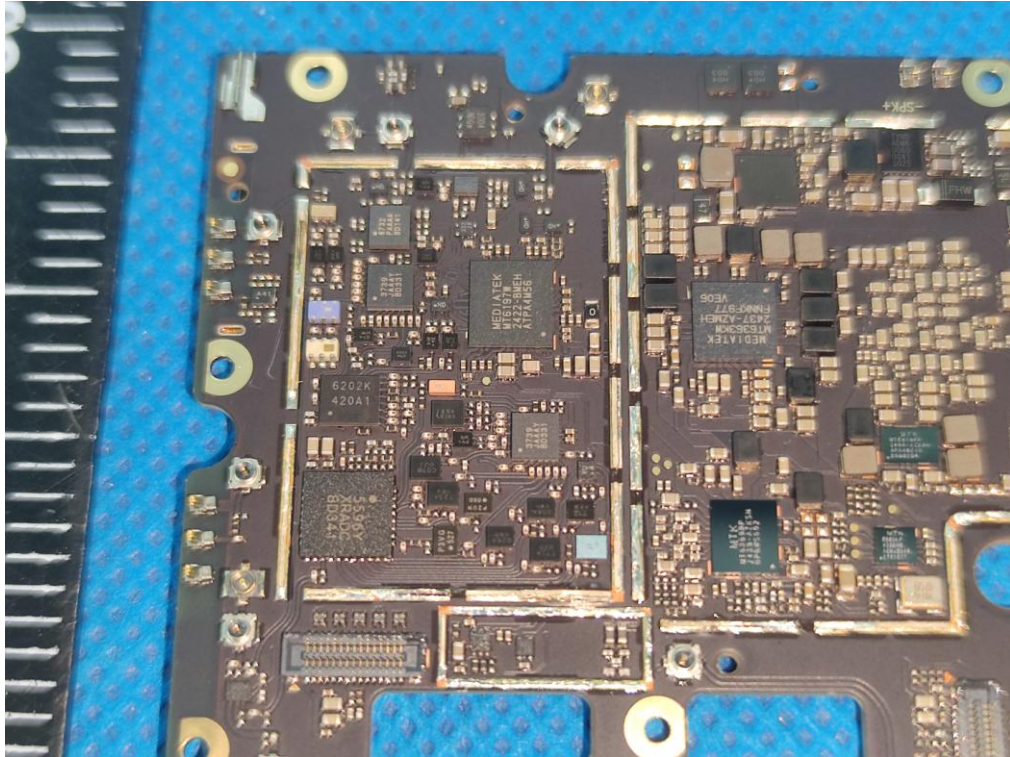


Photo 12

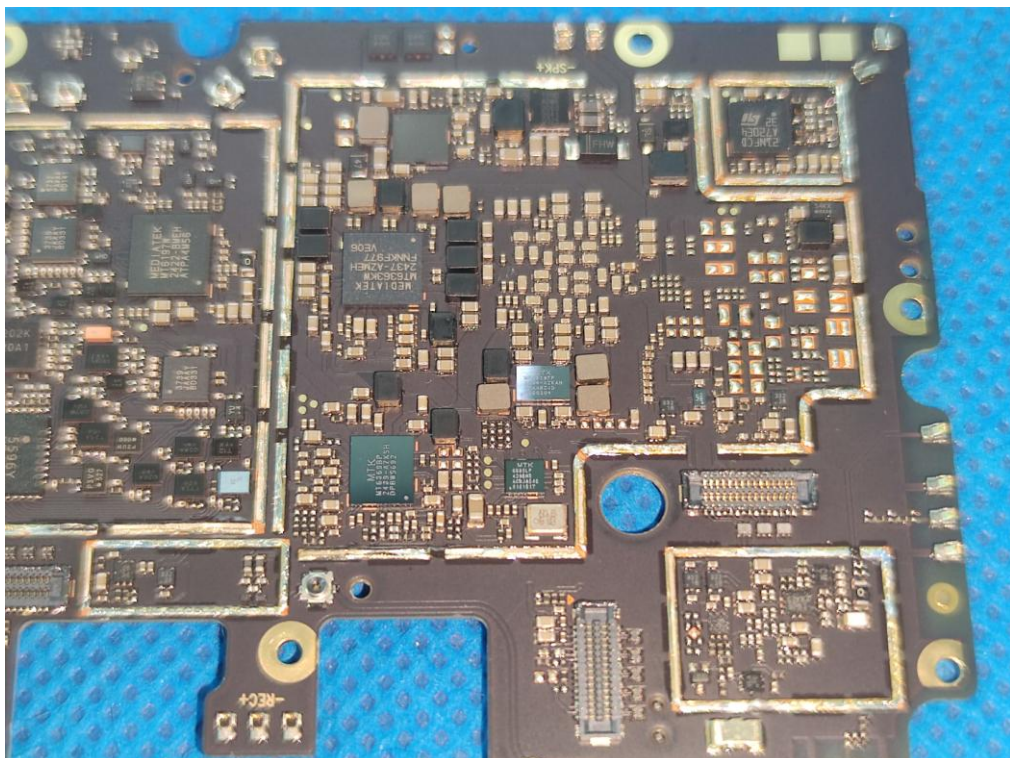


Photo 13

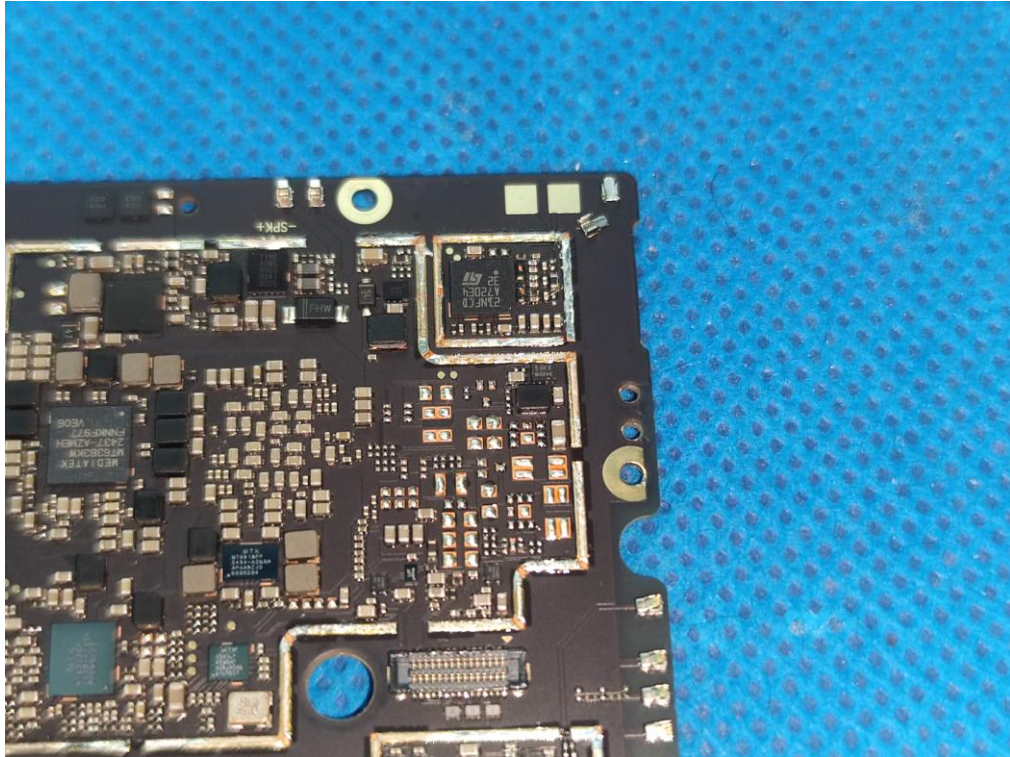


Photo 14

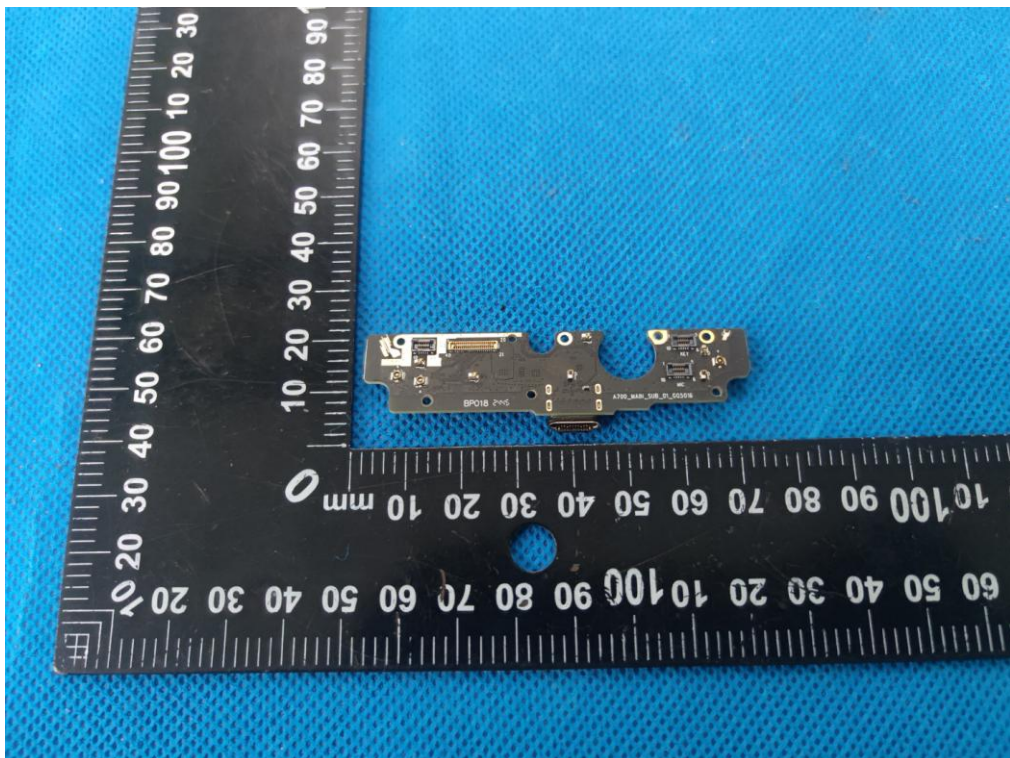


Photo 15

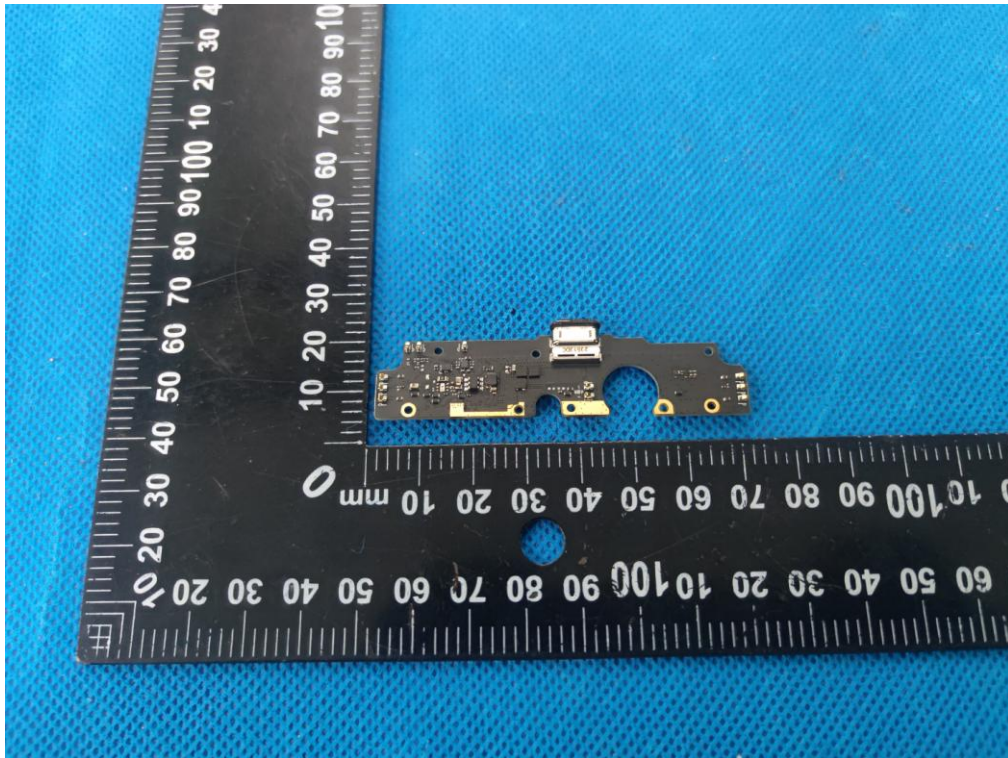


Photo 16

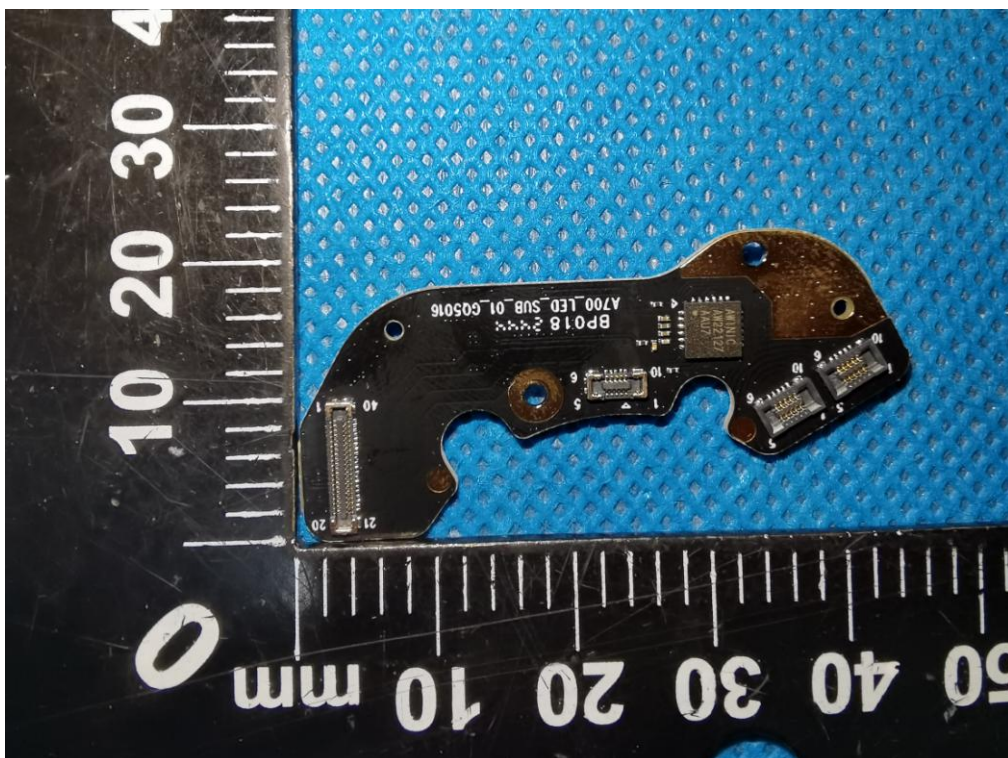


Photo 17

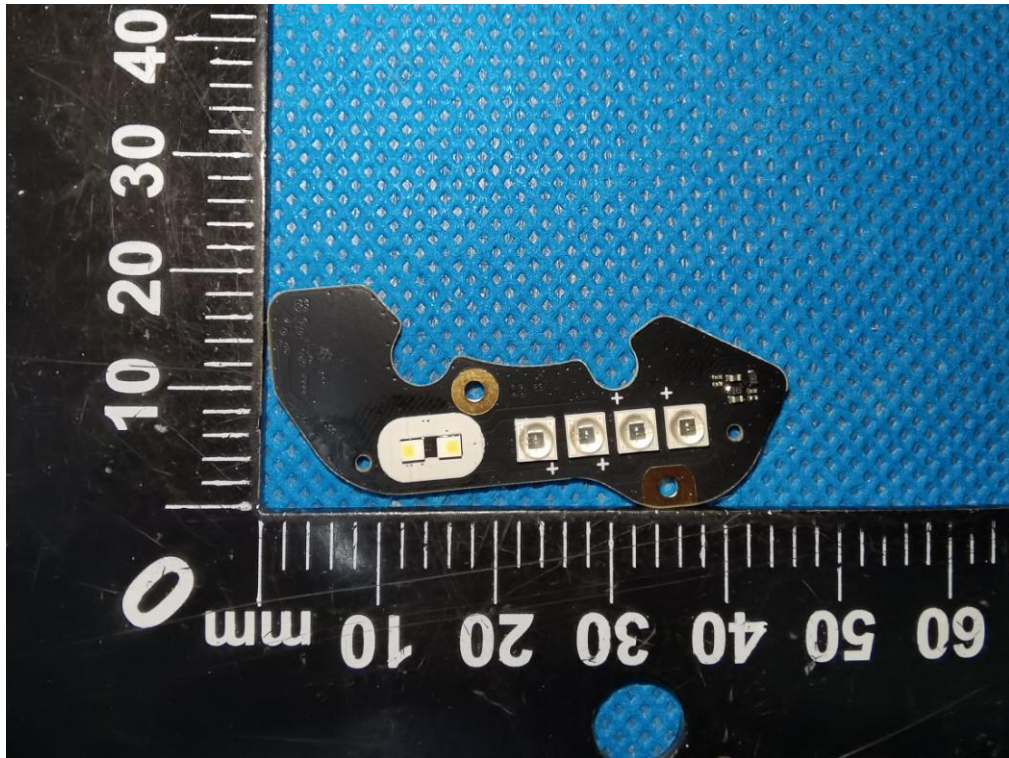


Photo 18



Photo 19

ANT	function	details
ANT0	2.4G_5G_WIFI/BT	Transmit
ANT2	LTE B41 Receive	LTE B41 Receive Only
ANT5	4G_B41 Transmit	LTE B41 Transmit
ANT6	2G_850/1900 TRX 3G_B2/B4/B5 TRX 4G_FDD-B2/B4/B5/B12/B17/B66/B71 TRX 5G_FDD-N71 TRX	GSM/WCDMA/LTE/NR Transmit
ANT8	2.4G_5G_WIFI_MIMO	Transmit

Photo 20

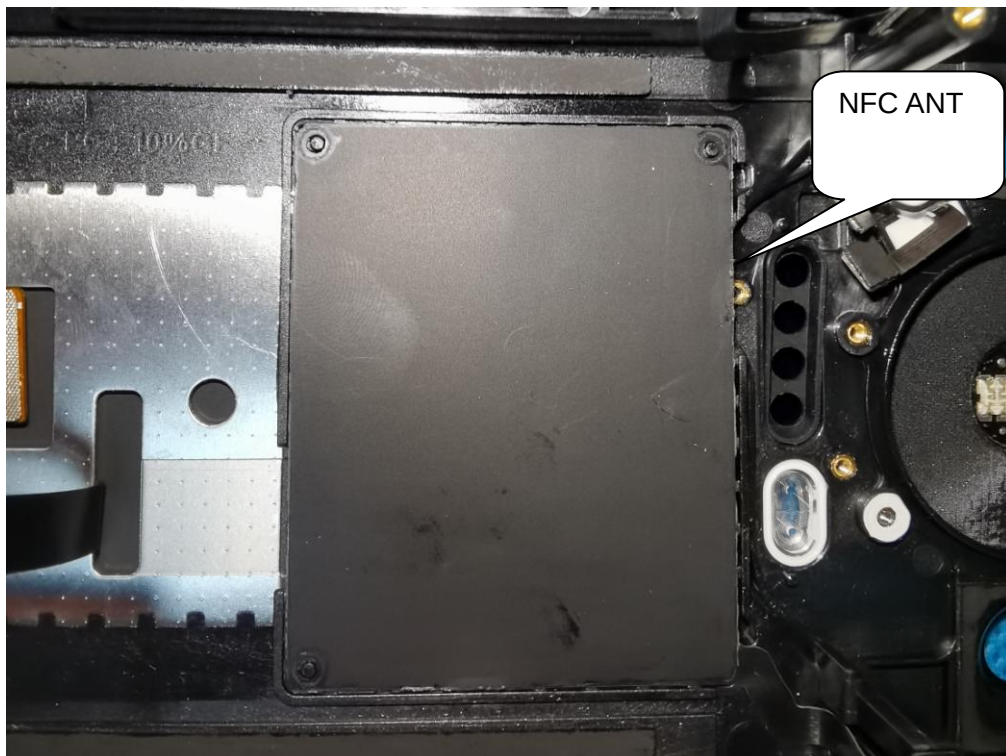


Photo 21

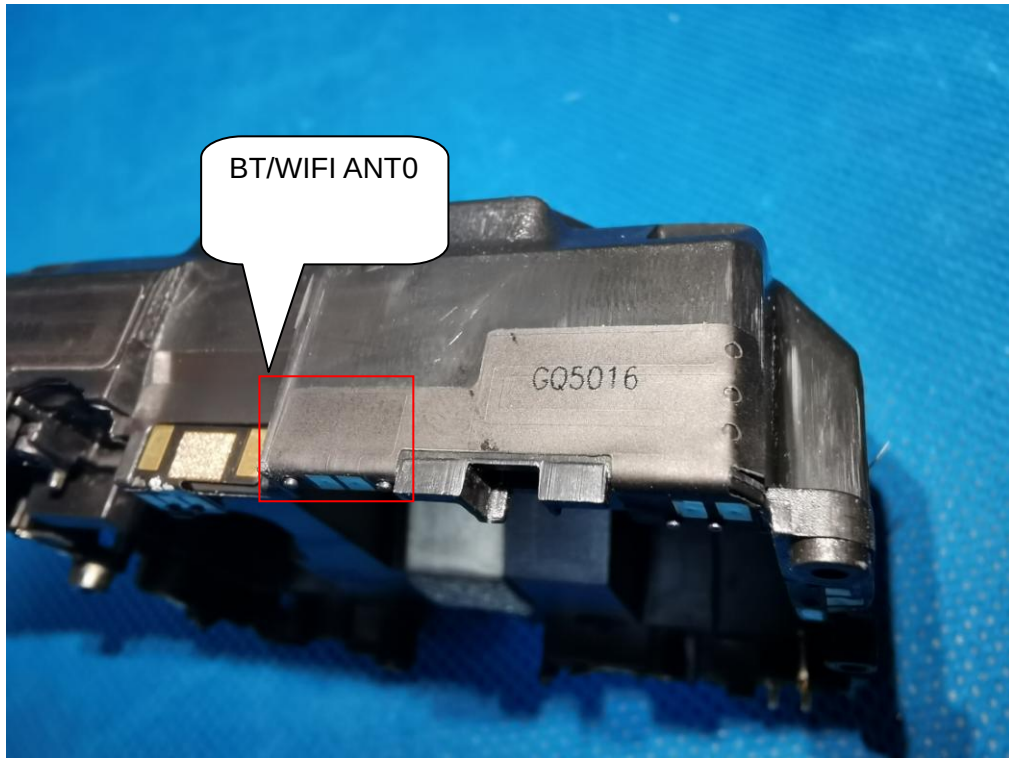


Photo 22



Photo 23

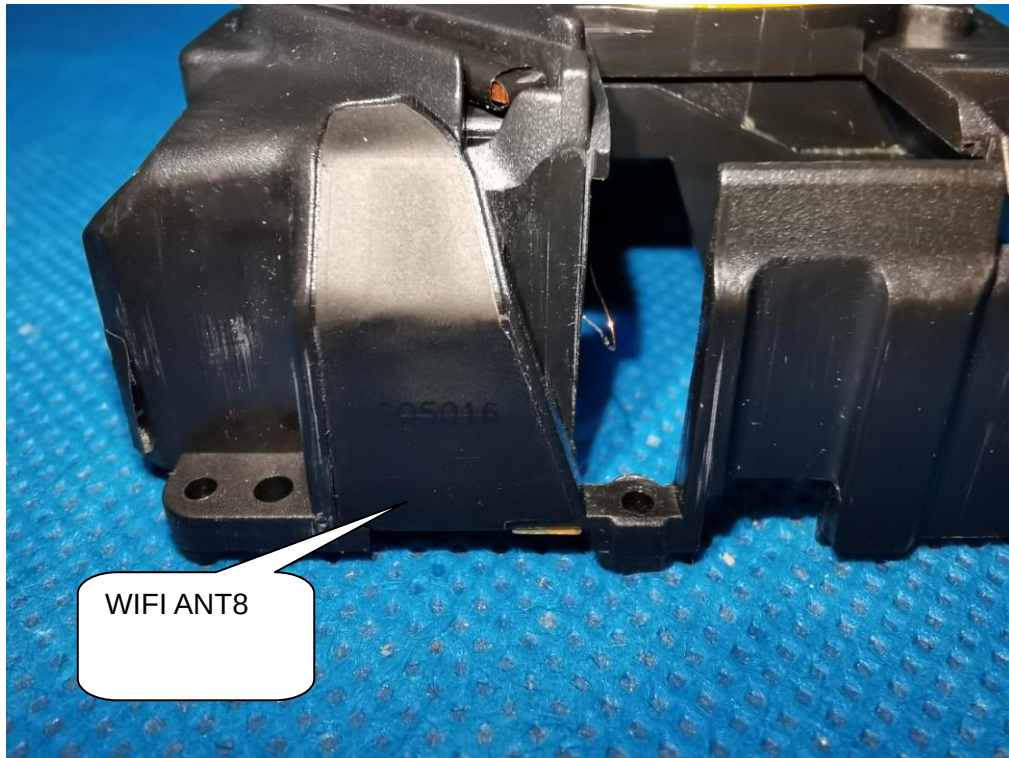


Photo 24



Photo 25

