



WIRELESS SPORT EARBUDS

WITH BUILT-IN MIC & CHARGING CASE



PRE-CHARGED
AND READY TO USE



PLAY TIME
4-5 HOURS



CHARGING
CASE INCLUDED



33 FEET
RANGE

SPECIFICATION

VERSION: 5.0 BLUETOOTH CHIPSET
SUPPORT PROFILES:A2DP,AVRCP,HFP
WORKING DISTANCE:10 METERS
MUSIC TIME: UP TO 3 HOURS
TALK TIME: > 2 HOURS
STANDBY TIME: > 20 HOURS
CHARGING VOLTAGE: 5V D.C.
BATTERY CAPACITY(CHARGING CASE): 200mAh
CHARGE TIME(CHARGING CASE): AROUND 1 HOUR
BATTERY CAPACITY(EARPHONES): 2 X 25 mAh
CHARGE TIME(EARPHONES): 40MINS APPROX
PAIRING WINDOW TIME:5 MINUTES
PAIRING NAME: RBX BT SPORT TWS

INCLUDES

TRUE WIRELESS EARBUDS
CHARGING CASE
CHARGING CABLE(USB-C CABLE)
SMALL AND LARGE EAR TIPS



RBXACTIVE.COM

Manufactured by Lifeworks Technology Group LLC, under license from TRB Acquisitions LLC. New York, NY 10001.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lifeworks technology Group LLC is under license. Other trademarks and trade names are those of their respective owners.



FCC STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES, OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF FCC RULES, THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION GUIDE, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA,
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND THE RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED,
- CONSULT A SERVICE REPRESENTATIVE FOR HELP.

PROPERLY SHIELDED AND GROUNDED CABLES AND CONNECTORS MUST BE USED IN ORDER TO COMPLY WITH FCC EMISSION LIMITS. LIFEWORKS IS NOT RESPONSIBLE FOR ANY RADIO OR TELEVISION INTERFERENCE CAUSED BY USING OTHER THAN RECOMMENDED CABLES AND CONNECTORS OR BY UNAUTHORIZED CHANGES OR MODIFICATIONS TO THIS EQUIPMENT. UNAUTHORIZED CHANGES OR MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

RESPONSIBLE PARTY:
LIFEWORKS TECHNOLOGY GROUP LLC
530 7TH AVE., NEW YORK, NY 10018
 TESTED TO COMPLY WITH FCC STANDARDS
FOR HOME OR OFFICE USE
FCC ID : 2AP8A-2RBTW1175

HEALTH AND SAFETY WARNINGS

 WARNING IMPROPER SETUP, USE AND CARE OF THIS PRODUCT CAN INCREASE THE RISK OF SERIOUS INJURY DEATH OR DEVICE DAMAGE. READ AND KEEP THIS GUIDE AND ALL OTHER PRINTED GUIDES FOR FUTURE REFERENCE. FOR UPDATED GUIDES OR REPLACEMENTS GO TO GOLIFEWORX.COM

 DO NOT ATTEMPT REPAIRS, DO NOT ATTEMPT TO TAKE APART, OPEN, REPAIR, SERVICE OR MODIFY THE DEVICE(S). DOING SO MAY RISK ELECTRIC SHOCK OR OTHER HAZARD. EVIDENCE OF ANY ATTEMPT TO OPEN OR MODIFY THE DEVICE, INCLUDING ANY PEELING, PUNCTURE OR REMOVAL OF LABELS, WILL VOID THE LIMITED LIFETIME WARRANTY.

The device has been evaluated to meet general RF exposure requirement.

HOW TO USE

POWER ON
WHEN THE CHARGING CASE IS OPENED AND THE EARBUDS ARE REMOVED FROM THE CASE, BOTH EARBUDS WILL AUTOMATICALLY POWER ON AND SYNC UP. OR WHEN THE EARBUDS ARE OFF YOU CAN PRESS AND HOLD BOTH TOUCH BUTTONS FOR 5 SECONDS TO TURN THEM ON.

POWER OFF
PUT EARBUDS BACK INTO THE CHARGING CASE AND CLOSE THE LID,THEY WILL BE AUTOMATICALLY POWERED OFF; OR YOU CAN PRESS AND HOLD BOTH EARBUD TOUCH BUTTON AT THE SAME TIME FOR 5 SECONDS,BOTH EARBUDS WILL BE TURNED OFF.PLEASE NOTE, IF YOU JUST HOLD AND PRESS ONE OF EARBUD FOR 7 SECONDS, THEN THE OTHER SIDE WILL CONTINUE WORKING.

PAUSE
PRESS EITHER O BUTTON

PLAY
PRESS EITHER O BUTTON

NEXT TRACK
PRESS THE RIGHT O BUTTON 3 TIMES IN QUICK SUCCESSIONS

PREVIOUS TRACK
PRESS THE LEFT O BUTTON 3 TIMES IN QUICK SUCCESSIONS

ANSWER CALL
PRESS EITHER O BUTTON

REJECT CALL
PRESS AND HOLD EITHER O BUTTON FOR 2 SECONDS

END CALL
PRESS EITHER O BUTTON

ACTIVATING PHONE ASSISTANT
PRESS AND HOLD EITHER O BUTTON FOR 2 SECONDS AND RELEASE YOUR HAND

VOLUME UP
PRESS THE RIGHT O BUTTON 2 TIMES IN QUICK SUCCESSIONS

VOLUME DOWN
PRESS THE LEFT O BUTTON 2 TIMES IN QUICK SUCCESSIONS

PAIRING THE EARBUDS WITH BLUETOOTH DEVICES

- GO TO "BLUETOOTH" SETTINGS ON YOUR BLUETOOTH DEVICE (PHONE, TABLET, ETC.).
- TURN THE BLUETOOTH ON, ON YOUR DEVICE.
- OPEN THE CHARGING CASE, THEY WILL AUTOMATICALLY TURN ON (OR THEY CAN BE TURNED ON MANUALLY). THE LED INDICATORS ON THE LEFT AND RIGHT EARBUDS WILL FLASH BLUE AND RED AS THEY AUTOMATICALLY SYNC TO EACH OTHER, ONCE SYNCED THE EARBUDS WILL ENTER PAIRING MODE, WHICH IS IDENTIFIABLE BY ONE SLOWLY FLASHING BLUE WHILE THE OTHER CONTINUES TO FLASH BLUE AND RED.
- ON YOUR BLUETOOTH DEVICE, SELECT THE PAIRING NAME OF YOUR EARBUDS ON THE LIST OF AVAILABLE DEVICES.

PAIRING NAME IS: RBX BT SPORT EARBUDS

- THE EARBUD LED INDICATOR WILL SLOWLY FLASH BLUE ONCE CONNECTED.

TROUBLE SHOOTING TIP
IF THE EARBUDS DO NOT CONNECT TO YOUR DEVICE, TURN THE EARBUDS OFF, TURN YOUR DEVICE'S BLUETOOTH OFF AND THEN BACK ON, THEN REPEAT THE PAIRING PROCESS).

PHONE CALLS
IF THERE IS AN INCOMING CALL ON YOUR BLUETOOTH DEVICE, THE EARBUDS WILL PAUSE ANY PLAYBACK AND RING TO ALERT YOU OF THE CALL. TO ANSWER THE CALL, PRESS EITHER EARBUD BUTTON. TO END A CALL, PRESS THE EITHER EARBUD BUTTON AGAIN.

CHARGING THE CASE

- CONNECT THE USB TYPE-C CHARGING CABLE INTO THE SOCKET ON THE CHARGING CASE.
- PLUG THE CABLE INTO A STANDARD USB 5V/1A OUTPUT.
- THE CASE LED INDICATOR WILL FLASH WHITE WHILE THE CASE IS CHARGING AND WILL STAY ON WHEN FULLY CHARGED
- WHEN FULLY CHARGED, UNPLUG THE CHARGING CABLE.

WARNING
TO AVOID DAMAGE TO THE CHARGING CASE, PLEASE ONLY USE A 5V/1A CHARGER.

CHARGING THE EARBUDS

- PUT THE EARBUDS INTO THE CHARGING CASE, ENSURING THAT THE CHARGING PRONGS MAKE FULL CONTACT.
- THE EARBUD LED INDICATOR WILL STAY RED WHILE CHARGING. WHEN CHARGING IS COMPLETE THE LED WILL TURN BLUE AND THEN TURN OFF COMPLETELY AFTER 30 SECONDS LATER, WHEN THE EARBUD ARE CHARGING, THE CHARGING CASE LED LIGHT FLASH WHITE. WHEN THE EARBUD IS LOW BATTERY, THE RED LIGHT FLASHES AND THE LOW BATTERY PROMPT TONE IS HEARD EVERY 30 SECONDS.

(NOTE:THE EARBUDS COME WITH A BUILT-IN RECHARGEABLE BATTERY. BEFORE USING THEM FOR THE FIRST TIME, WE RECOMMEND YOU FULLY CHARGE THE BATTERY.A FULL CHARGE TAKES AROUND 1 HOUR).

IN ORDER TO ENSURE THE BATTERY LIFE,THE EARBUDS AND CHARGING CASE SHOULD BE CHARGED NORMALLY ONCE A MONTH.

WARNING
THE EARBUDS CAN BE USED WITH THE PROVIDED CHARGING CASE ONLY.