

XXXX = Serial number starting from 0001 in every PO