 













157g铜版纸 双面彩印

风琴页折页

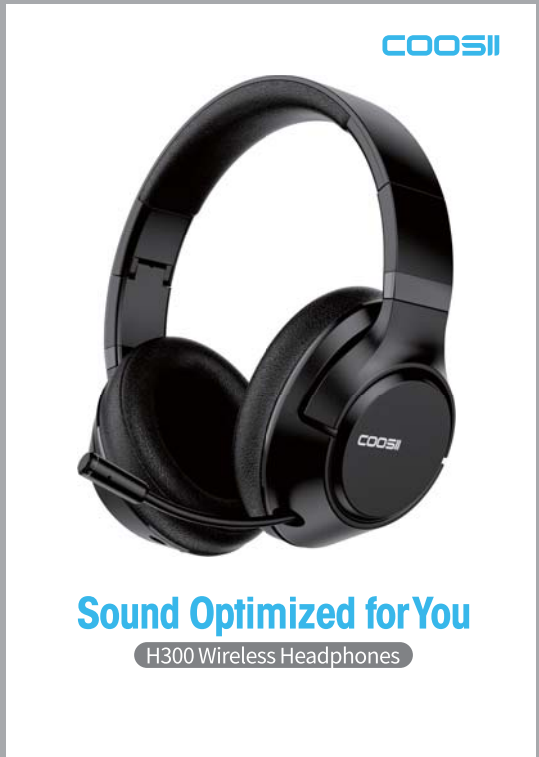

Contents

           1. What's in the Box
2. Schematic
3. Wearing
4. Bluetooth Connection
5. Dongle Connection
6. LED Indicators
7. Button Control
8. Turn on/off Microphone
9. Charging the Battery
10. Troubleshooting
11. Specification
12. Warning

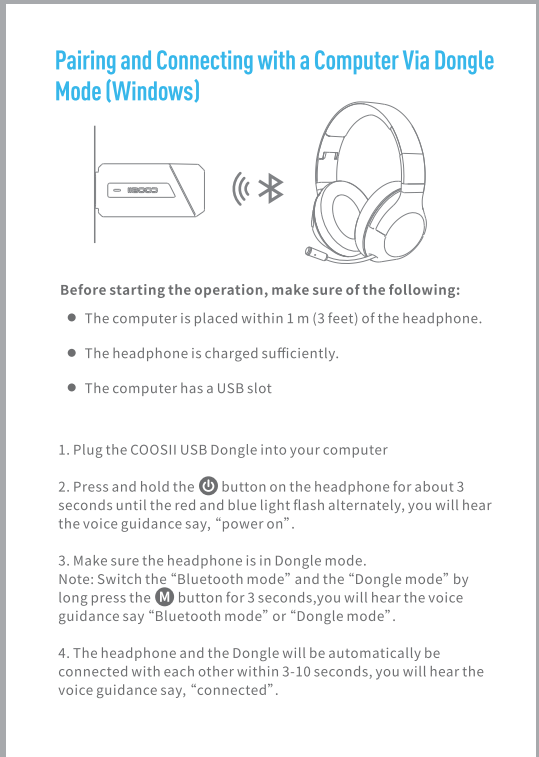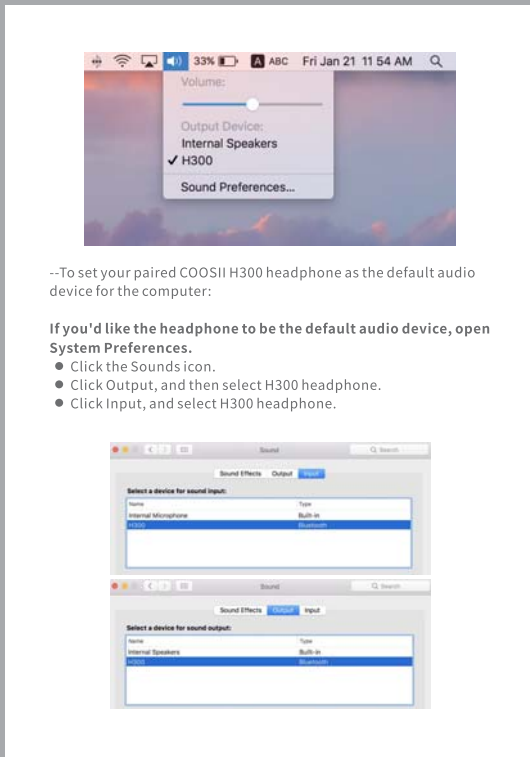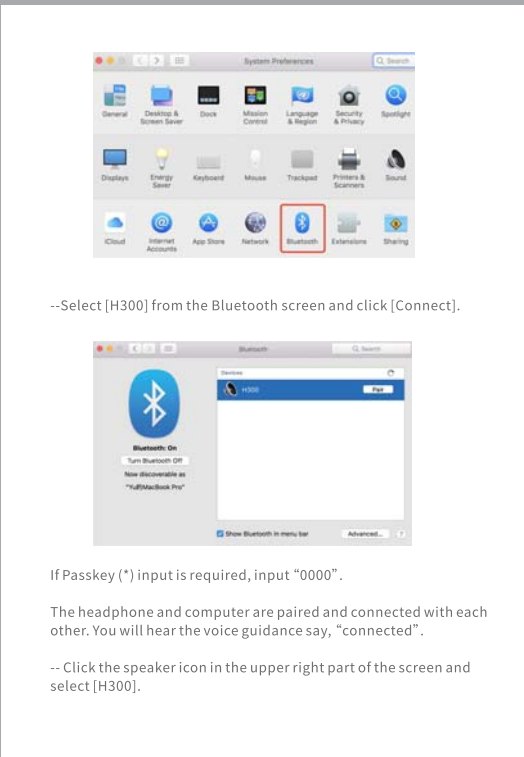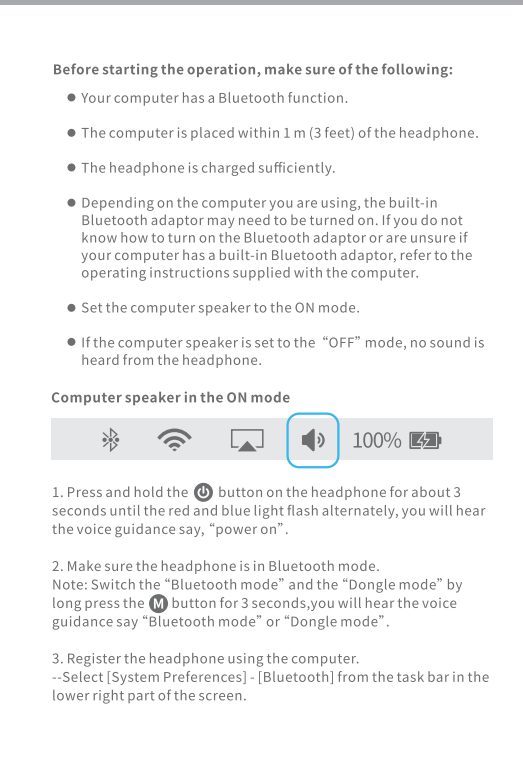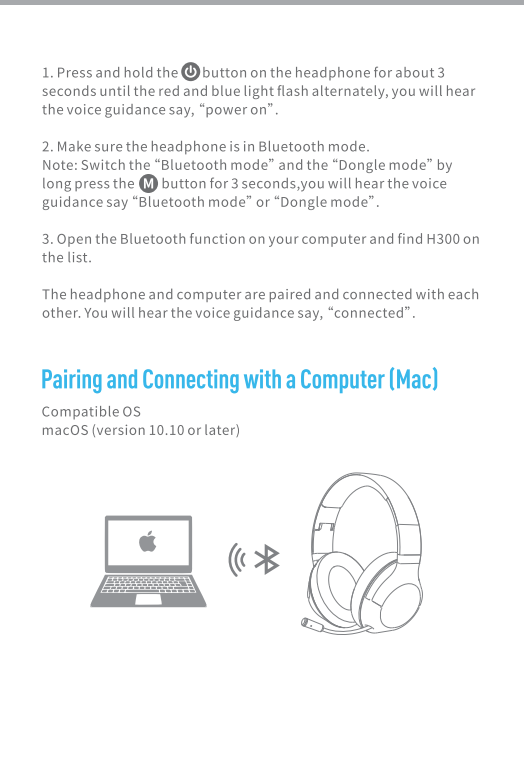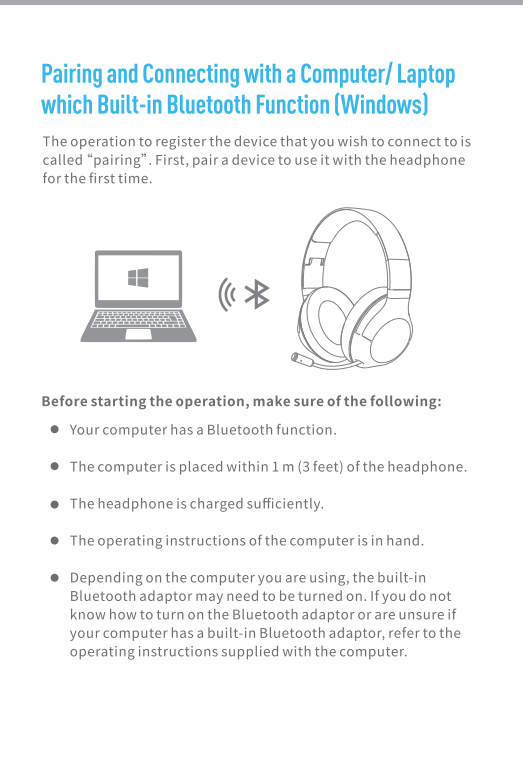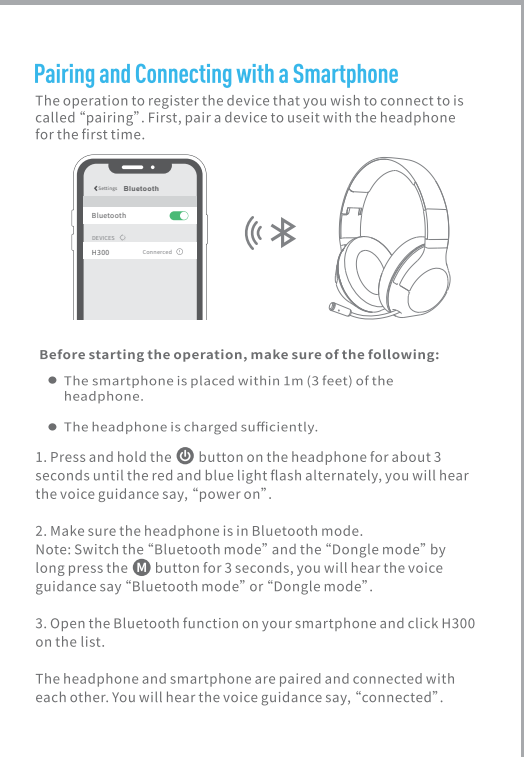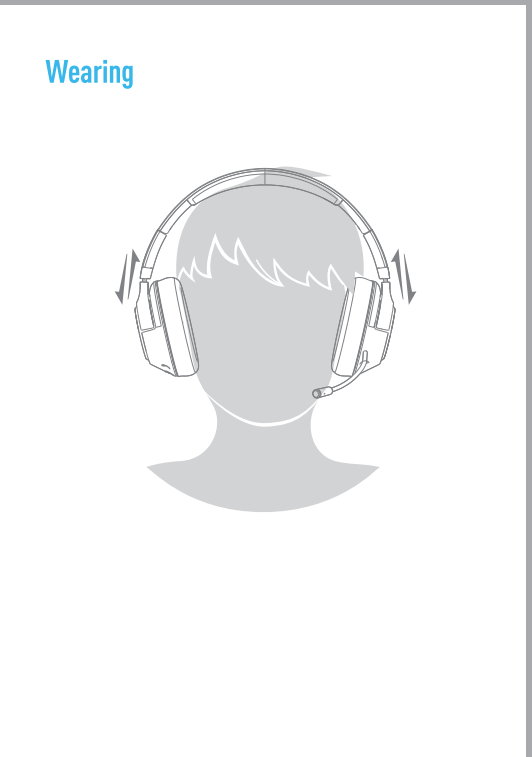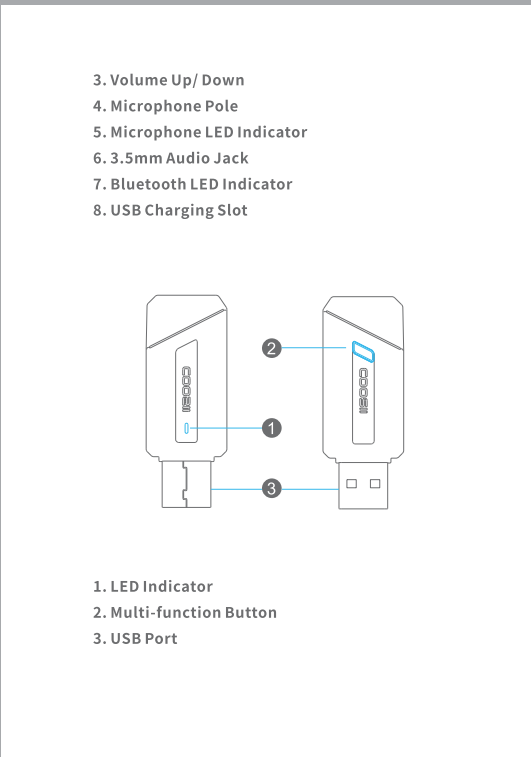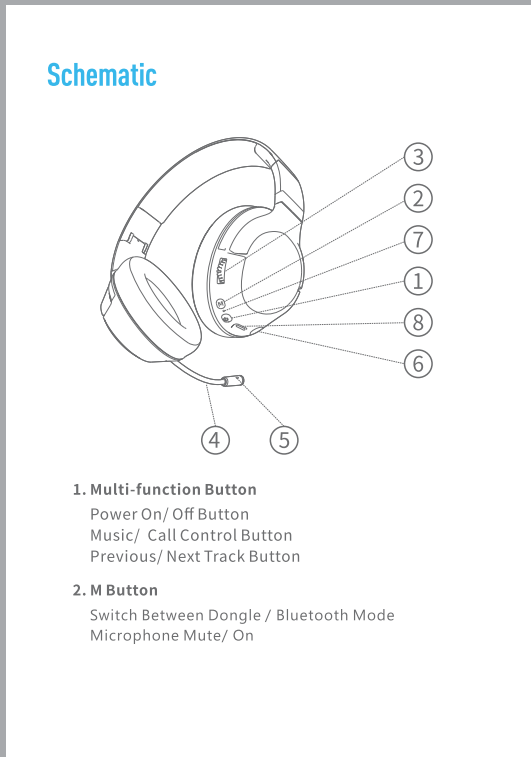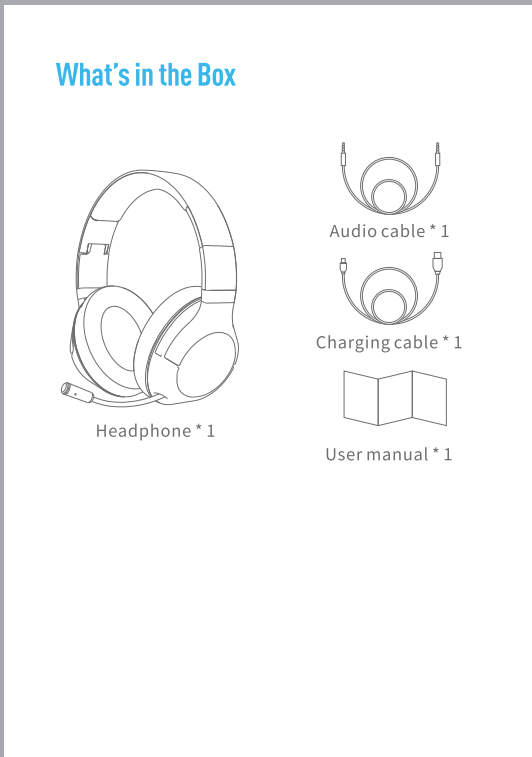

LED Indicator on Headphone

Indicator activity	System state
Red light blinking triple for every 5 seconds	Low battery
Blinking blue and red	In pairing mode
Blue light on for 1 second	Power on
Solid red	Charging

LED Indicator on USB Dongle

Indicator activity	System state
Solid blue	Connected
Blinking blue and red	In pairing mode



LED Indicator on Microphone Pole

Indicator activity	System state
Solid blue	Microphone on
No light	Microphone off

Button Control

* MFB= multi-function button

Indicator activity	System state
Power on	Press and hold th MFB for 3 seconds
Power off	Press and hold th MFB for 2 seconds
Volume +/-	Move the roller up and down
Answer a call	Press the MFB once
Reject a call	Double press the MFB
End a call	While on a call, press the MFB once
Next track	Double press the MFB
Previous track	Triple press the MFB
Turn on/off the microphone	Press the M button once
Switch Dongle mode / Bluetooth mode	Press and hold the M button for 3 seconds

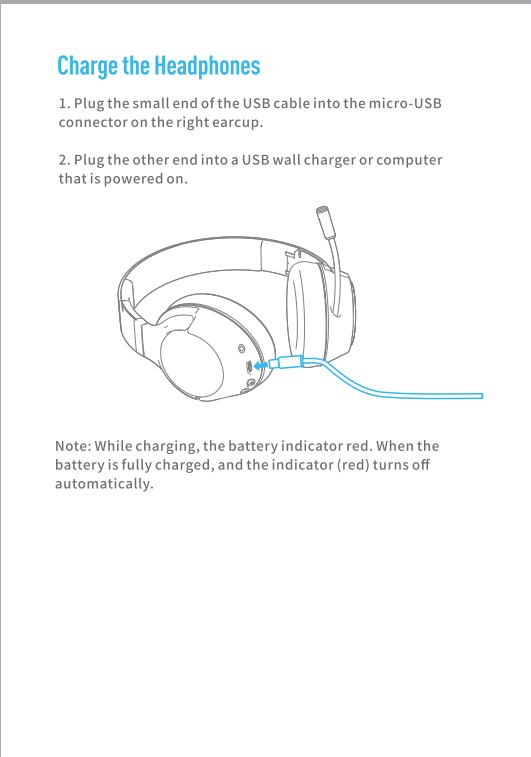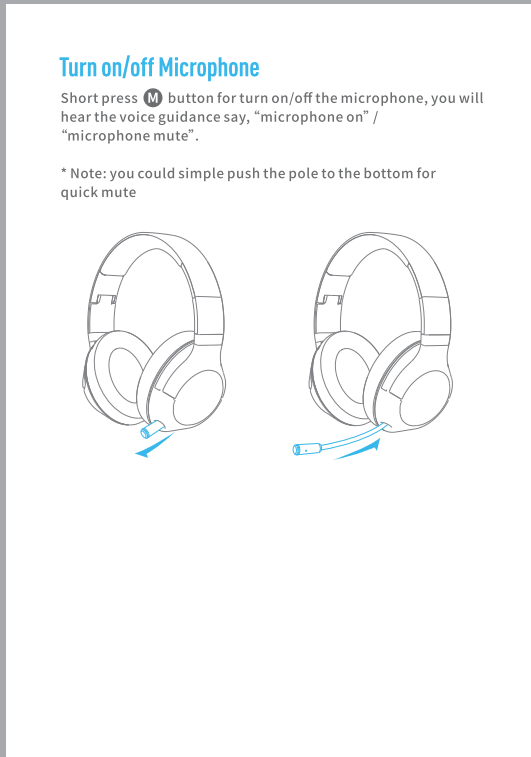  

Common solutions

If you could not resolve your issue, see the table below to identify symptoms and solutions to common problems. If you are unable to resolve your issue, contact COOSII customer service.

Symptom	Solution
Headphones don't power on	Charge the battery
Headphones don't connect with your mobile device	• Check the state of the status indicators. • On your mobile device: - Disable the Bluetooth feature and then re-enable. - Delete your H300 wireless headphones from the Bluetooth list on your device. Connect again. • Move your mobile device closer to the headphones and away from any interference or obstructions. • Connect another mobile device.
No sound	• Increase the volume on your headphones, your mobile device and music source.

	• Move your mobile device closer to the headphones and away from any interference or obstructions. • Use a different music source. • Connect another mobile device. • If two mobile devices are connected, pause your other device first. • If two mobile devices are connected, move the devices within range of the headphones (30 ft. or 10 m).
Poor sound quality	• Use a different music source. • Connect another mobile device. • Move your mobile device closer to the headphones and away from any interference or obstructions.
Battery won't charge	• Secure the ends of the USB charging cable. • Try another charging source. • If your headphones have been exposed to high or low temperatures, let the headphones return to room temperature and try charging again.

Specification

Model Name	H300
Impedance	320 ± 15%
Frequency Response	20-20000Hz
Sensitivity	114dB±3dB
Bluetooth Version	V5.0
Drive Unit	45mm
Operation range	33 feet
Charging time	>2 hours
Bluetooth protocol	A2DP/AVRCP/SMP/HFP

Please read and keep all safety and use instructions.

WARNINGS/CAUTIONS

- Do NOT use the headphones at a high volume for any extended period.
- To avoid hearing damage, use your headphones at a comfortable, moderate volume level.
- Turn the volume down on your device before placing the headphones in on your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Do NOT use your headphones while driving for phone calls or any other purpose.
- Do NOT use the headphones if they emit any loud unusual noise. If this happens, turn the headphones off and contact COOSII customer service.
- Remove headphones immediately if you experience a warming sensation or loss of audio.

