

Wireless Speaker

User Manual



- Bluetooth® Clip Speaker (1)
- USB-C to USB-A charging cable (1)
- User manual (1)

© 2025 Caterpillar. All Rights Reserved. CAT, CATERPILLAR, LET'S DO THE WORK, their respective logos, "Caterpillar Corporate Yellow," the "Power Edge" and Cat "Modern Hex" trade dress as well as corporate names and product identity used herein, are trademarks of Caterpillar and may not be used without permission. Arnes Manufacturing is a Division of Boss Tech Products, Inc., a licensee of Caterpillar Inc.



POWER ON/OFF
Press & hold the multi-function button for 3 seconds. When the speaker turns on or off, you will hear "power on" or "power off."

When the battery reaches low power, the speaker will prompt “battery low” every 75 seconds. If you do not connect the speaker to charge, the prompt will continue for 5-10 minutes, at which time the speaker will power off.

After your device is successfully paired, you are ready to play music. Press & release +/- buttons to **adjust volume**. Press & hold +/- buttons to **toggle through songs**. Press & release the multi-function button to **play or pause**.

When successfully paired with your device, press the & release the multi-function button to **answer the call**. Press and release the multi-function button again to **end the call**.

If you have 2 Cat® Bluetooth® Clip Speakers, you can play music through both of them simultaneously.

- Turn on both speakers at the same time.
- On both speakers, click the multi-function button 3 times to connect
- Enable Bluetooth on your device. In the list of devices found, select “CAT-BT-CLIPSPK” to pair.

If pairing is unsuccessful, remove "CAT-BT-CLIPSPK" from the Bluetooth device list on your phone and try the connection again.

The diagram shows two views of the battery pack. The top view (top image) features a grid of 100 small circles (50x20) and a central control area with a '+' sign, a '-' sign, a '*' symbol, and a small rectangular display. The bottom view (bottom image) shows the side of the battery pack with a 'DC 5V' label and a small rectangular display. Numbered callouts 1 through 6 point to specific features: 1 points to the bottom view, 2 points to the '-' sign, 3 points to the '+' sign, 4 points to the '*' symbol, 5 points to the small rectangular display on the top view, and 6 points to the small rectangular display on the bottom view.

1. Charging port
2. Multi-function button
power on/off, pause music
3. Volume up/next track
4. Volume down/previous track
5. Flashlight on/off
6. LED indicator light/flashlight


RGB LIGHT/FLASHLIGHT

Press & release the flashlight button once to turn flashlight on mode 1.
Press & release flashlight button again to turn flashlight on mode 2.

Press & release flashlight button again to turn off the flashlight.

Press & hold the flashlight button for 2 seconds to turn on RGB mode 1.

Press & hold the flashlight button again for 2 seconds to turn on Hub mode 2. Press & hold the flashlight button again for 2 seconds to turn off RGB mode.

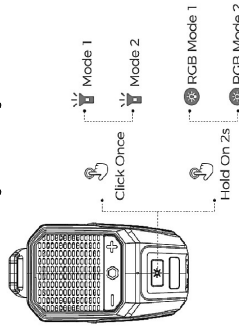

I can't hear any music.
Make sure the volume is turned up on both your device and the speaker. If you still don't hear anything, try pairing the speaker again.

I can't answer phone calls.
Not all phones support hands-free calling. Please refer to your cellular device manual.

- Device Name:** CAT-BT-CLIPSEK
Bluetooth Version: Bluetooth 5.1
Bluetooth Range: 32 feet (10 meters)
Rated Power: 30W
Maximum Output Power: 5W
Water Resistance: IP56
- Distortion Rate:** Within 5%
Battery: Built-in 3.7V 700mAh Lithium
Input: USB-C 5V 1A
Charge Time: Approximately 2.5 hours
Playtime: Approximately 4-5 hours

Charging: LED will be red when charging. When device has finished charging, the light will go out.

Pair Mode: The blue and red lights will alternate flashing when in pairing mode. Once pairing is complete, the light will shut off.

1. Power on the speaker by holding down the **multi-function button** for 5 seconds until the LED indicator light flashes blue and red. Once powered on, the speaker is ready to pair.

2. Open the Bluetooth settings of your phone and select **"CAT-BT-CLIPSPK"** from the device list. Once selected, your phone will attempt to connect to the speaker.
3. When a successful connection is made, the speaker will say "paired" and the indicator light will turn off.

If connection fails, try restarting both your phone and the speaker, then repeat steps 1-3.

I'm having trouble pairing my Bluetooth® device.
Make sure your device supports Bluetooth. If so, ensure Bluetooth is on. If the speaker doesn't show up in your list of nearby Bluetooth devices, try restarting the speaker.

Note: you may not be able to pair your device to the speaker if another device is already connected.

Toll free: 888-550-2837
Hours: Monday-Friday, 8am-5pm CST

- Do not expose speaker to extreme heat or cold.
- Do not submerge speaker in water.
- Do not attempt to disassemble, repair, or modify this product.
- Speaker contains a built-in lithium battery - please use proper methods when disposing.
- Always avoid contact with open flame. If ignited, lithium batteries produce toxic fumes.
- In the event of a malfunction, turn off the power and unplug the speaker from any device or charging cable to prevent damage to the speaker or other components.

- 5

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.