



V1.1

English (EN)

 
Precautions

- 1. Please do not power cycle the device during system boot up or firmware upgrade. You may corrupt firmware images and cause the unit to malfunction.
- 2. Use only the power adapter included in the device package. Using an alternative non-qualified power adapter may possibly damage the unit.

Overview


Fanvil H602/H602W is a cost-effective, multi-functional hotel IP phone. It is equipped with 6 programmable soft keys for service hotlines, meeting the application requirements of various hotel scenarios. The H602 supports PoE, the H602W has built-in 2.4G & 5G Wi-Fi (Wi-Fi 6), and they both support as HD audio, 10/100Mbps network port, offering a high-quality user experience while reducing the cost of hotel deployment. It is more than just a hotel phone; it can also be applied in multiple scenarios, such as shopping malls, hospitals, and supermarkets.

Packaging list

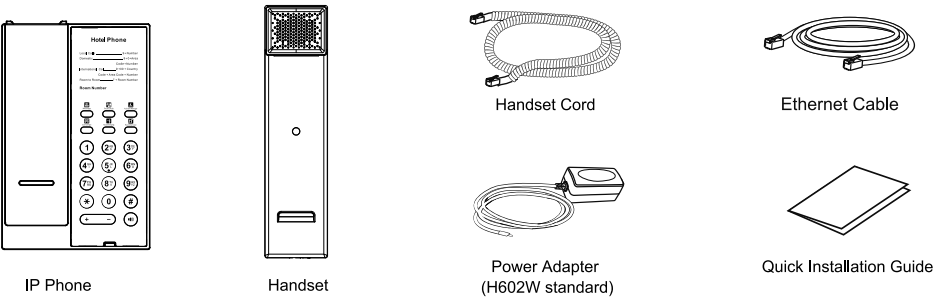

Keys description

 
*Taking H602W as an example:

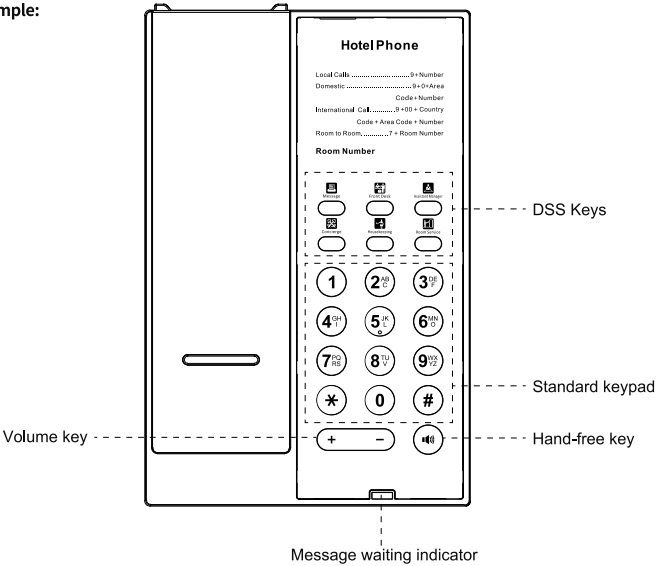

Device installation

Please follow the instructions in below picture to install the device.

 
• Desktop installation

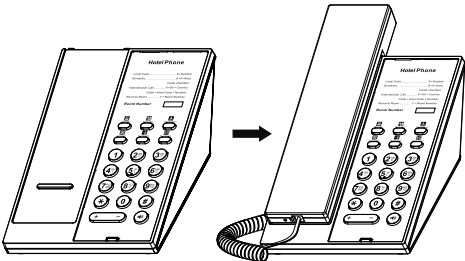

• Connecting to the device

Please connect power adapter, network, handset to the corresponding ports as described in below picture.

 - ① Handset port: connect IP Phone.
- ② Power port: connect the power adapter.
- ③ Network port: connect local area network or Internet.

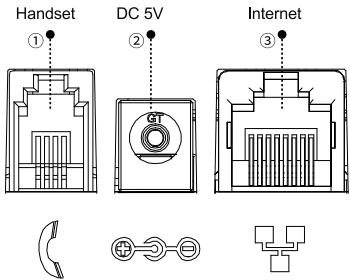

Network connection

Using Ethernet

- 1. The power on device and connect the WAN port of the phone to the RJ45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable.
- 2. The default is DHCP mode.

Using Wi-Fi (Configuration via Web)-(only H602W):

- 1. Log in web page > Network > Wi-Fi settings, check "Wi-Fi Enable" and add Wi-Fi information.

Configuration

Configuration via web

- 1. Get the IP address: Press the "#" key for more than 6 seconds to broadcast IP.
- 2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment (The default username and password are both "admin ")
- 3. Configure: Select network/account etc, and fill the relevant content.
- 4. Save the configuration.

Making a call

- 1. **Pro-dialing**: enter the phone number and pick up the handset.
- 2. **Direct dialing**: lift the handset and enter the phone number.
- 3. **Handsfree**: enter phone number and press or vice versa.
- 4. **Memory key**: press memory key.

Accepting a call

- 1. **Using the handset** : pick up the handset.
- 2. **Using the handsfree** : press .

Programmable keys

- 1. Log in web page > Function key > DSS Keys, select the function and fill in the number in the value items.
- 2. Log in web page > Function Key > Speed Dial List, select memory key(number keys 0-9) and fill in the number in the value items.

Note: You can contact your service provider for additional settings that may be necessary to configure the phone, or download the user manual and FAQ for more detailed information.

H602 / H602W
Quick Installation Guide

Fanvil Technology Co., Ltd
www.fanvil.com

Federal Communication Commission (FCC) — USA This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC Radiation Exposure Statement: The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

For USA: The frequency stability of all transmission frequencies of U-NII-1, U-NII 2A, U-NII 2C and U-NII-3 meets the requirements of 47 CFR FCC Part15.407(g), and the manufacturer declares that their transmission is maintained at Band U-NII-1, U-NII 2A, U-NII 2C and U-NII-3.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: XXXXXXXXXX If requested, this number must be provided to the telephone company.

简体中文 (ZH)

 
注意事项

1. 请不要在设备启动未完成或设备升级软件时断开电源，否则会导致设备程序的损坏，进而导致设备无法启动。
2. 请使用设备包装中的电源适配器，因为使用其他没有经过认证的替代电源适配器有可能对设备造成损害。

产品概览


方位H602/H602W作为一款高性价比、多功能、外观时尚的酒店IP话机，配备6个可编程按键，满足丰富的酒店入住场景应用需求。支持高清语音、百兆以太网，H602支持PoE供电，H602W内置2.4G & 5G Wi-Fi(Wi-Fi 6),在降低酒店部署成本的同时，提供高品质的用户体验。它不仅是一个酒店电话；它还可以应用于购物中心、医院、超市等多种场景。

包装清单

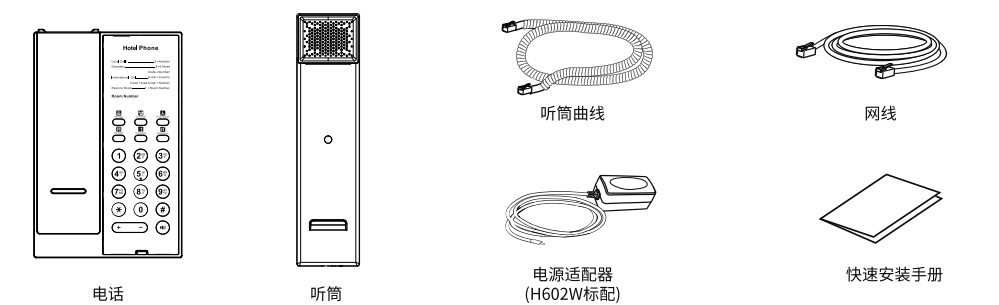

按键概览

 
*以H602W为例：

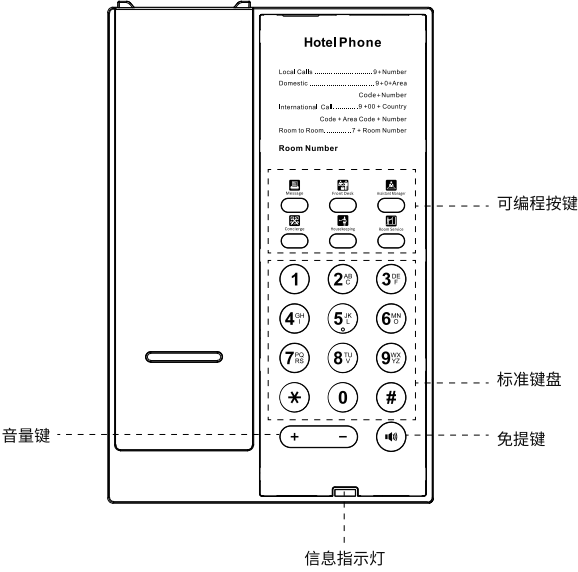

设备安装

请按照下面图片中的说明安装话机。

 
- 桌面安装

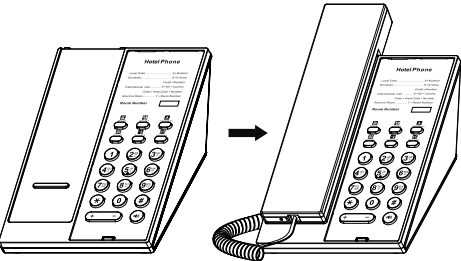

- 设备连接

请按下图说明将电源适配器，网络，听筒连接到相应的端口。

 - ① 听筒接口：连接话机听筒。
- ② 电源接口：连接电源适配器。
- ③ 网络接口：连接局域网或者互联网。

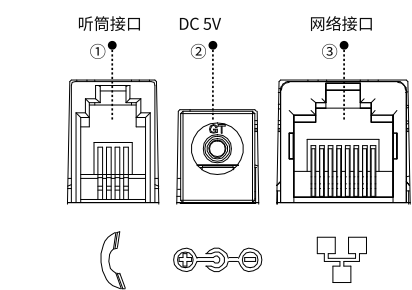

网络连接

通过以太网连接

1. 打开设备电源，并将话机的广域网端口连接到集线器/交换机或路由器的RJ45插座，使用网线连接。
2. 默认为DHCP 模式。

通过无线网络 (Wi-Fi)连接(网页配置):(仅限H602W)

1. 登录网页 > 网络 > Wi-Fi设置，开启Wi-Fi配置并添加Wi-Fi信息。

电话设置

通过网页配置

1. 查询IP地址：长按“#”键(6秒以上),将语音播报设备IP；
2. 登录：在网页浏览器上输入IP地址。电脑和电话应该处于同一个IP地址段，默认的用户名和密码都是“admin”；
3. 配置：选择网络/账号等，并填写相关内容；
4. 保存配置。

拨打电话

1. **预拨号:** 先输入电话号码，再拿起听筒。
2. **直接拨号:** 先拿起听筒，再输入电话号码。
3. **免提:** 先输入电话号码，再按下 **[📞]**；顺序反之操作亦可。
4. **记忆键拨号:** 按指定的记忆键呼叫。

接听电话

1. **使用听筒接听:** 拿起听筒。
2. **使用免提接听:** 按下 **[📞]**。

可编程按键

1. 登录网页 > 快捷键，选择需要配置的记忆键，填写好“姓名”和“值”并提交。
2. 登录web页面 > 快捷键 > Speed Dial List，选择记忆键 (数字键 0~9)，在数值项中填写对应的号码。

注意：如有其他需要的设置，请联系您的服务提供商，或下载用户手册和常见问题解答以获得更详细的配置说明。