

FRONT

BACK COVER

FRONT COVER

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Rating Label Definitions



Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol represents FCC Declaration of Conformity and compliance.



This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.

Southern Telecom Inc.
5601 1st Ave.
Brooklyn, NY 11220

© 2026 Peanuts Worldwide LLC
www.Peanuts.com



Warranty Information

90-Day Limited Warranty

Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select "Support".
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.



Printed in China
Designed in USA
06/2026

PEANUTS®

RETRO RADIO & WIRELESS SPEAKER

Rechargeable Battery



User Manual
PNRTSPKR10RD

BACK

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

⚠ Caution


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY.** Do NOT allow children or pets to use or play with this device. Keep out of reach of small children.
- Do not disassemble, modify, or repair the device.
- Do not submerge in water. Keep the device away from water, moisture, and high heat sources.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or submersion in water. Read the Using the Speaker in Wet Conditions section of this manual before using in wet conditions.
- Do not allow the Power Input or Output Ports to be exposed to dust or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- Do not overcharge the speaker battery for prolonged periods.

In the Box

- Wireless Retro Radio Speaker (x1)
- USB Type-C Charging Cable (x1)
- User Manual (x1)

Location of Controls

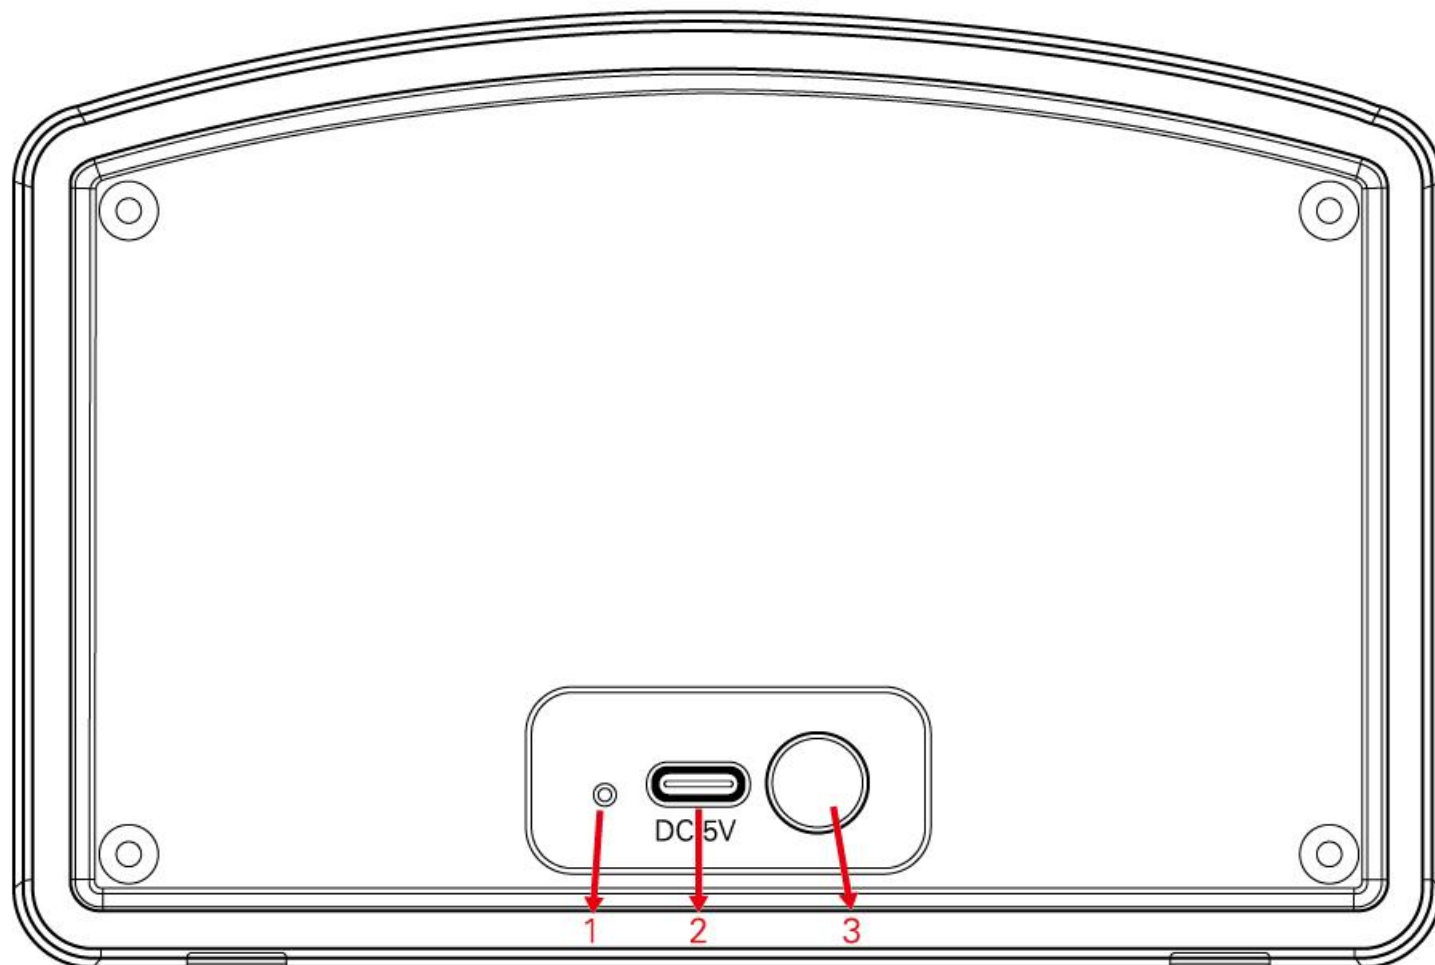

1: LED Indicator

2: Charging Port

3: Power Button

Button Controls

Everything on this speaker is controlled via the single Power Button.

Long Press:

Power ON / Power OFF

Short Press:

Adjust Volume: Each press increases the volume to the maximum level, then gradually decreases it to the minimum before cycling back up.

Hold for 2 Seconds:

Switch to FM Radio Mode

Double Press:

(2x)Skip track / Select station (FM Mode only)

Getting Started

Power & Charging

1. Connect the included Type-C USB cable to the charging port on the back of the speaker.
2. Plug the other end into a computer USB port or a 5V/1A (Max 2A) power adapter (not included).

LED Status Indicator

- Solid Red: Charging
- Off: Fully charged

Bluetooth Pairing & Music Playback

1. Power On: Long press the power button. You will hear a tone, and the LED indicator will flash quickly to signify Bluetooth pairing mode.
2. Connect: Enable Bluetooth on your smartphone or device and select " PNRTSPKR10RD " from the available network list.
3. Success: Once connected successfully, a tone will play and the LED indicator will turn Solid Blue.
4. Play: Start playing music. Ensure your device stays within a 33-foot (10-meter) range of the speaker.

Auto-Sleep

Please note: If no device connects within 5 minutes, the speaker will automatically enter sleep mode and the LED light will turn off. To reconnect, you must restart the speaker.

Using the FM Radio

1. Antenna Setup: Insert the small connector of the supplied Type-C charging cable into the charging port on the back of the speaker. This cable acts as the radio antenna.
2. Switch Mode: Turn the speaker ON, then press and hold the power button for 2 seconds to switch to FM Radio mode.
3. Scanning: The blue light will flash rapidly as the unit automatically scans and tracks available radio stations. Once a station is found, the blue light will flash slowly.
4. Controls in FM Mode:
 - Double press to select or skip to the next FM radio station.
 - Short press to adjust the volume.

FRONT

BACK COVER

FRONT COVER

Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Rating Label Definitions



Direct current symbol.



This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol represents FCC Declaration of Conformity and compliance.



This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license.

Southern Telecom Inc.
5601 1st Ave.
Brooklyn, NY 11220

© 2026 Peanuts Worldwide LLC
www.Peanuts.com



Warranty Information

90-Day Limited Warranty

Territory: United States

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal: www.customersupport123.com and select "Support".
- Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.



Printed in China
Designed in USA
06/2026



RETRO RADIO & WIRELESS SPEAKER

Rechargeable Battery



User Manual PNCRTSPKR11GR

BACK

Before You Begin...

Customer Support

For any questions or problems with your product, please visit our website at customersupport123.com.

⚠ Caution


To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY.** Do NOT allow children or pets to use or play with this device. Keep out of reach of small children.
- Do not disassemble, modify, or repair the device.
- Do not submerge in water. Keep the device away from water, moisture, and high heat sources.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or submersion in water. Read the Using the Speaker in Wet Conditions section of this manual before using in wet conditions.
- Do not allow the Power Input or Output Ports to be exposed to dust or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.
- Do not overcharge the speaker battery for prolonged periods.

In the Box

- Wireless Retro Radio Speaker (x1)
- USB Type-C Charging Cable (x1)
- User Manual (x1)

Location of Controls

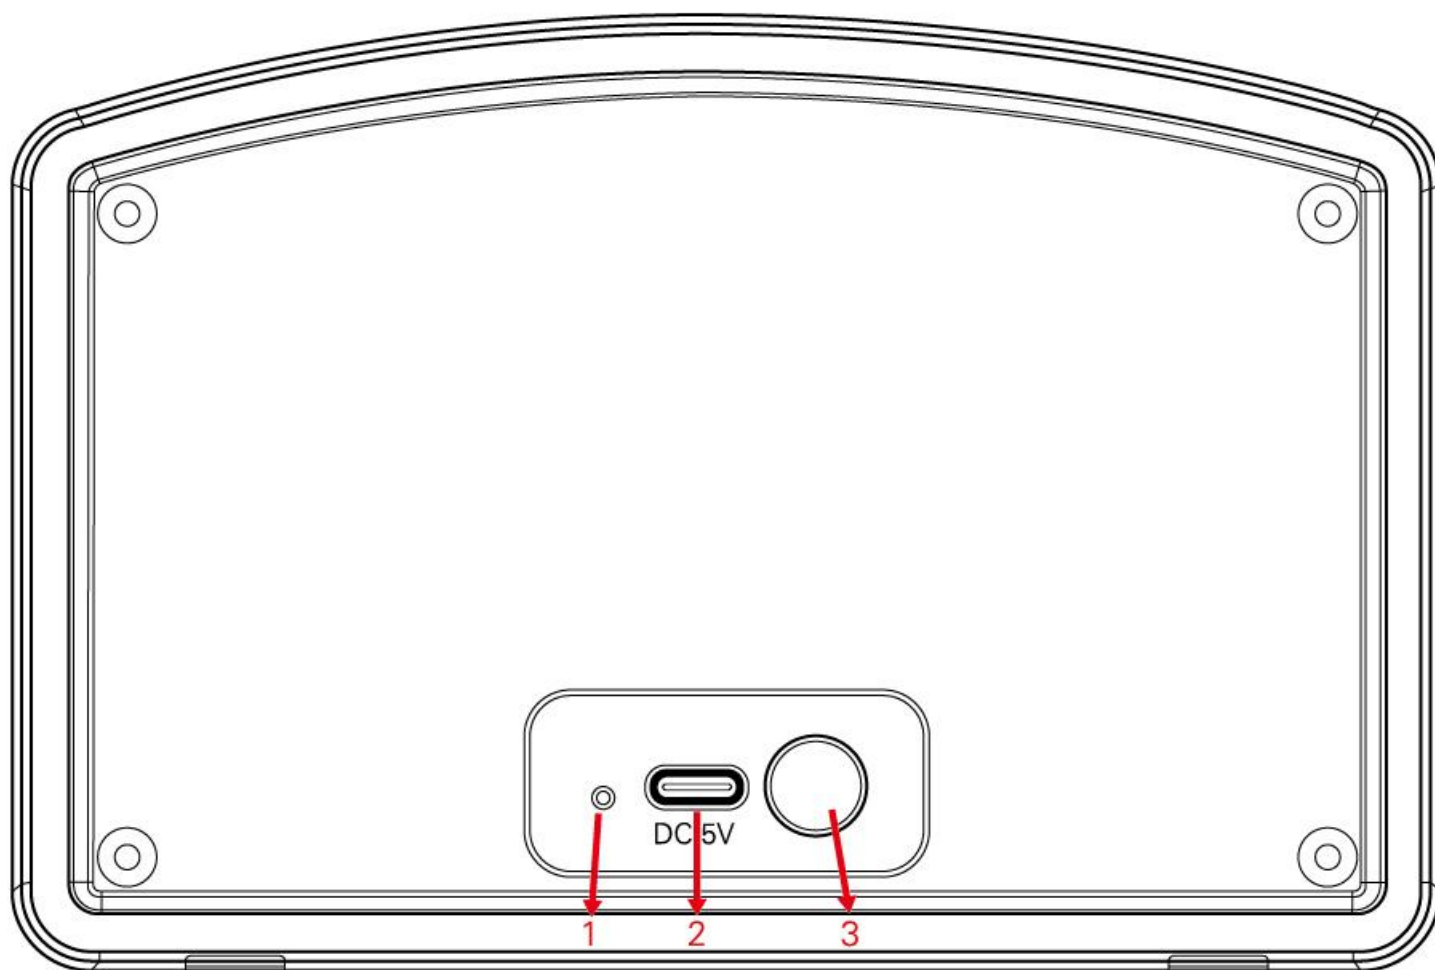

1: LED Indicator

2: Charging Port

3: Power Button

Button Controls

Everything on this speaker is controlled via the single Power Button.

Long Press:

Power ON / Power OFF

Short Press:

Adjust Volume: Each press increases the volume to the maximum level, then gradually decreases it to the minimum before cycling back up.

Hold for 2 Seconds:

Switch to FM Radio Mode

Double Press:

(2x)Skip track / Select station (FM Mode only)

Getting Started

Power & Charging

1. Connect the included Type-C USB cable to the charging port on the back of the speaker.
2. Plug the other end into a computer USB port or a 5V/1A (Max 2A) power adapter (not included).

LED Status Indicator

- Solid Red: Charging
- Off: Fully charged

Bluetooth Pairing & Music Playback

1. Power On: Long press the power button. You will hear a tone, and the LED indicator will flash quickly to signify Bluetooth pairing mode.
2. Connect: Enable Bluetooth on your smartphone or device and select "PNCRTSPKR11GR" from the available network list.
3. Success: Once connected successfully, a tone will play and the LED indicator will turn Solid Blue.
4. Play: Start playing music. Ensure your device stays within a 33-foot (10-meter) range of the speaker.

Auto-Sleep

Please note: If no device connects within 5 minutes, the speaker will automatically enter sleep mode and the LED light will turn off. To reconnect, you must restart the speaker.

Using the FM Radio

1. Antenna Setup: Insert the small connector of the supplied Type-C charging cable into the charging port on the back of the speaker. This cable acts as the radio antenna.
2. Switch Mode: Turn the speaker ON, then press and hold the power button for 2 seconds to switch to FM Radio mode.
3. Scanning: The blue light will flash rapidly as the unit automatically scans and tracks available radio stations. Once a station is found, the blue light will flash slowly.
4. Controls in FM Mode:
 - Double press to select or skip to the next FM radio station.
 - Short press to adjust the volume.