



USER GUIDE

onn Kids Walkies 2Pack



For product assistance & missing or replacement parts:
WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am-9:00pm CST

Find more at **Walmart.com**

36018121_EN_12122025

**THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION.**

PLEASE READ AND KEEP
FOR FUTURE REFERENCE

Content & Information

 
Content & Information	2	Advanced Features	7-8
Features.....	2	Setting Interference Eliminator Code.....	7
Overview	2-4	Call Tones.....	8
What is in the Box?.....	2	VOX (Voice-Operated Transmission).....	8
Safety Precautions	4	2CH Dual Watch (Dual Channel Monitor).....	8
Getting Started	5-6	Specific Features	8-10
Basic Operations	7	Cleaning & Care	10
Adjusting Volume.....	7	Warranty	10
Changing Channels.....	7	Specifications	10
Making a Call.....	7	WARNING	11
		Troubleshooting / Frequently Asked Questions (FAQ)	12

FEATURES

- Built-in LED light
- 22 channels
- Works with AAA standard alkaline batteries (included) or rechargeable NiMH batteries
- Mountain to Valley - Up to 16 miles
- Open Water - Up to 8 miles
- Neighborhood - Up to 1 mile

Overview

What is in the Box?

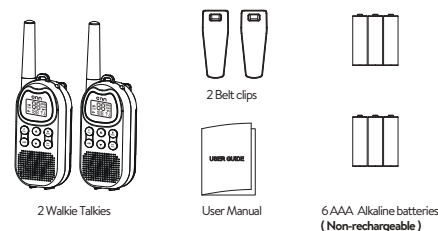

General Frequency Channel

While in standby mode or when selecting a channel, it shows the current channel (1-22).

Volume Numbers

Adjusting the volume shows the current level (0L - 7L).

CA Icon

When the call tone is adjusted, the "CA" appears.

VOX Sensitivity Numbers

Adjusting the VOX controls the current level, which ranges from 0 to 3.

2CH Channel Numbers

When adjusting the 2CH, it shows the current channel (1 - 22 or "OF")

Note: Remember: Only one person talks at a time, or it gets garbled! Pick a Channel (1-22) You and your friend must match channels to chat.

VOX Icon

Indicates when VOX mode is active.

2CH Icon

Indicates when 2ch mode is active.

Mute Icon

Indicates the volume of the radio is mute.

DCS/CTCSS Privacy Code Numbers

 
Changer from 0-121

Tones Numbers

Adjusting the call tone shows the current level (0 - 10).

2CH(Dual Watch)

When the 2CH is adjusted, the "CH" appears.

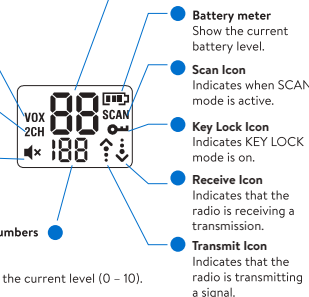

2

3

PTT Button

- Press and hold the button to talk and transmit.
- Press the button to save the settings and exit menu. (In menu options)

Call / Power Button

- Press and hold the button for 3 seconds until a tone sounds, turn on/off the intercom.
- Press the button to call the other party.

Lamp / Button

- Press the button to turn built in LED lamp On/Off.

Speaker

Lamp

Up / Down Buttons

- Use the Up/Down buttons to select Volume level (0L - 7L).
- Use the Up/Down buttons to select a channel / Interference Eliminator Code / sensitivity level / call tone when in the menu.

Lock / Menu Button

- Press and hold the button for 3 seconds to lock/unlock.
- Press the button to enter Menu and flip menu options.

Mon / Scan Button

- Press and hold the button for 3 seconds to hear the volume level.
- Press the button to turn on/off the Scan

Microphone

Safety Precautions

- Follow battery installation instructions carefully to avoid overheating.
- Do not use in prohibited areas.
- Keep the device dry and clean.
- Avoid extreme temperatures.

NOTE

RF exposure decreases with increasing distance from antenna.

Two-Way Operation

- Use only approved supplied or replacement antennas and audio accessories.

NOTE

All controls, adjustments, and switches are specified in the manual or follow-up instructions provided by the manufacturer, which can be operated or adjusted without violating FCC rules.

4

 
WARNING

- Do not use sharp or conductive tools to remove batteries.
- Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.



Getting Started

Battery Installing

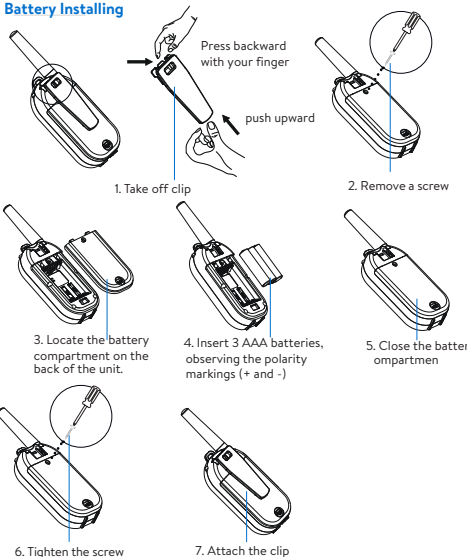

5

NOTE

Use #2 Phillips head screwdriver to install included screws.

 
Low Battery Level

When in battery low status, radio will sound (Low Battery Alert) every 10 minutes or after releasing PTT button.



Turning the Device On/Off

- To turn on: Press and hold the Power button for 3 seconds.
- To turn off: Press and hold the Power button for 3 seconds.



WARNING:

 
There is a battery component in the package. It must be installed by an adult.

6

Basic Operations

Adjusting Volume


- Press the Up/Down buttons to adjust the volume.
- Press the PTT button to confirm.
- Volume ranges from 0 (Mute) to 7 (Loudest).



Warning
Do not hold near ear!
High volumes cause hearing loss

Changing Channels

 3. Press the PTT button to confirm.
2. Use the Up/Down buttons to select a channel (1-22).



1. Click the Menu button until the channel number flashes.

Making a Call

1. Press and hold the PTT button to talk.
2. Release the PTT button to listen.



 
- When transmitting, this icon appear in LCD
- When receiving, this icon appear in LCD
- Microphone

Note: Do not hold radios less than 5 feet apart.
Note: Do not cover microphone while talking.
Hearing safety: Do not hold the radio close to your ear, loud sounds can hurt hearing.
Push-to-Talk Timeout Timer
To prevent accidental transmissions and save battery life, radio will stop transmitting if you press PTT button for 60 seconds continuously.

Advanced Features

Setting DCS/CTCSS Privacy Code

3. Press the PTT button to confirm.
2. Use the Up/Down buttons to select a code (0-121).




1. Press the Menu button until the DCS/CTCSS Privacy Code flashes.

Note: 0 disables the code, allowing all signals on the channel.

7

Call Tones

 3. Press the PTT button to confirm.
2. Use the Up/Down buttons to select a tone (0-10).




1. Press the Menu button until "CA" appears.

Note: 0 turns off Call Tones and Call function.

VOX (Voice-Operated Transmission)

 
3. Press the PTT button to confirm.
2. Use the Up/Down buttons to select sensitivity (0-3).



- 0: Off
 - 1: Low (noisy environments)
 - 2: Medium (most environments)
 - 3: High (quiet environments)
1. Press the Menu button until "VOX" appears.

2CH Dual Watch (Dual Channel Monitor)

 3. Press the PTT button to confirm.
2. Use the Up/Down buttons to select the second channel (1-22) or "OF" to turn off.



1. Press the Menu button until "2CH" appears.

Specific Features

Automatic Power Save
When the radio is on standby for 5 seconds (when there is no receiving transmission), the radio will switch to power-saving mode. It can receive and transmit in this mode.

 
Roger Tone
In the power-off state, press and hold the (Power & UP) button at the same time to turn on/off the Roger Beep.

Scanning Channels
Use SCAN mode to search all channels for transmissions or to find unused channels to use. To Start Scanning:

1. Press the Scan button, and the Scan icon will appear and the LCD will scroll through the channels

8

2. When radio detects a matching channel it connects to transmission.
3. To talk, press PTT button within 5 seconds of transmission.
4. Radio will resume searching 5 seconds after end of any received activity.
5. To stop scanning, press Scan button.



Scrolling through channels

Keypad Tones

When powered off, press and hold the (Call/Power and Down) keys at the same time to turn on/off the keyboard ringtone.

Keypad Lock

Press and hold Menu button until Lock icon appears or disappears on LCD.

Channel Selection	Set CTCSS/DCS Privacy Codes	Set Call Tones	Set Vox	Set Dual Watch
1-22	0-121 (0:OFF) 1-38: CTCSS 39-121:DCS	0-10 (0:OFF)	0-3 (0:OFF) (1-3 is Sensitivity)	OF-22 (OF indicates OFF)
Tap the menu button once, when the display channel number display position flashes, press the up and down keys to set any of the 1-22 CH	Tap the menu key twice, and when the privacy code display location flashes, press the up and down keys to set any of the 0-121 privacy codes. 0 indicates that the privacy code is off: 38 is CTCSS 39-121 is DCS	Tap the menu button three times, when the channel number position shows CA and the privacy code display position flashes, press the up and down keys to set any of the 0-10 call tones. 0 indicates that the call tone is off and this state prohibits the call.	Tap the menu button four times, when the VOX is displayed on the left side of the display and the channel number display is flashing, press the up and down buttons to set any of the VOX 0-3 levels. 0 means VOX is off. Number 3 is the most sensitive. Number 1 is the least sensitive	Press the menu button five times, when the left side of the display shows 2CH, the privacy code display position shows CH, and the channel number position flashes, press the up and down buttons to set the dual-frequency monitoring OF-22 any channel

9

Scanning Notes

- Pressing PTT button while scrolling through inactive channels sets radio on "home channel". Scanning will resume 5 seconds after end of transmission. Press Scan button to stop scanning at any time.
- If radio stops on wrong transmission, resume scan by pressing Up/Down button.
- Temporarily remove channels from scan list by pressing and holding Up/Down for 3 seconds. Remove more than one channel except home channel from scan list.

NOTE: To restore removed channel(s) to scan list, turn radio off and on, or exit and re-enter scanning mode by pressing Scan button.

LED Lamp

Press Lamp button to turn built in LED lamp ON/OFF.

Cleaning & Care

Battery Capacity Maintenance

1. Replace batteries once every 3 months when not in use.
2. Before placing radio in storage, remove battery.
3. Store batteries in temperature between -20°C to 35°C and in low humidity. Avoid damp conditions and corrosive materials.
4. Remove batteries before storing your radio for extended periods of time. Batteries corrode over time and may cause permanent damage to your radio.

Warranty

1 YEAR LIMITED WARRANTY
COVERING DEFECTIVE PARTS

Warranty period lasts for 1 year (365 days) from date you purchased product. Your purchase date is printed on receipt you received with product. This limited warranty applies only to hardware components of Device that are not subject to accident, misuse, neglect, fire or damage from other external causes, alteration, repair, or commercial use.

Specifications

Channels: 22	Battery: Alkaline batteries	Range: Up to 16 miles (ideal conditions), about 1 mile in urban areas
Power Source: 3 AAA batteries	Interference Eliminator Codes: 121 Privacy Codes(38 CTCSS codes / 83 DCS codes)	Speaker: 0.5W

10

Model # 36018121 This FR5 device is approved for USA					
Channel	Frequency (MHz)	Max Power Output	Channel	Frequency (MHz)	Max Power Output
1	462.5625	0.5W	12	467.6625	0.5W
2	462.5875	0.5W	13	467.6875	0.5W
3	462.6125	0.5W	14	467.7125	0.5W
4	462.6375	0.5W	15	467.7375	0.5W
5	462.6625	0.5W	16	467.7625	0.5W
6	462.6875	0.5W	17	467.7875	0.5W
7	462.7125	0.5W	18	467.8125	0.5W
8	467.5625	0.5W	19	467.8375	0.5W
9	467.5875	0.5W	20	467.8625	0.5W
10	467.6125	0.5W	21	467.8875	0.5W
11	467.6375	0.5W	22	467.9125	0.5W

WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Requirements:
For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.
Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button.

Transmitting 50 % of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).

Troubleshooting / Frequently Asked Questions (FAQ)

Problem	Cause	Solution/Prevention
Cannot hear incoming transmission	Volume too low/muted	Ensure volume is above 0
	Radio not set to correct channel	Set radio to same channel as transmission
Transmission is unclear/cracking	Receiving signal is weak	Ensure radio is within range for current environment
Transmission is muffled	Mic/Speaker is covered	Ensure mic/speaker is uncovered when transmitting

Q&A

Q: Are the walkie-talkie batteries rechargeable?

A: The included alkaline batteries are not rechargeable. However, you can use rechargeable Ni-MH batteries (purchased separately) .

Q: How do I adjust the volume?

A: Simply press the volume up/down button. No need to enter a setup mode.

Q: Why is my receiving distance shorter than 16 miles?

A: The 16-mile range is achievable in ideal conditions without obstacles. In urban or suburban areas, obstacles can reduce the range to about 1 mile.

Q: What if I accidentally reverse the battery polarity?

A: Always follow the battery installation instructions carefully to avoid reversing polarity, which can cause the device to overheat and may damage it.

We would love to hear from you. scan with your walmart app and let us know what you think.



Made in Vietnam for Walmart Inc.

11