

FC
Made in China

- Note: You can see the controls on the bottom of the speaker

- Bluetooth version: 3.0
- Charge voltage: 5V **5V**
- Lithium battery 300mAh, 3.7V
- Frequency: 280KHz ~ 16KHz
- Working time: Up to 2 hours
- Charging Time: 2 hours
- Working distance: Up to 10M
- Impedance: 4 ohms
- Power: 3W
- Distortion: less than 0.5%
- SNR: 95 dB
- Support Micro SD Card up to 32GB

Note: Once finished using, switch the button to "OFF" to turn off the device.

When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired.

From the Bluetooth menu of your device, search for new devices and select "32345". Once paired, the blue LED light of the receiver will remain fixed.

From this moment, you can control the music from your mobile device, or from the receiver.

- Short press **M/M** to play/pause the music.
- Slide and release the control button **←/→** to change the song, and hold it to the side to adjust the volume.

Note: Long press **▶||◀** to change mode

- Short press **NUM** to pick up/hang up a call and long press to reject the incoming call.
- Press **NUM** twice consecutively to redial the last outgoing phone number.

Note: During the call, you can adjust the volume of the call by keeping the control button to the left or right.

Press and hold **►B/M** until you reach FM mode.
Insert the micro USB cable into the micro USB port to work as an antenna. Short press **►B/M** to scan the FM channel. Once finished, slide and release the control button **◀◀** or **▶▶** to change the channel, and hold it to the side to adjust the volume.

Insert the micro USB cable into the micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. Long press **▶/◀** to switch to AUX Mode.

In Bluetooth mode, connect the camera of your mobile device and slide **- [M] [M]** button twice consecutively to take the pictures.

Note: It is not necessary that the device is connected via Bluetooth. If it is previously, the speaker will switch to SD Card / USB mode automatically. Long press **|||||** to change mode.

Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker.

During the charging process, a red indicator light will remain on. At the end of charging, do not forget to disconnect the cable.

Note: The charging time can not exceed 8 hours.

Fault	Solution
Unable to pair with other devices.	1. Check whether the speaker is in the process of search or search off and on again. 2. There are too many Bluetooth devices in the proximity that cause conflict. In a crowded place, turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	1. Check the Bluetooth-device volume and then adjust it to an appropriate level. 2. Recharge the battery.
Occasionally the music stops.	Check whether the speaker after a transmission jump is exceeded or there is an obstacle between the speaker and other Bluetooth devices.
The LED indicator does not light up.	1. The battery level is low, recharge the device. 2. Switch the speaker off and on again.

changes or modifications must expressly appear by the party responsible for compliance (and not the user's authority to operate the equipment).

Item 10 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can receive radio frequency energy and, if not installed and used properly, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.