

TWS S12

使用说明书

包装内容

充电仓 * 1

耳机 * 1副

数据线 * 1

说明书 * 1

产品概览

通话孔

耳机触控区

左耳机

右耳机

充电仓盖

电量显示

充电仓指示灯

注意事项

1. 首次使用，请务必将耳机放入充电仓内，关闭充电仓盖5秒进行激活。

2. 日常使用，建议不要频繁开合充电仓盖。

3. 日常使用，建议先开蓝牙再开机，再取出耳机。

蓝牙

蓝牙

蓝牙

S12

图1

首次使用

1. 首次使用时，耳机放入充电仓中，关上充电仓盖5秒后打开充电仓盖，主副耳机进入自动配对，进入与手机蓝牙配对状态。

2. 打开手机（或蓝牙设备）的蓝牙开关并搜索蓝牙设备，在蓝牙设备列表中找到“S12”点击开始连接（图1），连接成功即可使用（图2）。

3. 再次使用蓝牙耳机，打开充电仓盖子自动配对，并自动连接最后一次连接的手机（或蓝牙设备）。

蓝牙

蓝牙

蓝牙

S12

图2

恢复出厂设置

1. 打开手机蓝牙列表删除“S12”

2. 耳机在充电仓内，打开充电仓盖子长按充电仓按键6秒，耳机恢复出厂设置成功。

3. 手机蓝牙搜索“S12”点击开始连接，连接成功即可使用。

图3

关机

1. 耳机放入充电仓盖自动关机。

2. 断开耳机的蓝牙连接，5分钟后蓝牙耳机会自动关机。

蓝牙

蓝牙

蓝牙

S12

图4

充电仓充电指示灯

1. 充电仓充电，红灯闪烁。

2. 充电仓充电，红灯常亮。

3. 充电仓满电，指示灯常亮后熄灭。

图5

图6

正确佩戴耳机

1. 为达到最佳聆听效果，耳机上标识“R”为右耳佩戴，“L”为左耳佩戴。

图6

耳机操控

播放/暂停音乐：单击（图7）耳机触控区切换下一首；音乐中双击右耳触控区接听电话；来电时单击耳机触控区拒接电话；通话时单击耳机触控区调节音量；在播放音乐或接听电话时，长按左耳触控区为音量减小，长按右耳触控区为音量增大。

图7

单击

图8

双击

产品参数

蓝牙耳机版本：5.1

支持协议：A2DP/AVRCP/HFP/HSP

频率范围：2402MHz-2480MHz

传输距离：大于等于10米

耳机通话时间（不含充电仓）：约4小时

耳机播放时间（不含充电仓）：约12小时

耳机充电时间：约1.5小时

耳机续航时间：约12小时

耳机电池容量：3.7V/300mAh

充电仓电池容量：3.7V/300mAh

警告

请勿自行拆卸耳机及充电仓，否则保修立即失效。

耳机具有一定防水能力，但不适于游泳，也不可接触热水。

常见问题

为何出现声音断续的现象？

蓝牙耳机以无线方式连接，容易受到环境中电磁辐射干扰或是信号阻挡物的影响，可以换一个位置试试，如此情况是持续的，请与我们联系。

耳机重置后为什么不能播放歌曲？

耳机重置后需要重新和手机配对，请将手机蓝牙菜单上的已连接设备中的“S12”，都删除后再重新搜索配对，之后就可以正常使用。

为什么在耳机上调好了音量，但下次使用时音量却变了？

通过耳机调节音量，对某些手机来说可能无法同步，下次使用时会恢复为按手机音量或耳机默认音量进行播放，遇到这种情况，建议使用手机来调节音量，在下次使用时就会保持最后调节的音量大小。

TWS S12

使用说明书

Package Contents

Charging base*1

Earphone*1 pair

Charging base*1

Manual*1

Product overview

call hole

Touch control area

Left Earphone

Right Earphone

Power display

charging chamber indicator

Cautions

1. For the first time use, be sure to put the headset into the charging box, close the charging chamber cover for 5 seconds to activate

2. For daily use, it is recommended not to open and close the charging chamber cover frequently

3. For daily use, it is recommended to turn on the Bluetooth of mobile phone first, and then take out the headset.

1 First time using

1. When the headset is used for the first time, put it into the charging box, close the cover of the charging box for 5 seconds, open the cover of the charging box, and the main and auxiliary headphones will enter the automatic pairing state, and enter the pairing state with the Bluetooth of the mobile phone

2. Turn on the Bluetooth switch of the mobile phone (or Bluetooth device) and search for Bluetooth devices. Find "S12" in the list of Bluetooth devices and click to start connecting (Figure 1). If the connection is successful, you can use it (Figure 2)

3. Use the Bluetooth headset again, open the charging box cover, pair automatically, and connect the last connected mobile phone (or Bluetooth device) automatically

图1

图2

Call up the Bluetooth

Bluetooth

My device

S12

图1

Call up the Bluetooth

Bluetooth

My device

S12

The connected

图2

4 Charging instructions

1. Low power in charging chamber, red light flashing

2. When charging in the charging bin, the red light is always on

3. When the charging bin is fully charged, the indicator light will go out after it is on

图4

5 View the current power of charging chamber

Open the cover of charging chamber and identify the current power of charging chamber according to the indicator light of charging chamber

1. The power is more than 75%, and the blue light is always on

2. The power is more than 50%, and the red and blue lights are always on

3. The power is more than 25%, and the red light is always on

4. When the power is less than 25%, the red light flashes

图5

6 Wear the earphone properly

In order to achieve the best listening effect, "R" on the earphone is for the right ear and "L" for the left ear.

图6

7 Disconnect the current connection

1. The earphone is in the charging chamber. Open the charging chamber cover and double-click the charging chamber button

2. Use the mobile phone that needs to be connected, open the Bluetooth of the mobile phone, search "S12" and click to start the connection

图7

图8

8 Headset control

Play / pause Music: click (Figure 7) on the headset touch area

Switch to the next song: double click in the music (Figure 8) right ear touch area

Switch to the previous song: double click the left ear touch area in music

Answer a call: click the headset touch area when calling

Hang up: click the headset touch area when calling

Refuse to answer a call: press the headset touch area for a long time

Adjust the volume: when playing music or answering the volume, long press the right ear touch area to increase the volume, long press the left ear touch area to decrease the volume

Activate voice assistant

After the headset is connected to the mobile phone, the user can normally start the voice assistant by 3 clicks on the left or right headset touch area, and then exit after 3 clicks

图7

图8

Product Spec

Bluetooth version: 5.1

Support protocol: A2DP / AVRCP / HFP / HSP

Frequency range: 2402mhz - 2480mhz

Transmission distance: >=10

Earphone talk time (excluding charging box): about 4 hours

Headset play time (excluding charging box): about 12 hours

Earphone playback time (including charging box): about 12 hours

Charging time: about 1 hour

Charging time of earphone box: about 1.5 hours

Support system: all Bluetooth devices and mobile phones

Earphone battery capacity: 3.7v/30mah

Battery capacity of charging chamber: 3.7v/300mah

warning

Do not disassemble the earphones or charging compartment by yourself, otherwise the warranty will be invalidated immediately

The earphones are waterproof to a certain extent, but they are not suitable for swimming and should not be exposed to hot water

FAQ

Why is the sound intermittent?

Bluetooth earphone are connected wirelessly, which are susceptible to electromagnetic radiation interference or signal barriers in the environment. You can try another location to try again. If this situation is continuous, please contact us.

Why can't I play songs after earphone reset?

After the earphone reset, it needs to be paired with the phone again. Please delete all "S12" in the connected devices in the Bluetooth menu of the phone, and then search for pairing again, then it can be used normally.

Why the volume on the earphone has been adjusted , but it is still changed when next time use?

Adjusting the volume through the earphones may not be synchronized for some mobile phones. It will be restored to play according to the phone volume or the default earphone volume when next time use. In this case, it is recommended to adjust the volume on mobile phone , but the volume will be maintained as the last adjusted volume when next time you use it.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.