


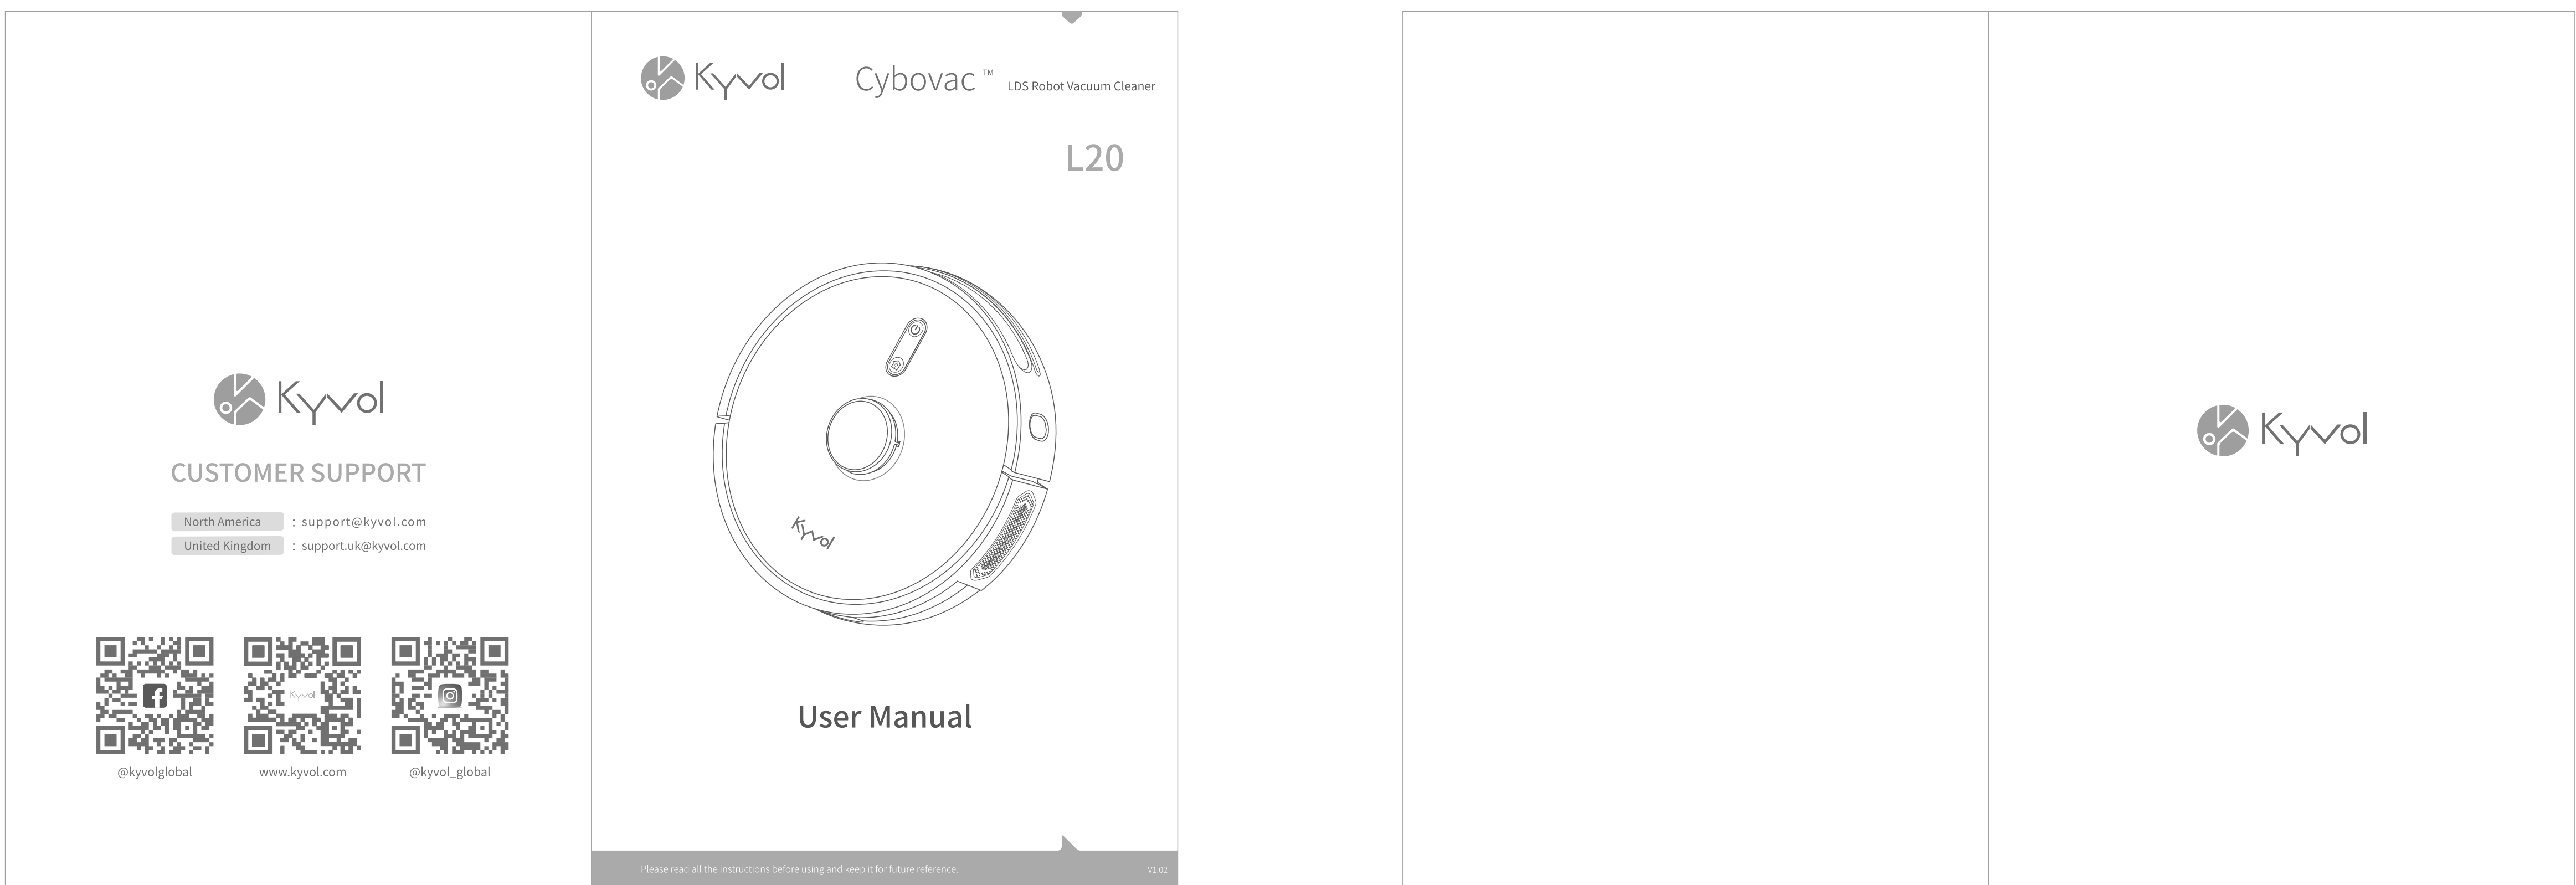

IMPORTANT SAFETY INSTRUCTIONS	01	AUTO CARPET BOOST	13
BATTERY	02	SLEEP MODE	13
WHAT'S INCLUDED	03	MAINTENANCE AND CARE	13
PRODUCT OVERVIEW	04	CLEANING AND REPLACEMENT FREQUENCY	13
LDS ROBOT VACUUM CLEANER	04	DUST BIN AND FILTER	14
CHARGING BASE	05	SIDE BRUSHES	16
GETTING STARTED	06	MAIN BRUSH	17
OPERATION GUIDE	07	SENSORS AND CHARGING CONTACTS	18
CHARGING	07	ROBOT TOP	19
CLEANING PREPARATION	08	OMNI-DIRECTIONAL WHEEL	19
POWER ON	09	WATER TANK AND MOPPING PAD(OPTIONAL)	19
POWER OFF	09	SPECIFICATIONS	21
CLEANING MODES	09	TROUBLESHOOTING GUIDE	21
Auto Cleaning Mode	09		
Spot Cleaning Mode	10		
Mopping Mode (only for Cybovac with the water tank)	11		

IMPORTANT SAFETY INSTRUCTIONS	01	BATTERY	02
REMOVE PROTECTIVE FILMS BEFORE USING THIS CYBOVAC. IT IS INTENDED FOR HOUSEHOLD USE ONLY.		• This appliance contains batteries that are non-replaceable.	
• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Charging and use of accessories shall not be made by children without supervision.		• DO NOT attempt to disassemble or replace the battery yourself as this may cause overheating, fire or injury.	
• The appliance is only to be used with the power supply unit provided with the appliance.		• The battery must be connected from the appliance before it is recharged.	
• DO NOT use or purchase accessories or replacement parts from unauthorized outlets. Only use original parts made by Kyyol and contact us directly if you need an accessory or replacement part.		• DO NOT expose the battery to any direct heat source, including fire or direct sunlight. This is a fire hazard.	
• DO NOT operate the Cybovac on or close to wet surfaces when using to vacuum dust.		• DO NOT dispose of the Cybovac or the battery pack in fire, water or other liquids. This is to avoid any fire hazards.	
• DO NOT use the Cybovac to vacuum flammable liquids such as oil or paint.		• The ion battery in the robot shall be serviced or repaired by an authorized service provider and must be replaced or disposed of separately from household waste. Dispose of the battery according to your local environmental laws and regulations.	
• DO NOT use the Cybovac in areas with exposed electrical outlets.		• For the purpose of recharging the battery, only use the detachable supply unit provided with the appliance.	
• DO NOT operate the Cybovac with wet hands.			
• DO NOT use if the power cable or plug appears to be damaged.			
• DO NOT use the Cybovac to clean up flammable liquids such as oil and paint.			
• DO NOT apply any fragrance or scented products to the Cybovac's filter. This is a fire hazard.			
• DO NOT operate the Cybovac in rooms with open flames. It causes a fragile objects on the floor.			
• DO NOT use your Cybovac in areas with exposed electrical outlets.			
• We recommend you test the Cybovac on a small area before general use. This is to ensure that the appliance does not scratch or damage the floor.			
• Please ensure that all individuals are aware that your Cybovac is in use. This is to avoid any accidents.			
• Ensure that the Dust Bin or the Filter are firmly in place before using the Cybovac.			
• Remove all power cords and other loose items which could get tangled into the appliance from the floor before using the Cybovac.			
• Remove all loose objects from the floor before using your Cybovac to prevent its openings from being blocked. This product contains sensitive papers.			

