


QUICK START GUIDE


IPB217,HUVDB201

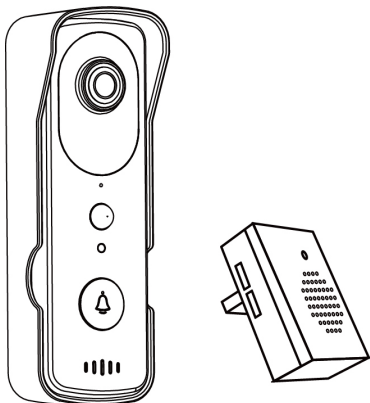


Read me before use!

Keep manual and all relevant information for future reference.

Description of the device

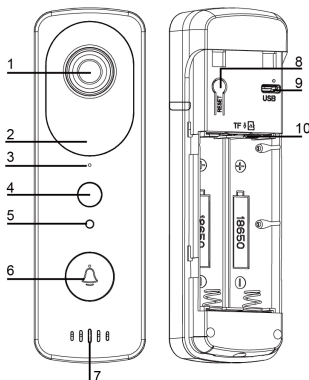

1. Video doorbell lens
2. Indicator light
 - Red light solid on: the device network is abnormal
 - Blinking red light: awaiting Wi-Fi connection
 - Blue light solid on: device running correctly
 - Blinking blue light: currently connecting
3. Microphone
4. PIR sensor
5. Light sensor
6. Doorbell button
7. Built-in speaker
8. Reset button
9. USB-C (for charging)
10. Micro SD card slot (behind battery cover)
11. Battery compartment
12. Tamper screw hole
13. Volume button
14. Ring tones election button
15. Indicator light
 - blue blinking fast: waiting for pairing
 - red blinking: signal received

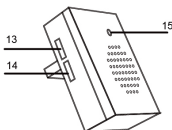

USB Chime Setup

Supply Power: Connect your Wireless Chime to a USB power adapter near the Smart Doorbell. You can move it to a different location after pairing the device.

Confirm Status Light: Wait for the Status Light to blink twice and then turn off.


Pair with Smart Doorbell:

1. Press and hold the Volume button (13) until the blue indicator blinks rapidly, then release the button.

2. Press the doorbell button on the front of the device.

Complete Setup: Press the doorbell button again to ensure it rings. Your device is now paired.

Note: Tapping the Ring Tone Selection button (14) cycles through all four tones. The selected tone will play by default once you stop cycling through them.

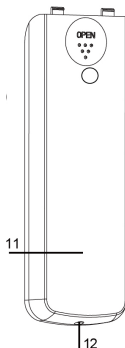

About the device

1. Charging and power on the device

Charge the device before start to use.

Install the batteries and charge the battery with a 5V (1A~2A) adapter (not included) to connect device's USB interface with supplied power cable.

It costs approx. 10 hours for fully charged.

The device will be powered on automatically after the batteries installed.

2. Micro SD card

To save the events into local storage, the device needs a max.

8GB~128GB (Class 10 or higher) micro SD card.

Please format the card before using.

3. Reset

If the device is not able to be connected to the app, you may need to reset the device.

Hold and press the reset button for 5 seconds, the device will be restarted and you will hear the “welcome” voice announcement, which means the reset is succeed and the device is ready to connect.

4. Installation the device

Connect the device with App to check the signal before mounting the device.

Installation the device:

Check that you have a strong Wi-Fi signal (at least two bars) where the smart device is to be installed.




Setup with the App


1. Download and Install the app:

Download and install the **HALOWatch** app by scanning the QR code for the Apple Store or Google Play Store.

Android

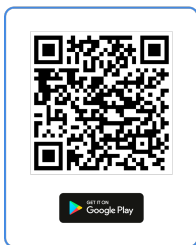

iPhone

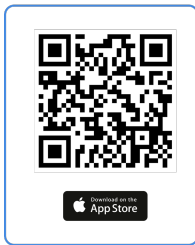

HALOWATCH

2. Account Registration:

Open the app and register a new account or log in to an existing account.

The image displays three sequential screenshots of the HALOwatch app's account registration and login process, connected by a dashed orange arrow indicating the user's path.

Screenshot 1: Welcome to HALOwatch

- Illustration of a house with a camera icon.
- Text: "Welcome to HALOwatch"
- Text: "Unlock a more powerful camera. Sign Up and begin the setup process. Powered by InstaVision"
- Dropdown menu: "United States"
- Buttons: "Sign In" and "Sign Up"
- Text: "Don't have an account yet? [Sign Up](#)"

Screenshot 2: Sign Up


- Back arrow and "Sign Up" title.
- Form fields: "Email", "Password", and "Confirm Password" (each with an eye icon for visibility toggle).
- Consent checkboxes:
 - ☒ "By checking this box, I consent to receive marketing SMS and RCS messages from HALOwatch."
 - ☐ "By signing up below, I agree to HALOwatch's terms and conditions & privacy policy"
- Buttons: "Sign Up" and "Sign In"
- Text: "Already have an account? [Sign In](#)"
- Text: "Having trouble Signing Up? [Get Help](#)"

Screenshot 3: Sign In

- Back arrow and "Sign In" title.
- Form fields: "Email" and "Password" (with an eye icon for visibility toggle).
- Options: ☒ "Remember me" and [Forgot Password?](#)
- Text: "By signing in below, I agree to HALOwatch's terms and conditions & privacy policy"
- Buttons: "Sign In" and "Sign Up"
- Text: "Don't have an account yet? [Sign Up](#)"
- Text: "Having trouble Signing In? [Get Help](#)"

3. Add device:


Navigate to the Home Page within the app. Locate and select "Add Camera" then go through preparation instructions to power on your device properly.

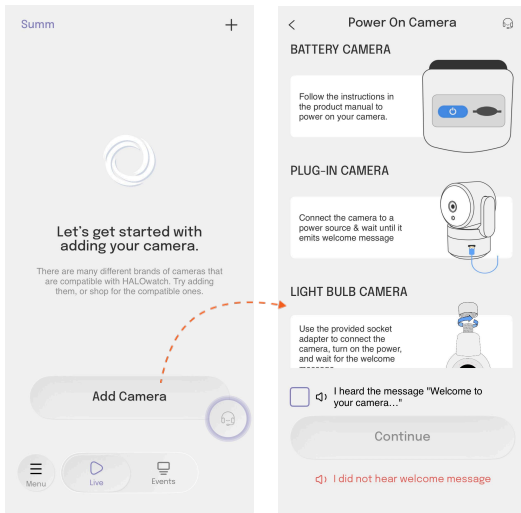

4. Bluetooth Access:

Follow the on-screen instructions to enable Bluetooth access, which is required for device discovery.


Do not skip this step. Ensure Bluetooth access is enabled as instructed, allowing the app to discover the device via BLE.

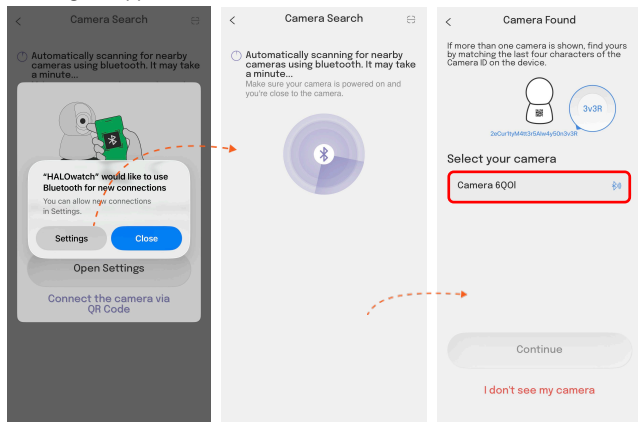

5. Connect to Wi-Fi:


The app will automatically scan for nearby 2.4 GHz & 5 GHz Wi-Fi routers.

Note: This camera only supports 2.4GHz Wi-Fi, if your smartphone connects to a 5GHz Wi-Fi please switch to 2.4GHz then connect with camera.

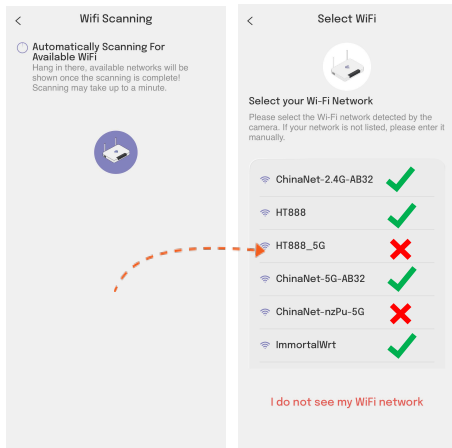

6. Input Wi-Fi Credentials:

Enter the password for your selected Wi-Fi network. Click "Next" to initiate connection. Wait a few seconds for the device to connect to the internet. You'll hear a notification sound from the device indicating successful progress.

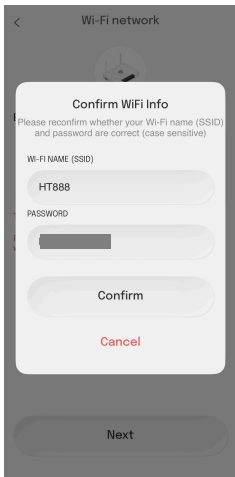

A screenshot of a mobile application interface for Wi-Fi network selection. At the top, there is a back arrow and the text "Wi-Fi network". Below this is a circular icon representing a Wi-Fi signal. The main content area is a white card titled "Confirm WiFi Info" with a subtitle: "Please reconfirm whether your Wi-Fi name (SSID) and password are correct (case sensitive)". There are two input fields: "Wi-Fi NAME (SSID)" containing the text "HT888" and "PASSWORD" which is currently empty. Below the input fields are two buttons: "Confirm" and "Cancel". At the bottom of the screen, outside the card, is a large "Next" button.

Wi-Fi network

Confirm WiFi Info

Please reconfirm whether your Wi-Fi name (SSID) and password are correct (case sensitive)

Wi-Fi NAME (SSID)


HT888

PASSWORD

Confirm

Cancel


Next

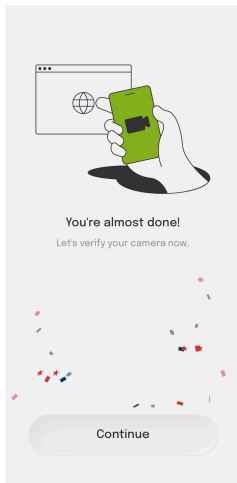

7. Live view and app support

Hear and talk to the device with the app.

If you have any questions or suggestions, find the support icon as following to chat or e-mail with us.

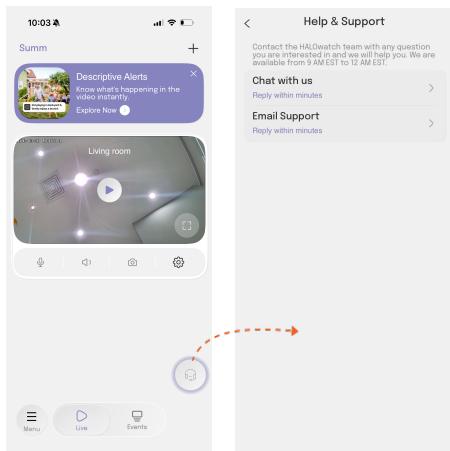

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.