

 
成品尺寸:420x128MM 105克铜版纸黑白正反面印刷

折叠成品尺寸: 105X128MM

Smart Indoor Camera


Users Manual

Model: IPC201

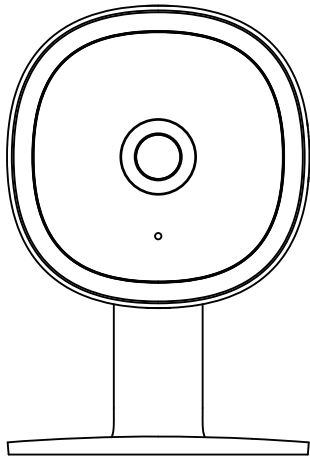


1 What's included

 ①



②

 

③



 
1. Indoor camera

2. Type-C USB cable


3. Double side sticker

2 Parts of the Camera


1

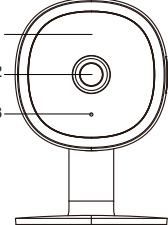


2

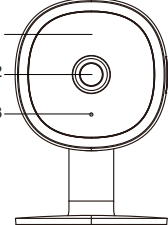 


3

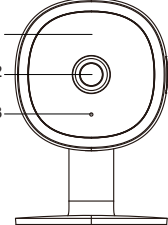 


4

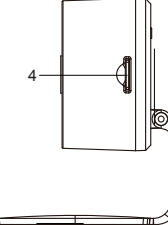 


5

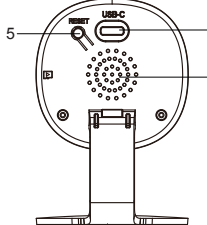 

6

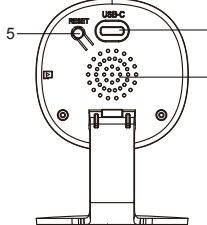 

7

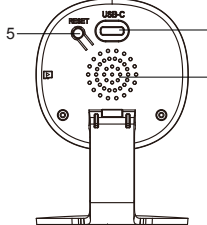 

1. Indicator

2. Camera lens

3. Speaker

4. Micro SD card slot

 
5. Reset button

6. Type-C USB


7. Speaker

3 Initial Setup

Turning On the Camera

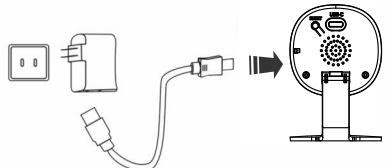


 Connect the power supply with the IP camera and you will hear the sound 'camera' start.

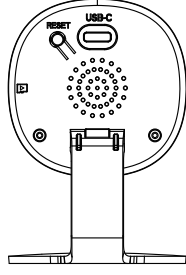

If the camera is failed to connect, it needs to be reset.
To reset the IP camera, use the reset pin to press the "Reset" hole on the top of the camera.
Press and hold until the camera automatically moving and hear the prompt sound.

 Installing the Memory Card

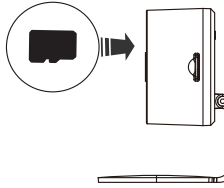

Class 4 or higher Micro SD memory card is required (up to 128GB) for normal use.

Preparations before use

Mobile device system requirements:

Android OS 4.4 or higher

iOS 9.0 or higher

Smart phone or tablet

IP Camera

Router

Install the App

Use your mobile phone or tablet to search for "TuyaSmart" in Google Play (for Android OS) or in the Apple app store(for iOS) to find the app, and install it according to the instructions.

Available on the iPhone App Store

OR

GET IT ON Google Play

→

 
TuyaSmart

Register an account


If this is the first time using the app, an account need to be registered as below:




→

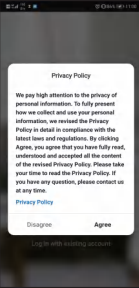

→

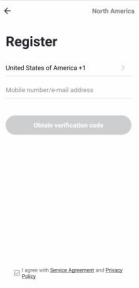 

→

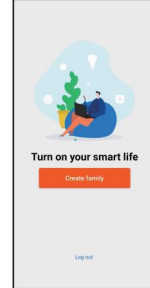 

4 Connecting Your IP Camera with the App

Note: Your IPC Camera is supported only on a 2.4GHz Wi-Fi network. For setup, make sure your mobile device is connected to a 2.4GHz Wi-Fi network

 
1. After installing the app 'Tuya Smart', open the app and follow the prompts to setup the app. Then tap '+' or 'Add Device' from the home page. Tap 'Security & Sensor', then choose 'Smart Camera'.

 
2. Power the device on and hear the sound of 'camera start'.

Make sure your smart device is connected to a 2.4G Wi-Fi network, then tap 'Confirm'.





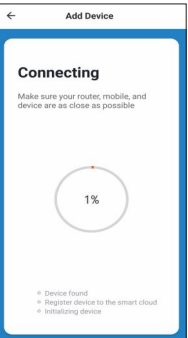

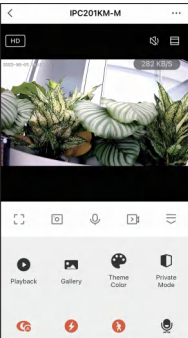

6 FAQ

PROBLEM	CORRECTIVE ACTION
Camera will not connect to my Wi-Fi network	1. Make sure the Wi-Fi signal is flashing. If the Wi-Fi signal is not flashing, you will need to press and hold Reset Button located at the back of the camera(see the Description section). 2. Make sure the Wi-Fi network is a 2.4GHz network, device will not connect to a 5GHz network. 3. Test your Wi-Fi network work with other devices such as your phone or computer to make sure it is operation properly. 4. The Wi-Fi connection may be out of range during pairing. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. 5. Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.
The camera is off-line	1. There could be a temporary issue with your internet connection (e.g., service disruption). Please try again in a few minutes. 2. Make sure your Wi-Fi router is turned On. 3. The camera may not have power to it, make sure the wall switch and breaker is in the On position. 4. Make sure the camera is getting a good signal from your Wi-Fi router. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. 5. The camera may have been disconnected from your Wi-Fi network, press and hold Reset Button(see the Description section) until you hear an audible tone.
How to reset the camera to reenter pairing mode?	1. Press and hold reset button located at the back of the camera (see Description section) until you hear an audible tone.

The camera is not recording?

1. Make sure Record Switch is turned On in APP, under SD Card Settings. This is located in Settings menu on the upper right corner in the control panel.

2. Make sure that the microSD card is installed correctly. To confirm the camera is recognizing the microSD card, go to the SD card Settings in the Settings menu and make sure microSD Card capacity shows Total capacity, Used and Free space. If this does not appear you may consider reformatting the microSD card.

3. WARNING: Reformatting microSD card will delete all videos stored on card. Please go through the troubleshooting section before doing so.

How do I set the camera to Event or Continuous Recording?

1. In the Settings menu under SD card settings make sure Record Switch is Turned ON and then select Event Recording or Continuous Recording.

How do I check the available space on the SD card?

1. In the Settings menu under SD settings, you will see Used Space and Free Space.

2. Note: Camera only support 128GB or less microSD cards with FAT32 format.

What happens when the microSD card reaches full capacity?

1. On the microSD card reaches full capacity, new videos will start rewriting(deleting) over the oldest videos.

Can I use a new microSD card if I do not want to record over existing videos?

1. Yes, you can use a new microSD card if you do not want to record over existing videos by removing the side cover on the camera and replacing the exiting microSD card with a new one as long as it does not exceed 128GB. Once this is completed you will need to format the microSD card by going to the SD card settings in the Settings menu and pressing Format SD Card then Confirm.

2. WARNING: Reformatting microSD card will delete all content stored on card.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.