

QUICK START GUIDE


IPC278,HUVIPCWP2



Read me before use!

Keep manual and all relevant information for future reference.


Description of the camera

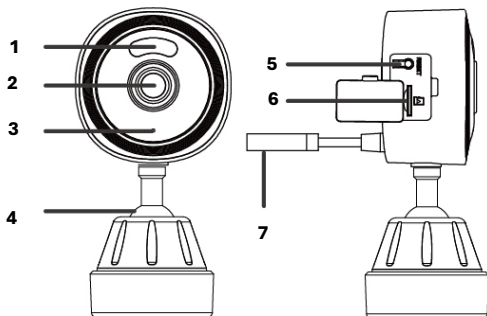

1. Indicator LED light
2. Camera lens
3. Microphone
4. Camera bracket
5. Reset button
6. Micro SD card slot (max. 128GB)
7. USB-C power connector

Install the camera:

Put the camera on a flat place, or mounting on the wall as following:

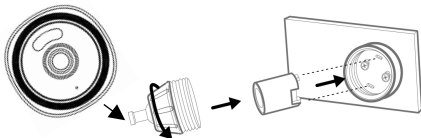

About the camera

1. Power on the camera

To power on the camera, use a 5V (1A~2A) adapter (not included) to connect camera with supplied power cable.

The indicator will turn on in blue color with a voice prompt, which means camera is ready for connection.

2. Micro SD card

To save the events into local storage, the camera needs a max. 8GB~128GB (Class 10 or higher) micro SD card.

Please format the card before using.

3. Reset

If the device is not able to be connected to the app, you may need to reset the camera.

Hold and press the reset button for 5 seconds, the camera will be restarted and you will hear the “welcome” voice announcement, which means the reset is succeed and the camera is ready to connect.

4. Installation the camera

Connect the camera with App to check the signal before mounting the camera.

Installation the camera:

Check that your smartphone shows a strong Wi-Fi signal (at least two bars) where the smart camera is to be installed.



Setup with the App

1. Download and Install the app:

Download and install the **HALOWatch** app by scanning the QR code for the Apple Store or Google Play Store.



HALOWATCH

2. Account Registration:

Open the app and register a new account or log in to an existing account.

The image displays three sequential screenshots of the HALOwatch app's account registration process, connected by a dashed orange arrow indicating the user's path.

Screen 1: Welcome to HALOwatch

- Illustration of a house with a camera icon.
- Text: "Welcome to HALOwatch"
- Text: "Unlock a more powerful camera. Sign Up and begin the setup process. Powered by InstaVision"
- Dropdown menu: "United States"
- Buttons: "Sign In" and "Sign Up"
- Text: "Don't have an account yet? [Sign Up](#)"

Screen 2: Sign Up


- Back arrow icon
- Spinner icon
- Form fields: "Email", "Password", "Confirm Password" (each with an eye icon for visibility toggle)
- Checkboxes and text:
 - ☒ "By checking this box, I consent to receive marketing SMS and RCS messages from HALOwatch."
 - ☐ "By signing up below, I agree to HALOwatch's terms and conditions & privacy policy"
- Buttons: "Sign Up" and "Sign In"
- Text: "Already have an account? [Sign In](#)"
- Text: "Having trouble Signing Up? [Get Help](#)"

Screen 3: Sign In

- Back arrow icon
- Form fields: "Email", "Password" (with an eye icon)
- Checkboxes and text:
 - ☒ "Remember me"
 - [Forgot Password?](#)
- Text: "By signing in below, I agree to HALOwatch's terms and conditions & privacy policy"
- Buttons: "Sign In" and "Sign Up"
- Text: "Don't have an account yet? [Sign Up](#)"
- Text: "Having trouble Signing In? [Get Help](#)"

3. Add Camera:


Navigate to the Home Page within the app. Locate and select "Add Camera" then go through preparation instructions to power on your camera properly.

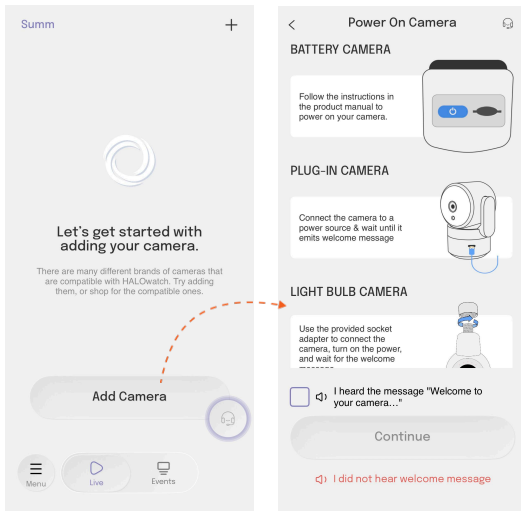

4. Bluetooth Access:

Follow the on-screen instructions to enable Bluetooth access, which is required for device discovery.


Do not skip this step. Ensure Bluetooth access is enabled as instructed, allowing the app to discover the device via BLE.

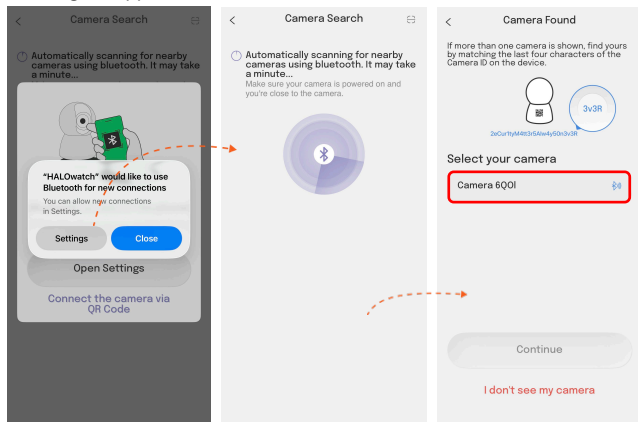

5. Connect to Wi-Fi:


The app will automatically scan for nearby 2.4 GHz & 5 GHz Wi-Fi routers.

Note: This camera only supports 2.4GHz Wi-Fi, if your smartphone connects to a 5GHz Wi-Fi please switch to 2.4GHz then connect with camera.

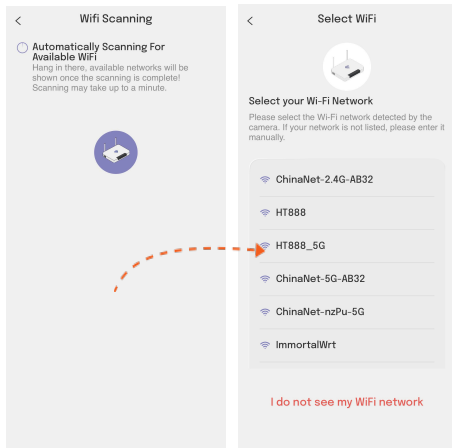

6. Input Wi-Fi Credentials:

Enter the password for your selected Wi-Fi network. Click "Next" to initiate connection. Wait a few seconds for the device to connect to the internet. You'll hear a notification sound from the device indicating successful progress.

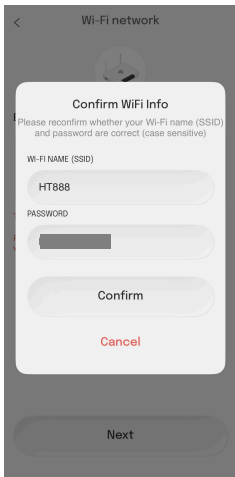

The screenshot shows a mobile app interface with a dark grey background. At the top, there's a back arrow and the text "Wi-Fi network". Below this is a small icon of a Wi-Fi router. A white dialog box titled "Confirm WiFi Info" is centered. It contains the text "Please reconfirm whether your Wi-Fi name (SSID) and password are correct (case sensitive)". Below this, there are two input fields: "Wi-Fi NAME (SSID)" with the text "HT888" and "PASSWORD" which is currently empty. At the bottom of the dialog are two buttons: "Confirm" and "Cancel". Below the dialog, on the dark grey background, is a "Next" button.

Wi-Fi network

Confirm WiFi Info

Please reconfirm whether your Wi-Fi name (SSID) and password are correct (case sensitive)

Wi-Fi NAME (SSID)


HT888

PASSWORD

Confirm

Cancel


Next

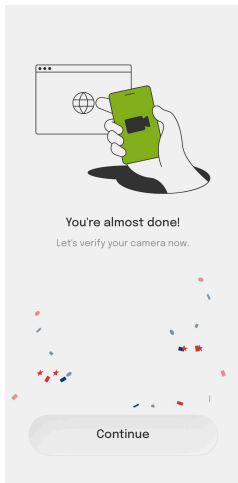

7. Live view and app support

Hear and talk to the camera with the app.

If you have any questions or suggestions, find the support icon as following to chat or e-mail with us.

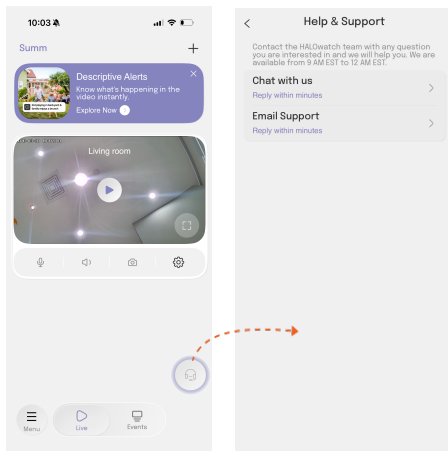

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.