 


SMART CAMERA BULB WITH MOTION TRACKING

IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

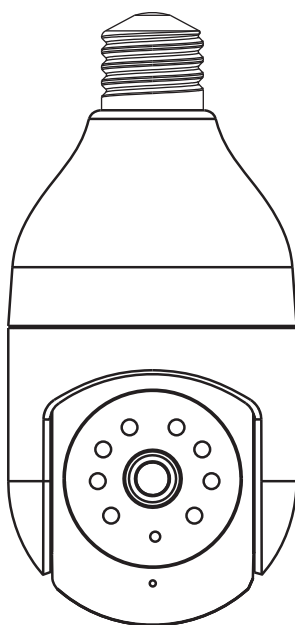

Only supports
2.4GHz Wi-Fi
Networks

**READ BEFORE INSTALLATION.
SAVE THESE INSTRUCTIONS.**

Table of Contents

Safety Information	2
FCC Statement	2
Warranty	2
Pre-Installation	3
Hardware Included	3
Description	3
Installation	4
App Setup	4
Troubleshooting	5

Safety Information

IMPORTANT SAFEGUARDS:

ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT.



CAUTION: Please read all information carefully before installation.



CAUTION: Suitable for Damp Locations.



CAUTION: Do not use with dimmers.



CAUTION: Use only on 110-240V 50/60Hz circuit. This product is not user-serviceable. Do not attempt to open the product enclosure for any reason. Reliable operating temperature is -4°F to 104°F (-20°C to 40°C).



CAUTION: This device is not intended for use with emergency exits.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

 
Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Limited Warranty

This product is warrantied to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please visit [www.honeywell.com/thermostatwarranty](#) for instructions on replacement/refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

HARDWARE INCLUDED




AA



NOTE: Hardware not shown to actual size.

Part	Description	Quantity
AA	Camera	1

 
Description

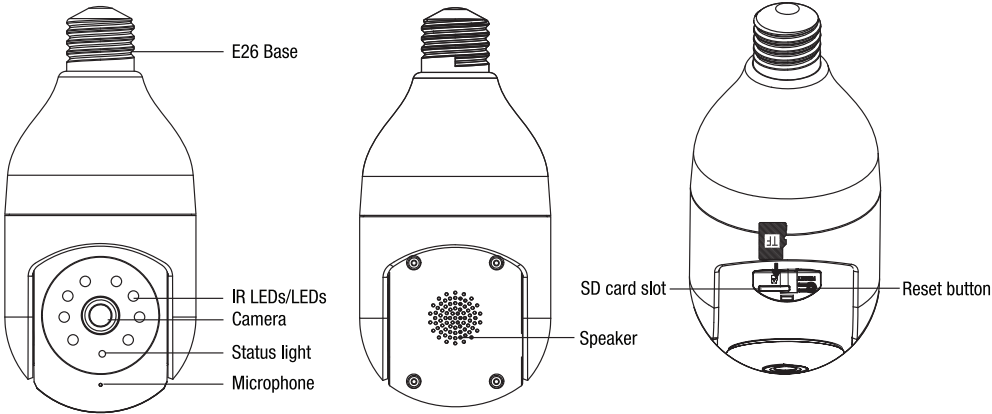

Input Power: 7.5W 110-240V 50/60Hz 0.3A	
Status Light	Blinking RED = Pairing Mode Solid RED = No Wi-Fi Connection Blinking BLUE = Connecting to Wi-Fi Solid BLUE = Connected to Wi-Fi
MicroSD Card Slot	Add a maximum 128GB MicroSD card (sold separately) to enable recording. Only supports microSD card with FAT32 format.
Reset Button	Press and hold for 5 seconds.

1 Installing the smart camera bulb

 Turn OFF the light switch before installing. Screw in the Smart Camera Bulb (AA) clockwise into an E26 socket until it is fully secure. Turn ON the light switch and wait for 20 seconds to fully power on and to start going into pairing mode.

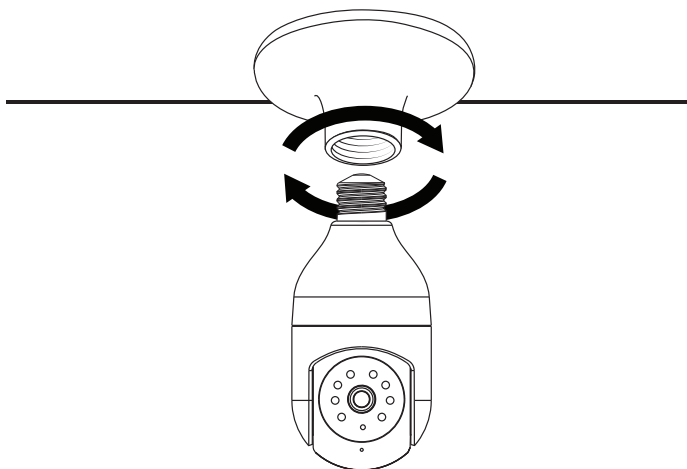

APP Setup

 


Turn on Bluetooth and start the

- Check to be sure the camera is in pairing mode. If not in pairing mode, press and hold the Reset Button until you hear an audible tone.
- Tap "Add" in 'Discovering devices...' You will eventually be prompted to enter your Wi-Fi network and password.
- Follow the directions in the app complete setup.
- You can find more pairing methods in the drop down menu on the device set-up page.

Be sure to connect to a 2.4 GHz Wi-Fi network that covers your installation location.

App

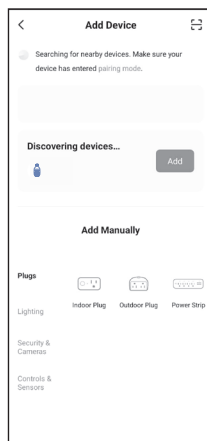

PROBLEM	CORRECTIVE ACTION
Camera will not connect to my Wi-Fi network	- Press and hold Reset Button until for 5 seconds or until you hear an audible tone. - Make sure the Wi-Fi network is a 2.4GHz network. Device will not connect to a 5GHz network. - Test your Wi-Fi network with other devices such as your phone or computer to make sure it is operating properly. - The Wi-Fi connection may be out of pairing range. Use your phone to check the the Wi-Fi signal strength: it is recommended to have at least 2 signal bars showing for proper connection. - Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.
The camera is offline	- There could be a temporary issue with your internet connection (e.g., service disruption). Please try again in a few minutes. - Make sure your Wi-Fi router is turned On. - The camera may not have power to it. Make sure the wall switch and breaker are in the On position. - Make sure the camera is getting a good signal from your Wi-Fi router. Use your phone to check Wi-Fi signal strength: it is recommended to have at least 2 signal bars showing for proper connection. - The camera may have been disconnected from your Wi-Fi network. Press and hold the Reset Button until you see a blinking red LED and hear an audible tone. Follow directions in the App Setup section of the manual to re-connect the camera to your Wi-Fi network.
Live video stream is slow to load	Camera streaming issues may be caused by any of the following: - Your phone's cellular connection, which relies on mobile coverage. - Limited internet bandwidth at home. For example, other video streaming services running at the same time on your network can cause congestion slowing down the internet upload and download speeds. - Wi-Fi reception may not be stable or work reliably if the camera's Wi-Fi signal strength is less than 2 signal bars. You may need to install a Wi-Fi repeater or extender to boost the Wi-Fi signal.
How do I reset the camera to reenter pairing mode?	Press and hold Reset Button until you hear an audible tone.
The camera is not recording	- Under the SD Card and Record Settings in the Cameras app, make sure the Record Switch is turned On. - Make sure that the MicroSD Card is installed correctly. To confirm that the camera is recognizing the MicroSD Card, go to the Settings menu in the Cameras app. Then, go to the SD Card and Record Settings menu and make sure the MicroSD Card capacity menu shows total, used, and free space. If this does not appear, consider reformatting the MicroSD Card. WARNING: Reformatting MicroSD Card will delete all videos stored on card. Please go through the troubleshooting section before doing so or contact our Customer Support Team.
How do I set the camera to Event or Continuous Recording?	In the Settings menu under SD Card and Record Settings make sure Record Switch is turned On, and then select Event Recording or Continuous Recording.
How can I check the available space on the MicroSD Card?	In the Settings menu under SD Card and Record Settings, you will see Used Space and Free Space. Note: Camera only supports 128GB or less MicroSD Cards with FAT32 format.
What happens when the MicroSD Card reaches full capacity?	Once the MicroSD Card reaches full capacity, new videos will start rewriting (deleting) over the oldest videos.
Can I use a new MicroSD Card if I do not want to record over existing videos?	Yes, you can use a new MicroSD Card if you do not want to record over existing videos. Remove the existing MicroSD Card from the side of the camera and replace a new one not exceeding 128GB capacity. Once this is completed, format the new MicroSD Card by going to the SD Card and Record Settings and pressing Format SD Card, then Confirm. WARNING: Reformatting MicroSD Card will delete all videos stored on card. Please go through the troubleshooting section before doing so or contact our Customer Support Team.

SD™, microSD™, and SDHC™ are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries, or both.