



Bluetooth TURBO WIRELESS SPEAKER

Notice:
Please read user manual carefully and keep it for your records.

Package includes:
1-Bluetooth® speaker
1-USB to Micro cable
1-User Manual

Safety instructions:

- Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods. You may also go online at www.call2recycle.org for a battery recycling drop off location near you.
- This product is not a toy. Use extra caution while children are using this product.
- Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200 degrees.
- Device may become warm while charging.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- Damage, shock, and/or injury can occur if this warning is not heeded properly.
- This speaker is waterproof grade is IPX4, which means that the product remains functional only from splashing water. Please do not submerge into water.
- Do NOT attempt to open the water-tight waterproof USB cover on the Waterproof speaker before drying the speaker thoroughly and completely.
- Do NOT open the Waterproof USB Cover while the device is in water or very humid places, such as swimming pools or bathrooms.
- **The speaker is NOT waterproof when using AUX function and recharge battery as the cover is opened.

Charging:

- Connect the small end of the micro USB charging cable (included) to the Micro USB port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor. (not included)
- The LED indicator will turn red while charging.
- Once fully charged, the red LED will turn off.
- Charging could take up to 6 hours.
- The fully charged battery has power for up to 5 hours of play/talk time or up to 12 hours of standby time.

Pairing:

- To turn on the speaker, switch the ON/OFF button to the ON position in the back of the speaker. To turn off the speaker, switch the ON/OFF button to the OFF position.
 - When you turn on the device, the voice prompt will say "Bluetooth Mode". Activate the Bluetooth feature on the phone, and set the phone to search for wireless devices. (The speaker will show on your device as BC-BS-174)
- The voice prompt will confirm that pairing was successful.

Note:

Before connecting the bluetooth, the blue light flash fast. Once paired, for second time use, it will be automatically connected.

Functionality:

- Power On/Off
Press and hold 2-3 seconds the ON/OFF button the unit ON/OFF
- Volume down: Press quickly to decrease the volume.
- Last song: Press quickly for last song.
- Volume up: Press quickly to increase volume.
- Next song: Press quickly for next track.

- Play/Pause/ Phone Answer and Redial Key
When playing music, press the button to pause or play. Press and hold to un-pair the current device. When you receive a call, press the button to answer. When the call ends, music will resume playing.
- Micro USB: Use a computer USB port/AC power adapter with USB
- 3.5mm audio input (line-in)



Specifications:

- Output Power: 5W
- Frequency Response: 20-20KHz
- Input Power: 5V
- Battery Capacity: 1200mAh
- Operating Range: 33 feet (10m)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BICONIC:

Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure

which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM

Bytech NY Inc,
2585 West 133rd Street
Brooklyn NY 11223
(718) 449-3700
©2018 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective com