

User manual
Desktop Smart Cup
PT-502



Thank you very much for using PT-502 DESKTOP SMART CUP. This user manual contains how to use PT-502 DESKTOP SMART CUP and some other important safeguards. Please read all instructions carefully before using, and save these instructions for future reference.

SAFETY CAUTIONS

This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation. CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. NOTE: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help."

This appliance is intended to be household and indoor used only.


PARTS

Product parts

- Base ----- 1
 - Cup ----- 1
 - Power adapter ----- 1
 - User manual ----- 1
- In order to make our product better, the company will not make any design changes without any further notice.

- Precautions before using
- Please confirm whether the cup has scratches or some other adverse conditions before using.
 - Please clean the cup with a soft cloth stained with detergent before using.
 - Although the company is committed to the pursuit of perfect quality, if you find some problems or lack of accessories, do not use and contact with the After-Sales service center .

PARTS OF THE APPLIANCE

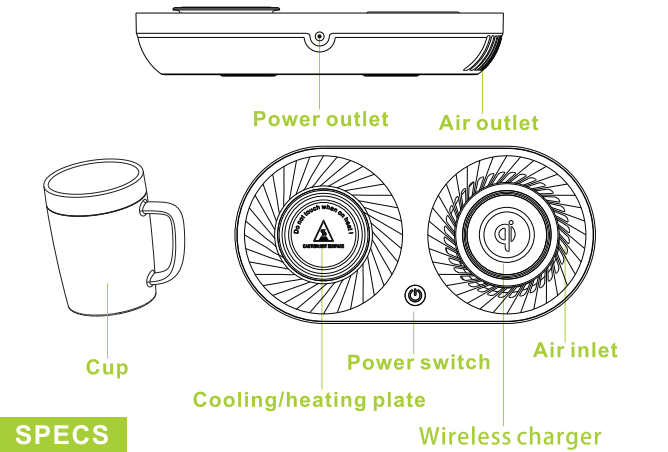

SPECS

Base Size	L23.6cmXW11. 6cmXH4. 45cm
Pack Size	L24.2cmXW15. 7cmXH12. 6cm
Cup	380ml
Weight	1016g

Input	12V /4A		
Watt	48 W (Wireless charge maximum output power : 10w)		
Noise	≤ 45 db		
Efficiency	Cool down to 6℃ heat up to55℃(room temperature26)		
Materials	3003-O aluminum alloy material+PC/ABS +Food grade PP		
Country of Origin	China		
Frequency bands	119.8kHz	To	149.0kHz
Transmitter Power	7.5dB μ A/m @ 10m distance		

HOW TO USE

- Plug the adapter into the power outlet.
- Pour your favorite drinks into the cup.
- Put the cup onto the cooling/heating plate.
- Press the power switch to select mode. Press one for cooling mode, press second for power off, press third for heating mode and press fourth for power off. Long press to shut off. A short press in heating mode will also turn off the power.
- Adopt Qi wireless charging standard, this product can charge your smartphone at any time when you put your Smartphone onto the charging area, of course, your smartphone need has wireless charging function. LED intelligent indicator tell you the different status of this product as below:
 - Power on: Light flicker three times
 - Idle status: Off
 - Working status: Blue light on always
 - Malfunction: Red light on always
 - FOD: Red light flicker
 - Charging finish: Purple light on always

MAINTENANCE

- Please make sure that the cup is clean before using. If you need to clean cup, please use a soft cloth stained with detergent.
- If you sprinkle your drinks on appliance, please immediately turn off the power, tilt the base to make the spilled drinks flow out from the air outlet. Then put the appliance in the place without direct sunlight. Do not wash the base with water directly.
- When not in use for a long period of time, please clean the cup and store it in a cool, dry place after full drying.

MAINTENANCE

- Do not use any dishwasher or dryer equipments to clean/dry the cup .
- In order to make sure that the cup is not scratched, Do not use any detergent with abrasive or metal brush.
- Do not wash the fuselage base directly by water. It may result into a product failure.

SAFETY CAUTIONS

- Cup is made by the aluminum alloy material, temperature of the cup will also change when you are using the appliance, and you need to pay attention for it.
- Cup itself does not have cooling and heating functions. Do not put the cup in a microwave or fridge.
- Do not use any dishwasher or dryer equipments to clean/dry the cup.
- It takes about 30 minutes to cool down or heat up your normal temperature drinks.

- Depending on the ambient temperature, the cooling or heating time will vary.
- When cooling for a long time, the metal plate may be frozen together with the cup.
- Besides this cup, the regular can drinks in the market can also fit for the metal plate directly.
- When heating cans with carbonated drinks, please be sure to keep the cans opening. Otherwise it may cause an unexpected accident.
- Do not operate under a blanket or pillow, excessive heating can occur or cause fire, electrocution or injury to persons.
- The exhaust fan starts to work after pressing power switch.
- Keep away from heated surface, it causes a deformation or some other malfunctions, please do not store or use this appliance in high temperature.
- Do not repair or adjust the appliance, servicing must be performed by professional or qualified personnel. Or it may lead to malfunctions.
- Stop using if there is an unusual noise or smell, unplug the appliance from the electrical outlets immediately to turn all the controls to the 'off' position, then remove plug from outlet.
- Avoid contact with sharp edges or point objects which might cut or puncture fabric surface to avoid breakage.
- This appliance is designed with a safety function. If it has worked 4 hours, the power will be turned off automatically. Please make sure unplug from the mains outlet when not in use.
- This appliance is also designed with a waterproof function.

- If you sprinkle your drinks on appliance, please immediately turn off the power, tilt the base to make the spilled drink flow out from the air outlet. Then put the appliance in the shade without direct sunlight shade.
- Do not carry this appliance by the cord or use the cord as a handle
 - The appliance is only to be used with the power supply unit provided with the appliance.
 - Do not operate this appliance with a wet hand, it may lead to electric shock accidents.

WARRANTY POLICY

- Maintenance Service can be obtained in normal use of the appliance during warranty period which counted 1 year from the day of purchase. According to the warranty policy, quality problems occurred during the warranty period can get free repair. If you have any questions, you can also consult the after sales service center by phone or mail.
- If you are in the situation as following, you may have to pay for the Maintenance Service
 - cannot provide warranty card.
 - Failure to fill in effective contents or alter the warranty card
 - A machine stoppage caused by man-made reasons.
 - Damage caused by the impact during transport movement.
 - Stoppage or damage caused by external causes by force majeure, such as natural or man-made disasters.
 - Transfer, auction, secondhand sale or resale.

- Do not repair or adjust the unit, or you will not have warranty service even during the warranty period.
- Product failure or other direct or indirect loss caused by the use of the product is not acceptable to company.
- The company can not guarantee that there will be no program failure or other breakage problems during the use of this product.
- This product is designed without considering the functions used in medical equipment, atomic equipment, aerospace equipment, transportation equipment or the other highly sophisticated instruments or systems. If these devices or systems use this product, we will not be able to bear the loss.

WARRANTY PERIOD

(1 year from purchase date)

Name	
Address	
Tel	
Mail	
Purchase address	
Purchase date	
Order number	
Fault content	

Xiamen Paltier Electronic Technology Co., Ltd
Add: Unit 01, 3rd floor, No. 1726 Gangzhong Road, Free Trade Zone, Xiamen, China. 361000
Tel: (86) 592 5222563 Fax: (86) 592 5222563
Website: www.xmpaltier.com