 



PRODUCT OPERATION

BASIC FUNCTIONS

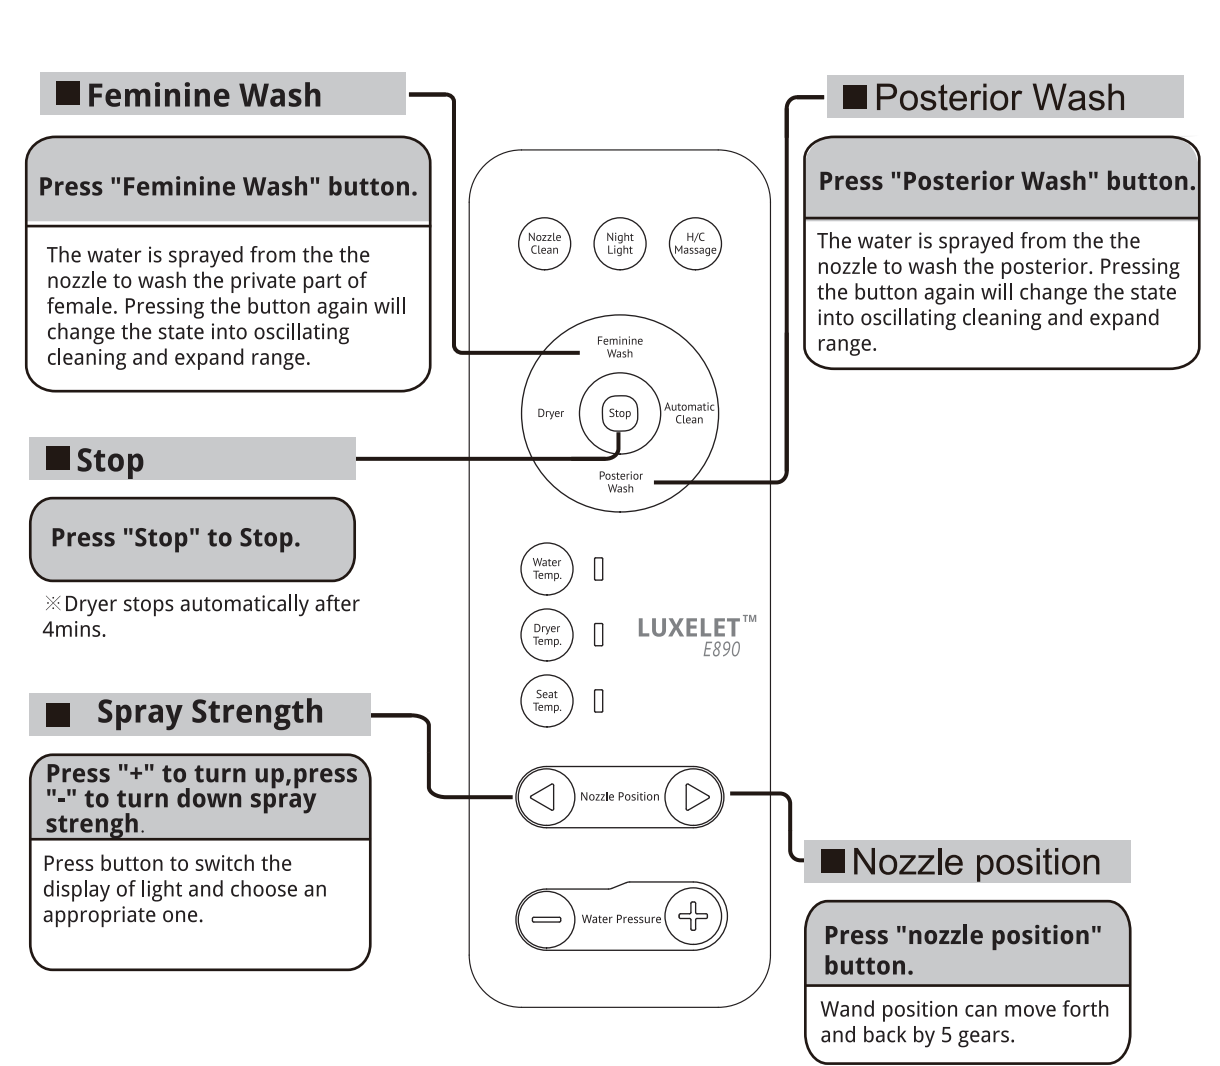

PRODUCT OPERATION

 BASIC FUNCTIONS (cont.)

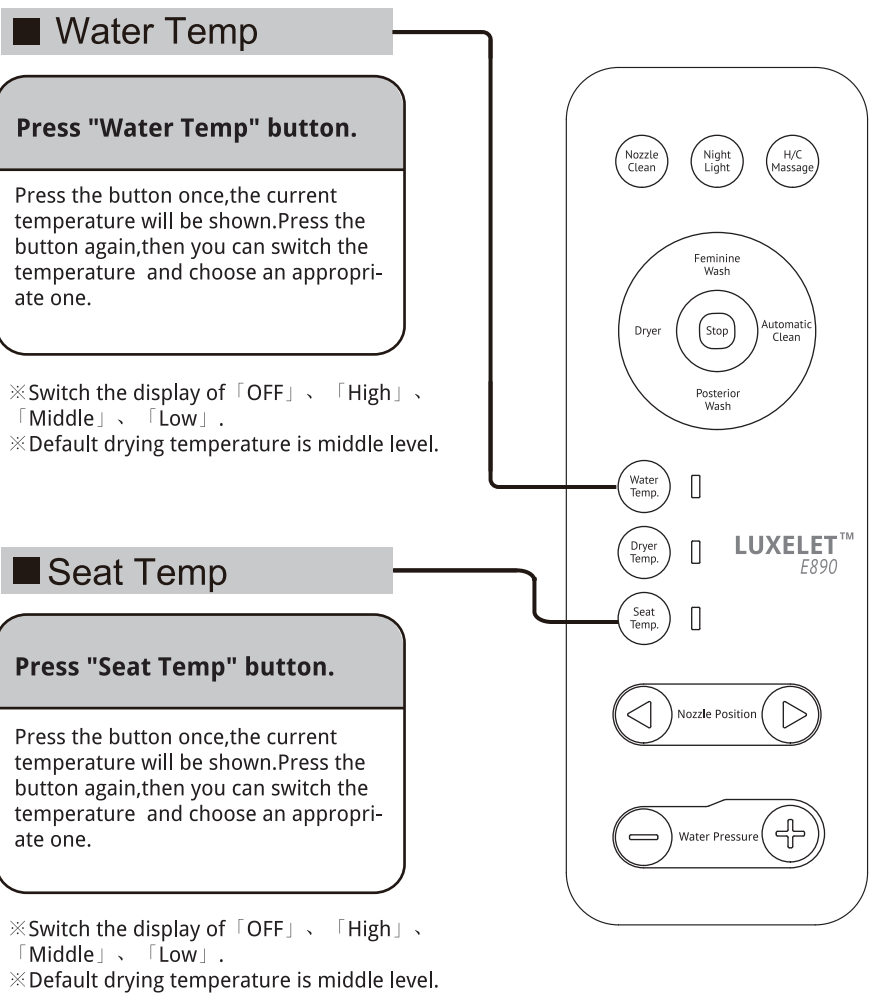

⚠ WARNING

Operation is subject to the condition that this device does not cause harmful interference

PRODUCT OPERATION

DRYER

Nozzle cleanse

Press "Nozzle cleanse" button.

Wand will extend without spraying. it is for mannually clean the wand.
※Only aailable when sensor isn't covered by human body or other things.

Dryer

Press "Dryer" button to dry your front and rear.

Press the button once, the current temp will be shown in light. Press the button again, the temp level will be switched. Choose an appropriate temp for you.

- ※Switch the display of 「OFF」 、 「High」 、 「Middle」 、 「Low」 .
- ※Default drying temperature is middle level.
- ※DRY stops automatically after 4mins.

Night Light

Press "Night Light" button.

Turn on/off the night light.

H/C MASSAGE

 
Press the button to burn on/off the H/C massage function.

While washing, press the button to start the cold and warm water in turns.
※ Only available when doing wash function.

AUTO

Press "Auto" button.

When seat & press the auto posterior wash, the bidet will start posterior wash 90s and then dryer 4 mins. If press the button again during the 90s, it will skip to drying.
※ Automatic functions like posterior wash and drying are particularly suited for kids and elders.

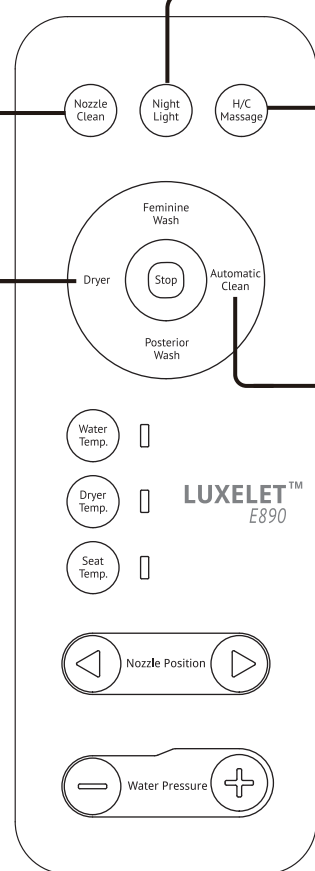

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.