


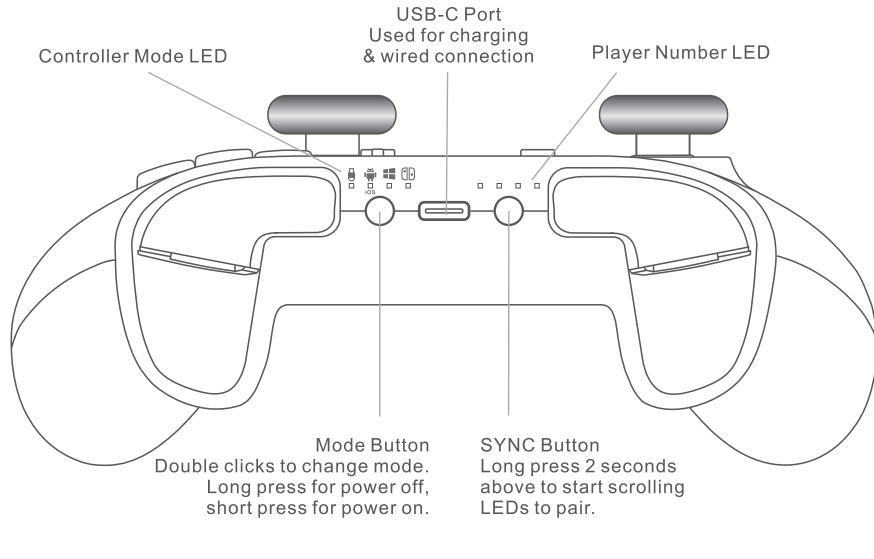

Calibration on joysticks, ZL & ZR triggers

To enter the calibration mode, simultaneously press the "L, R, D-pad Left, A" buttons on the controller for 6 seconds while it is in the power-on state. During calibration, fully move the left and right joysticks in complete circles for 2-3 times. Once the calibrated joystick's light ring turns green, its calibration is complete. The controller will automatically exit the calibration mode when both joysticks' light rings turn green.

Calibration on Gyroscope

In the power-on state, with the controller placed on a flat surface, simultaneously press the "+, -, D-pad Left, and A" buttons. This will initiate an automatic calibration of the gyroscope.

Once the calibration is complete, the controller will vibrate once as a notification.

*When the gyroscope is functioning normally, there is no need for calibration.

Pairing Methods with PC

Bluetooth Pairing Method (requires a computer with Bluetooth capability.):

1. Switch the controller to  mode. By long-pressing the pairing button for 2 seconds, the indicator light will start scrolling, indicating the pairing process has started.
2. Add and search for devices in your computer's Bluetooth settings and add the "GuliKit Controller" device.
3. The interface displays "Connected" to the new controller, indicating that the pairing process is complete.

Wired Connection Methods:

Set the controller to  mode. Connect one end of the provided data cable to the controller.


Insert the other end into a USB A port on your computer.

If you are using a desktop computer, it is recommended to plug the cable into one of the USB ports on the back of the computer case for a more stable connection.

Pairing Methods by using GuliKit KK3 "Hyperlink" adapter:

1. Set the controller to  mode, by holding the pairing button, the indicator light will start scrolling, indicating the pairing process has started.
2. Simply plug the adapter into a USB port on your computer, no further action is required.
3. Both the controller and adapter indicator lights will remain solid, indicating that pairing is complete.

Pairing Methods with Switch

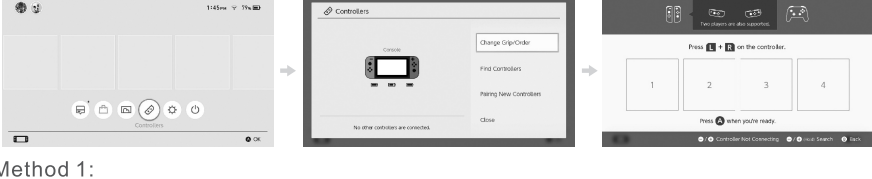

Method 1:

1. Enter the controller settings page on Switch, as shown in the above images.
2. Set the controller to  mode, by holding the pairing button for 2 seconds. The indicator light will start scrolling, indicating the pairing process has started.
3. The interface will display connection to the new controller, indicating that the pairing process is complete.

Method 2:

1. Set the controller to  mode. Connect one end of the provided data cable to the controller. Plug the other end into the USB A port on the Switch dock.
2. Place Switch console on the dock. The controller will automatically pair with the console.
3. Once the pairing is successful, you can unplug the data cable and use the controller wirelessly.

Alternatively, you can leave the data cable plugged in for wired mode usage.

Pairing Methods with Android, iOS, and macOS devices

1. Double-click the mode button on the controller to switch to  , iOS mode.
2. Hold the pairing button for 2 seconds. The indicator light will start scrolling, indicating the pairing process has started.
3. On your devices, go to the Bluetooth settings menu. Enable Bluetooth if it's not already turned on.
Tap on "Add New Device" or "Scan for Devices" to search for available Bluetooth devices. Select the "Xbox Wireless Controller" device from the list.
4. The interface will display "Connected," indicating that the pairing process is complete.

Use Method of Auto Pilot Gaming Function(APG)

APG function is a recording & repeat playback function for custom commands or macros using the APG button (Double-Square icon button).

Recording process:

Hold the APG button for 3 seconds. You will feel a short vibration, indicating that the recording has started.

From this point, all subsequent button presses and joystick movements will be recorded.

To stop the recording, either press the APG button again or wait for the recording to automatically stop after 10 minutes.

You will feel a long vibration, indicating that the recording is complete. The maximum recording time is 10 minutes.

Replay the recorded actions:

Press the APG button once briefly to automatically repeat the recorded actions once.

Double-click the APG button to continuously repeat the recorded actions until interrupted.

During the replay, you can use the joystick for movement, allowing you to perform actions while moving.

To cancel the replay midway, press any other button except the joysticks.

Back Button Configuration Method

 + **G1, G2, G3, G4**

Hold the Setting button (Gear icon button) along with the back button you want to configure. You will feel a short vibration, indicating that the configuration process has started.

Press the desired button that you want to assign to the back button. You will feel a long vibration, indicating that the configuration is complete.

*The mapped function of the back button will behave the same as the original button.

For example, if the original button has a rapid fire setting, the corresponding back button will also have the rapid fire function.

Trigger Mode Setting Method

By toggling the switch on the back, you can easily switch respectively for ZL and ZR triggers between the digital microswitch trigger mode and Hall effect analog trigger mode.


 Hall effect analog trigger

 Digital microswitch trigger

All special function settings mentioned below require holding down the Setting button  (Gear icon button) while pressing the corresponding buttons for configuration.

All special settings will be automatically saved. When there are special settings configured, the logo light  will be blue. When there are no special settings configured, the logo light  will be white.

During charging, the charging indicator light will be orange, and when fully charged, it will be green.

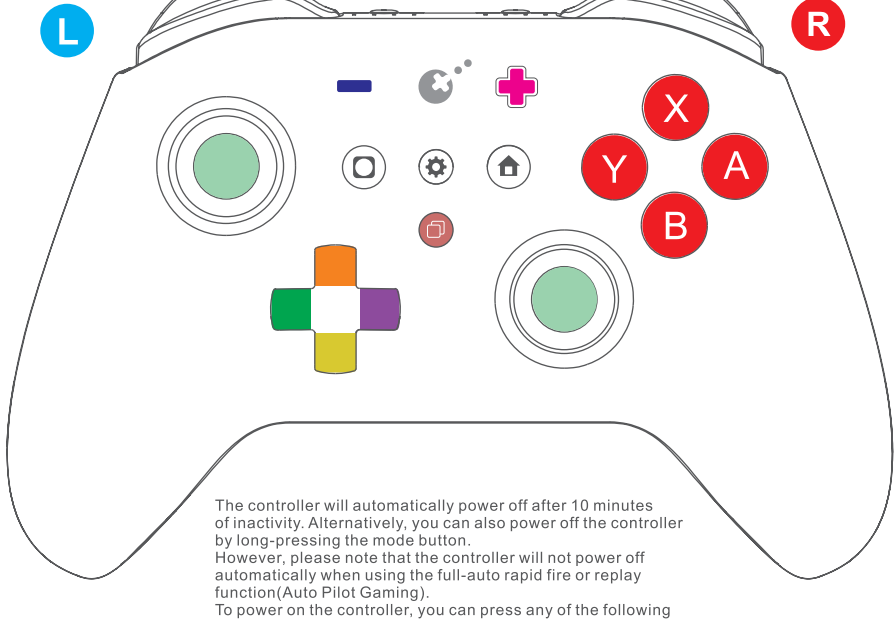

Set Motion Aim Assist for use in PC FPS games

 + **L, ZL**

- One vibration: Low sensitivity aim assist.
- Two vibrations: Medium sensitivity aim assist.
- Three vibrations: High sensitivity aim assist.
- Long vibration: Disable motion aim assist. (default mode)

( +L: Set motion assist to activate when the L button is held in-game.)

( +ZL: Set motion assist to activate when the ZL trigger is held in-game.)

Clear all settings (Reset)

 + **-**

A long vibration indicates that the reset process is complete, and the controller has been restored to its factory settings.

Adjust Joystick Sensitivity

 + **R3, L3**

- One vibration: Sensitivity 50%, joystick ring in red.
- Two vibrations: Sensitivity 100%, joystick ring in blue. (default setting)
- Three vibrations: Sensitivity 150%, joystick ring in green.

*R3 and L3 refer to the buttons when pressing down on the joysticks. Each joystick can be individually configured.

Adjust the light brightness

 + **+**

There are three levels of brightness adjustment available: Off, Low brightness, and High brightness. The settings cycle through these three options.

Set 4-direction on D-pad

 + **+**

- One vibration: The D-pad switches to 4-direction mode.
- Long vibration: Restores the default 8-direction mode. (default setting)

Rapid Fire (Turbo)

 + **A, B, X, Y, R, ZR**

- One Vibration: Normal rapid fire. It is active when the button is held down and stops when released.
- Two Vibrations: Auto rapid fire. Press the button once to initiate continuous rapid fire. Press the button again to stop.
- Long vibration: Cancel rapid fire. (Default mode)

A-B X-Y Swap

 + **+**

- One vibration: Swaps input values of the A-B and X-Y buttons.
- Long vibration: Restores the default button assignments.

Adjust Vibration Intensity

 + **+**

- One vibration: Weak vibration.
- Two vibrations: Strong vibration. (Default mode)
- Long vibration: Turn off vibration.

Adjust Vibration Mode

 + **+**

- One vibration: Rotary motor mode.
- Two vibrations: GuliKit Maglev haptic mode. (Default mode)
- Three vibrations: HD vibration mode.

APG Recording File Share

 + **+**

The setting lets you enter APG read/write mode first, next insert the USB data cable into your computer and you should see a USB drive named "GuliKit dat" on your computer.

Open the USB drive and you will see a file named "Auto. apg" which is the APG recording file that you can freely copy for backup or share.

If you want to overwrite the existing APG file, you can replace it with a new APG file by copying the desired APG file into the USB drive.

*Once the writing process is complete, the controller will automatically power off. Alternatively, you can hold the Mode button to power off the controller.

*Please avoid changing the file name to ensure proper functionality.

For more questions & answers, you can visit the website and navigate to the "Support" section and look for the "Frequently Asked Questions" (FAQ) related to the controller.

www.gulikit.com

FCC Warning

15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:
1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.