 




Model No. VMAHER09-1.32
FCC ID: 2ACCO-HER09

[illegible]

This product has been manufactured and sold under the responsibility of Group SFT. THOMSON and the THOMSON logo are trademarks of Technicolor (S.A.) or its affiliates and are used under license by Group SFT.

Any other product, service, company, trade or product name and logo references herein are neither endorsed nor sponsored by Technicolor (S.A.) or its affiliates. Intel, Intel Atom and the Intel Inside logo are trademarks of Intel Corporation in the U.S. and/or other countries.

All other trademarks and logos are property of their respective owners unless



- 1x THOMSON table
- 1x detachable keyboard
- 1x charger
- 1x document set

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference. However, this equipment may still cause interference to other devices, and you can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used without restrictions in all conditions without restriction.

FCC ID: J24000-90809

The technical drawing consists of two views of the Thomson submachine gun. The top view shows the overall layout with callouts 1 (slide), 2 (slide stop), 3 (slide stop lever), 4 (slide stop lever), 5 (slide stop lever), 6 (slide stop lever), 7 (slide stop lever), 8 (slide stop lever), 9 (slide stop lever), and 10 (slide stop lever). The side view shows the gun's profile with callouts 1 (slide), 2 (slide stop), 3 (slide stop lever), 4 (slide stop lever), 5 (slide stop lever), 6 (slide stop lever), 7 (slide stop lever), 8 (slide stop lever), 9 (slide stop lever), and 10 (slide stop lever). The text 'THOMSON' and 'MODEL 1920' are visible on the side view.

- [illegible]

hard disk, printer. The use of a USB Type-A female to Micro-USB Type-B male USB adapter (supplied) will be required to connect some peripherals.

7. Port Mfr (HDMI (High - Definition Multimedia Interface)) depending on the model. This port allows you to connect your tablet to an HDMI-compatible device such as a TV, monitor or projector.

8. Micro-SD card reader. The micro-SD card reader allows you to read or write on micro-SD IC / micro-SDHC memory cards.

9. **Microphone**
The microphone lets you use your tablet's voice commands, make audio/video calls, or make audio "recording" things.
10. **Headphone / microphone jack**
Use this port to connect external speakers or headphones to your tablet. You can connect headphones with an external microphone.
11. **Speaker**
This connector allows the tablet to be connected to the keyboard.
12. **Keyboard**
13. **Keyboard**
14. **Touchpad**
The touch pad lets you enjoy the features of a mouse. It offers an intuitive interface thanks to the multitouch gestures.

- Plug the power adapter into a grounded electrical outlet.

Note: Charge your Thomson device before using it for the first time.

 


Please read the following instructions for the battery of your THOMSON device carefully:

- Only a technician authorized by Thomson is authorized to remove and handle

- The battery
- Your Thomson battery may present a fire or burn hazard if removed or disassembled
- Please observe the information on the device's warning labels to prevent injury
- There is a risk of explosion if the battery is replaced by an incorrect model
- Do not throw the battery into the fire
- Do not attempt to short-circuit the Thomson battery
- Do not attempt to disassemble the battery or reassemble the battery
- Do not use the battery if it leaks
- The battery and its components must be recycled or disposed of properly
- Keep the battery and its components out of the reach of children

Turn on your device by pressing the power button for a long time



- Open the Start menu
- Press the Stop button



Discover more features on the website:
<http://www.mythomson.com>