

9792854

 
FLAME LAMP WITH BLUETOOTH SPEAKER



INSTRUCTION MANUAL



INSTALLATION INSTRUCTIONS

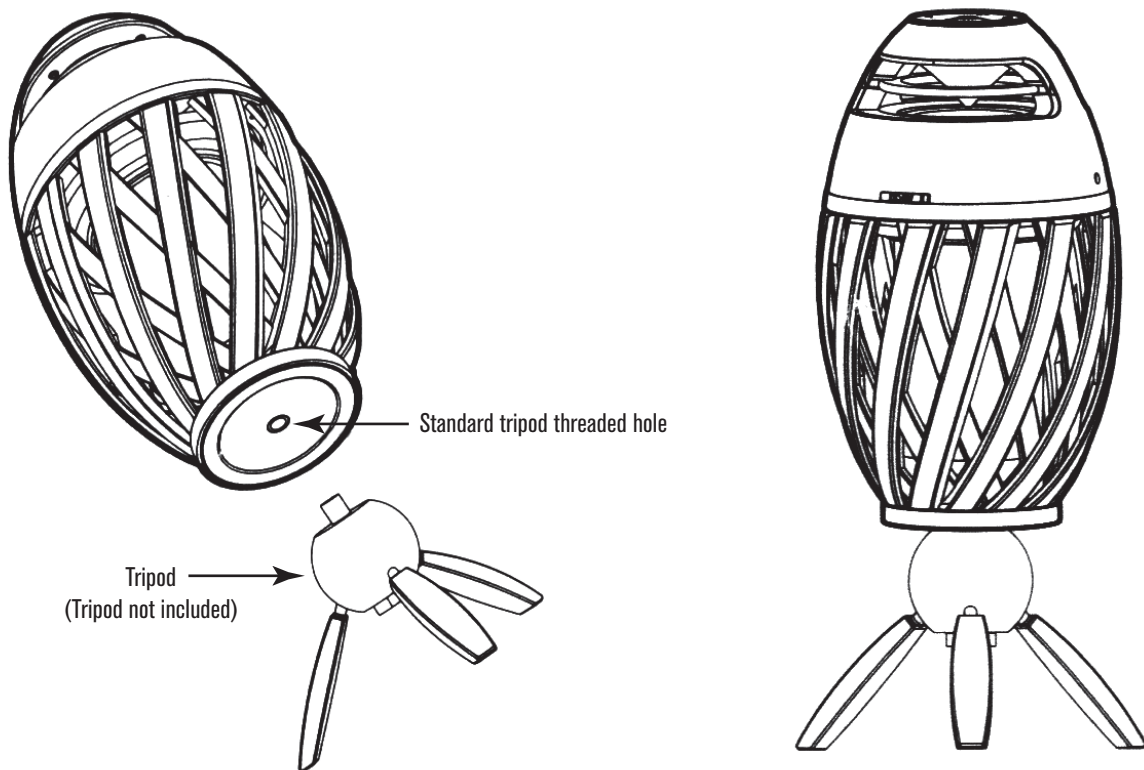

OPERATING INSTRUCTIONS

Operating with one Bluetooth speaker

When turning on the Bluetooth speaker:

 
1. You will hear a tone/sound and the white LED light will flash.
2. On your device thru the Bluetooth feature search for the name "A1" and connect to it.
3. Once it is connected successfully you will hear that same tone/sound confirming the connection. Note: The white LED lights will continue to flash.

Operating with two Bluetooth speakers

1. Turn on the  ON/OFF button on one of the Bluetooth speaker.
2. On your device thru the Bluetooth feature search for the name "A1" and connect to it.
3. Once it is connected successfully you will hear that same tone/sound confirming the connection. Note: The white LED lights will continue to flash.
4. Press any buttons on the two Bluetooth speakers, the functions are the same, volume+/-, pre song, next song and play button.

5. When the two Bluetooth speakers are matched, the two speakers will both sound the same tone. Note: One of the speakers will be the auxiliary speaker. You will notice this when the LED light is lit for a long period of time (right channel). The other speaker will be considered the main speaker. You will notice this when the LED light is flashing (left channel).

BLUETOOTH SPEAKER MODE

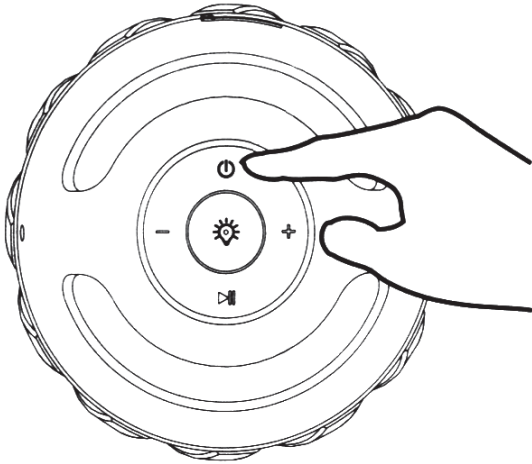

-  **ON/OFF Button:** Press this button for 2 seconds to turn on/off the Bluetooth speaker.
Quick press this button to connect with the other Bluetooth speaker.
White LED lights will flash to show Bluetooth speaker is ON.
White LED lights will light for an extended period of time when the Bluetooth speaker has connected successfully.
-  **Next song/V+key:** While in Bluetooth mode, a quick press will go to the next song and a longer press will increase the audio volume (when reach the maximum volume, the speaker will sound a tone).
-  **Last song/V-Key:** While in Bluetooth mode a quick press will go to the last song and a longer press will decrease the audio volume. Note: when the maximum volume is reached, the speaker will sound a tone.
Press + and - together to cancel the pairing.
-  **Play/pause Key:** Press to play/pause.
-  **Flame atmosphere lamp ON/OFF key,** press to turn on/off the lamp.

 
CHARGING INSTRUCTIONS

Attention

- Please do not charge the lamp when the temperature is below 32° F (0° C) or above 104° F (40° C).
- Not recommended to charge while in use.
- Pull out the USB cable after a full charge.
- Do not charge the lamp with high-humidity conditions.
- Do not place near magnetic and/or electrical places.

Power input

- Put the USB cable into the lamp, when charging the indicator light is red.
- When fully charged, the indicator light is off.

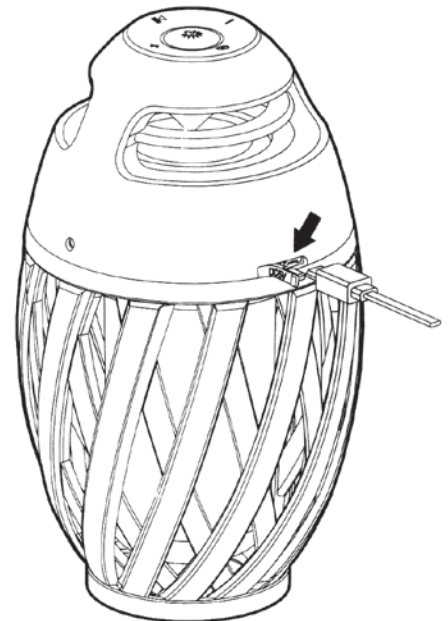

FCC Statement

15.19

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

15.21

Note: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

15.105(b)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help