

User Manual

Sports Cam

Waterproof



2.0-inch
LCD



HD



Waterproof
to 30m



USB

Warning

- 1 It is a high-precision product, do not fall or crash.
- 2 Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
- 3 Never leave the products exposed to high temperatures and direct sunlight.
- 4 Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- 5 Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6 In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 7 While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- 8 Keep the device in cool, dry and dust-proof places.

Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, photo shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, home security, deep-water probing, etc., allowing you to film at anytime, anywhere. And it has a variety of patents.


Multipurpose



Product Features

- >A water-resistant casing that allows you to film fascinating water sports; water-resistant up to 30 meters under water
- >High definition screen that displays and replays fascinating videos recorded
- >Detachable battery that is easy to replace and prolongs your camera's service life
- >Video recording while charging
- >Video recording with battery
- >120 degree wide-angle lens
- >Web camera
- >Support storage cards up to 32GB maximum
- >Multiple video recording formats: 1920*1080 30fps, 1280*720 30fps
- >Recorded in AVI format
- >Mini appearance, diversified colors available

Picture Of The Product

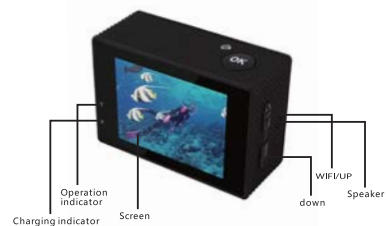

Waterproof Housing



Accessories



Waterproof
Housing



Handle Bar/
Pole Mount



Clip 1



Mount 1



Mount 2



Mount 3



Mount 4



3M mat



Manual

Mounting Your Camera



Inserting Micro SD Card

Note: Please choose branded Micro SD card and format it on computer before using. Neutral cards are not guaranteed to work normally.

Charging

- A Charging can be done by either connecting camera to c omputer or power adaptor.
- B Charging camera on vehicle by connecting it to car charger.
- C Charging of camera can be done even when it's powered off.

Switching camera on and off

Press and hold power switch for 3 to 5 seconds to turn it on / off.

Mode Switching

Switch between video recording / photo shooting / playback / menu by pressing "Mode" button.

● recording mode, ☐ photo shooting mode. Symbols are displayed on upper left corne of screen. ☐ Refers to the function of video playback, and the last one is system setting.

How to record videos and configure recording setting

1. Video Recording
Switch to recording mode and there'll be an ● icon in the upper left corner of the screen. Press OK to start recording and the ● icon in the upper left corner will start to flash. Press "OK" again if you want to stop the ● icon will disappear.
2. Photo shooting & Settings
Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an ☐ icon in the upper left corner of display screen and the camera is in photo shooting mode. Press "OK" to take photos.
3. File Storage & Playing
After finishing recording, use a USB cable to export the videos onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.

How to connect WIFI

The Camera can be controlled by Android or IOS mobile phone or tablet computer via WiFi connection, the steps are as follows:

- A. Install the Gopluscam APP on your phone or tablet (Android can download on Google Play and IOS can download on the APP Store).
- B. After turning on the camera, press the WIFI icon on the camera, the camera's screen will show the WIFI logo.
- C. Open the WIFI setting on the mobile phone or tablet computer to search the WIFI name: SPORT SDV , then connect it, the initial password will be show on the screen. Initial password:12345678
- D. After connecting the WIFI successfully.
Open the Gopluscam APP,you can take the picture or record the video on your mobile phone or tablet computer.

Tip: When the product caused by poor operation of the phenomenon of death, removable battery re-install. The machine can be restored to normal.

Specification

Liquid Crystal Display (LCD)	2.0LTPS
Lens	HD wide-angle lens
Language Options	English / Traditional Chinese / Simplified Chinese / Japanese German / French / Italian / Portuguese / Russian / Spanish etc.
Resolution of VIDEOS Recorded	1920*1080 30fps , 1280*720 30fps
Video Format	AVI
Resolution of Photos	12M/10M/8M/6M/5M/3M/2M
Storage	Micro SD
Frequency of Optical Source	50Hz / 60Hz
USB Interface	USB2.0

Note: Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

End user must follow the specific operating instructions for satisfying RF exposure compliance. The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body