

Attach the Table Stands

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.

 
Assembling instruction:

Put the television on the table, fix the stands with screws given in the carton.


Step1: Fasten the base assembly with screws given in the carton.

Step2: Insert the assembled base into the hole, take out screws provided with TV set and tighten them into screw holes.

- To disconnect the stand from the TV, perform the above steps in reverse order.

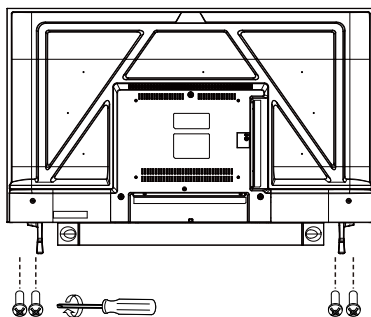

Wall-mounting Installation (Optional)

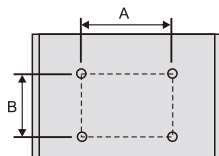 

Inches	Specifications VESA (A*B)
32"	200 x 150 mm

 
The figures and illustrations in this manual are provided for reference only and may differ from their actual appearance. The product design and specifications may change without notice.

Note:

- 1.The bracket fixed on the wall is an optional part.
2. When assembling the TV, there should be no other articles around it and please keep it distant from other articles.
3. When assembling the TV, please ask the professional worker to fix it in order to avoid danger.
4. The fixing picture is only for reference.
5. Please follow the user's manual about bracket assemble to fix the TV.
6. Attach the mounting bracket with the VESA compatible wall mounting kit.

Front panel

The buttons on the side panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

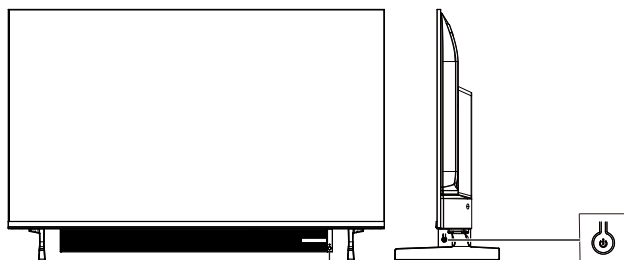

Remote control sensor

Middle key

Short press the button in standby mode to wake up the machine;
Short press the button in the power on state to call out the button menu, then short press to switch focus, long press to confirm.

Specifications

Model	KVL32VE684UN	
Display size	32" Diagonal (max.)	
LED panel resolution	1366x768	
Speaker output power	≥5Wx2	
Power supply	100-240V~, 50/60Hz	
Power consumption	65W	
Standby consumption	≤0.5W	
Antenna input	75 ohms	
Controller power	DC 3V (Two AAA size batteries)	
Dimensions (LxWxH)	TV with stand	718.4x200x479.9mm
	TV without stand	718.4x68.5x464mm
Weight (Net weight)	TV with stand	4.1kg
	TV without stand	4kg
Work temperature	0°C-40°C	

 
NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

Connect The TV

1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 100-240V AC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections

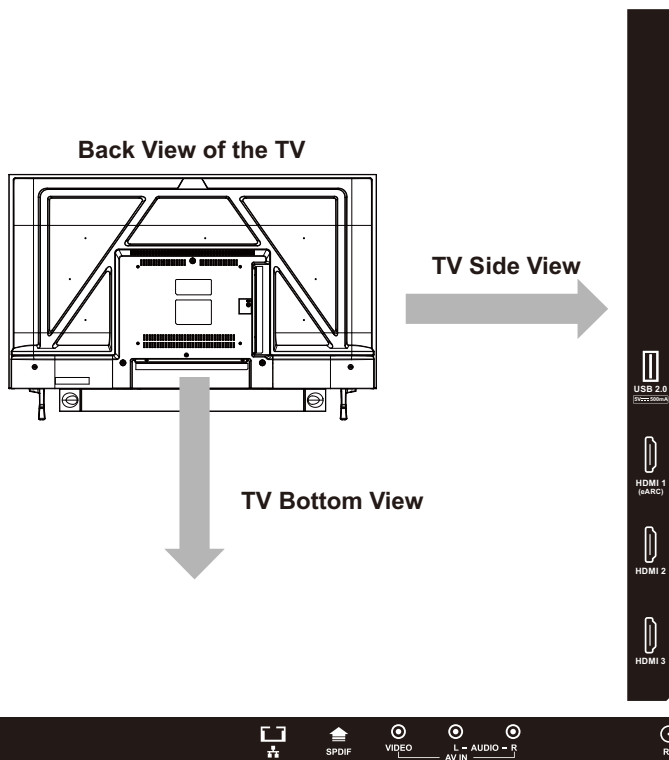

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.