

PHILIPS

Micro Music System

3000 Series

TAM3205M2



User manual

Register your product and get support at:
www.philips.com/support

Contents

1 Important	3	7 Other features	17
Safety	3	Set the alarm timer	17
Notice	4	Set the sleep timer	17
Trademarks	6	Listen to an external device	17
		Factory reset	17
2 Your Micro Music System	7		
What's in the box	7	8 Philips Entertainment App	19
Overview of the main unit	8	App download	19
Overview of the remote control	9	Choose your sound	20
		Select source	20
3 Get started	11	Clock setting	23
Connect speakers	11	User guide	24
Connect power	11	Firmware upgrade	25
Prepare the remote control	12		
Power on	12	9 Product information	26
Set the clock	12	Specifcations	26
		USB playability information	26
4 Play	13	Supported MP3 disc formats	27
Play from disc	13		
Play from USB	13	10 Troubleshooting	27
Control play	13		
Skip tracks	14		
Program tracks	14		
Play from Bluetooth-enabled devices	14		
Play from Auracast	15		
5 Listen to FM radio	16		
Tune to a radio station	16		
Store radio stations automatically	16		
Store radio stations manually	16		
Select a preset radio station	16		
6 Adjust sound	17		
Select a preset sound effect	17		
Adjust volume level	17		
Mute sound	17		

1 Important

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)



Warning

- Never remove the casing of this apparatus.
 - Never lubricate any part of this apparatus.
 - Never look into the laser beam inside this apparatus.
 - Never place this apparatus on other electrical equipment.
 - Keep this apparatus away from direct sunlight, naked flames or heat.
 - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power
-
- Make sure that there is enough free space around the product for ventilation.
 - Only use attachments/accessories specified by the manufacturer.
 - Battery usage CAUTION -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for a long time.
 - The product shall not be exposed to dripping or splashing.
 - Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
 - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - Please use the product safely in an environment with temperature between 0°C and 45°C.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted.

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the back of the product.

FCC and IC statement

FCC information

The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

① This device may not cause harmful interference, and.

② This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

(1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

(4) Consult the dealer or an experienced radio/TV technician for help.

IC-Canada: CAN ICES-(B)/NMB-(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada: CAN ICES-(B)/NMB-(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. **Déclaration d'exposition aux radiations:** Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 7.9 inches between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Trademarks



The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.




The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

2 Your Micro Music System


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

What's in the box


Check and identify the contents of your package:

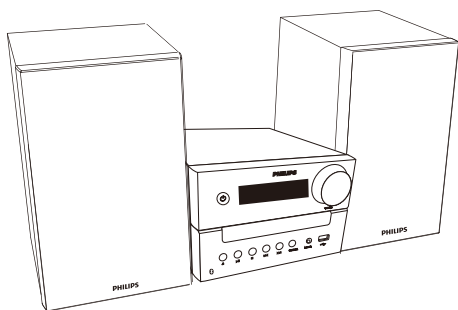

- Main unit
- Speaker boxes (x2)

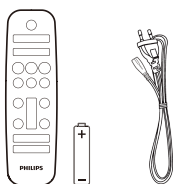


- Remote control (with one AAA battery)
- Power cord (Power cord quantity and plug type vary by regions)

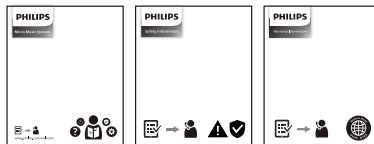

- Quick start guide / Warranty card / Safety sheet
- Images, illustrations and drawings shown on this user manual are for reference only, actual product may vary in appearance.

Overview of the main unit

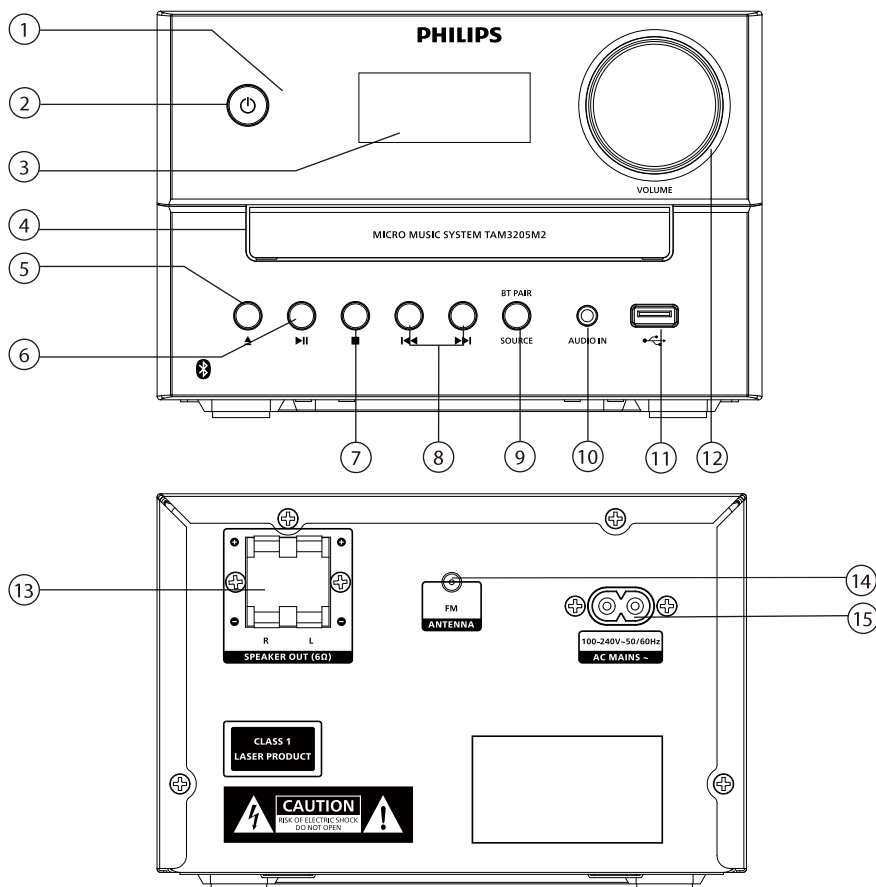

① LED indicator

- Standby indicator: turns red when this product is switched to standby.
- Bluetooth/Auracast indicator: turns blue to indicate the Bluetooth/Auracast connection status.

② Power button

- Switch this product on or to standby.

③ Display panel

- Show current status.

④ Disc compartment

⑤ Disc compartment control

- Open or close the disc compartment.

⑥ Play/Pause button


- Start or pause play.

⑦ Stop button

- Stop play.
- Erase a program.

- ⑧ **⏮ / ⏭**
- Skip to previous/next track.
 - Search within a track/disc.
 - Tune to a radio station.
 - Adjust time.
- ⑨ **SOURCE/BT PAIR**
- Press to select a source: DISC, BT, AURACAST, FM, USB, AUDIO IN.
 - In Bluetooth mode, press and hold for more than 2 seconds to disconnect the currently connected device and enter pairing mode.
- ⑩ **AUDIO IN**
- Connect external audio devices.
- ⑪ **🔌**
- Connect USB storage devices.
- ⑫ **Volume knob**
- Adjust volume.
- ⑬ **SPEAKER OUT socket**
- Connect with the speakers.
- ⑭ **FM antenna**
- Improve FM radio reception.
- ⑮ **AC MAINS ~**

Overview of the remote control

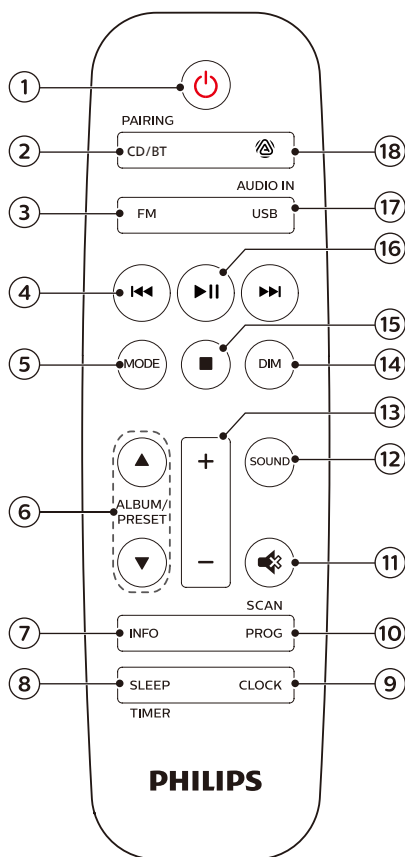

- ① **⏻**
- Switch this product on or to standby.
- ② **CD/BT PAIRING**
- Select CD source.
 - Select Bluetooth source.
 - In Bluetooth mode, press and hold for more than 2 seconds to enter pairing mode or disconnect the current connected device.

- ③ **FM**
 - Select FM source.
- ④ **⏮ / ⏭**
 - Skip to the previous/next track.
 - Search within a track/disc/USB.
 - Tune to a FM station.
 - Adjust time.
- ⑤ **MODE**
 - Select shuffle mode to play tracks randomly.
 - Select repeat mode to play a track or all tracks repeatedly.
 - Select Stereo and Mono sound
- ⑥ **ALBUM/PRESET ▲ / ▼**
 - Select a preset radio station.
 - Skip to previous/next album.
- ⑦ **INFO**
 - Display playback information.
- ⑧ **SLEEP/TIMER**
 - Set sleep timer.
 - Set alarm timer.
- ⑨ **CLOCK**
 - Set the clock.
 - View clock information.
 - In standby, press and hold to toggle clock display on or off.
- ⑩ **PROG/SCAN**
 - Program tracks.
 - Program radio stations.
 - Auto store radio stations.
- ⑪ **🔊**
 - Mute or restore volume.
- ⑫ **SOUND**
 - Select a preset sound effect.
- ⑬ **+/- (volume)**
 - Adjust volume.
- ⑭ **DIM**
 - Adjust display brightness.
- ⑮ **■**
 - Stop play or erase a program.
- ⑯ **▶||**
 - Press to start, pause, or resume play.
- ⑰ **USB/AUDIO IN**
 - Select USB source.
 - Select AUDIO IN source.
- ⑱ **🔊**
 - Select Auracast source.

3 Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation

Always follow the instructions in this chapter in sequence.

Connect speakers


≡ Note

- Insert the stripped portion of each speaker Wire into the socket completely.
- For better sound quality, use the supplied speakers only

- 1 Connecting one speaker, find the sockets on the back of the main unit marked "R".
- 2 Insert the red wire into the red (+) socket, and the black wire into the black (-) socket.
- 3 Connecting another speaker, find the sockets on the main unit marked "L".
- 4 Repeat step 2 to insert the left speaker wire.

To insert each speaker wire:


- 1 Hold down the socket flap.
- 2 Insert the speaker wire fully.
- 3 Release the socket flap.

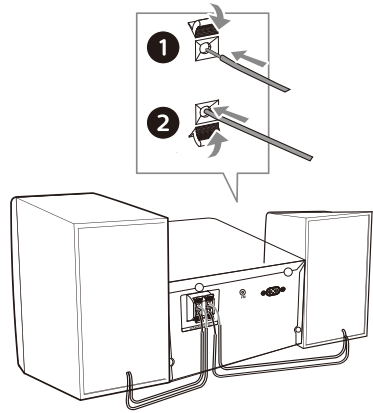

Connect power

! Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! Before you plug the AC power cord, make sure that the plug is fixed securely, when you unplug the AC power cord, always pull the plug, never pull the cord.
- Before you connect the Ac power cord, make sure that you have completed all the other connections.

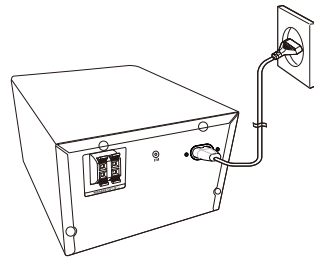

Connect the power cable to the wall socket.


Prepare the remote control

! Caution

- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied AAA battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

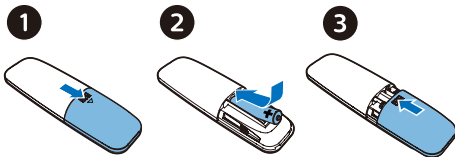

Power on

Press .

- ↳ The product switches to the last selected source.

Switch to standby mode

Press  again to switch the product to standby with no clock display, or to standby with clock display.

- ↳ The red standby indicator lights up.
- In standby, you may press and hold **CLOCK** to toggle clock display on or off.

≡ Note

- The product switches to standby mode after 15 minutes inactive.
- To achieve the efficient energy saving performance, unplug any external electronic device from the USB port when the device is not in use.

Set the clock

- 1 In power on mode, press and hold **CLOCK** for more than 2 seconds to enter the clock setting mode.
↳ **[24H]** or **[12H]** is displayed.
- 2 Press **◀▶** to select **24H** or **12H** hour format, and then press **CLOCK**.
↳ The hour digits begin to blink.
- 3 Press **◀▶** to set the hour, and then press **CLOCK**.
↳ The minute digits begin to blink.
- 4 Press **◀▶** to set the minute, and then press **CLOCK**.
↳ The clock is set.

To cancel time setting and without saving

Press  or no button pressed for 30sec.


≡ Note

- To view clock in power on mode, press briefly **CLOCK**.
- In standby, you may press and hold **CLOCK** to toggle clock display on or off.
- If clock display is turned on in standby power consumption increases.

4 Play

Play from disc

- 1 Press **CD/BT** to select CD source, or press source button on main unit to switch to DISC source.
- 2 Press **▲** to open the disc compartment.
- 3 Insert a disc with the label side up.
- 4 Press **▲** to close the disc compartment.
↳ Play starts automatically. If not, press **▶II**.

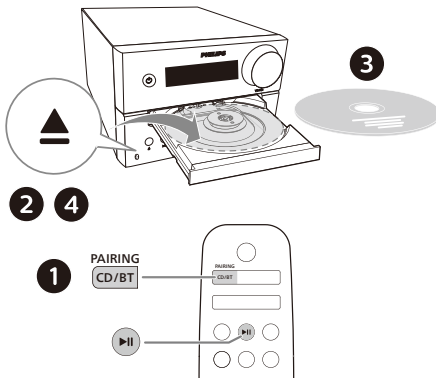


Play from USB

Note

- Make sure that the USB device contains playable audio content.

- 1 Insert a USB device into the socket.
- 2 Press **USB** to select the USB source, or press source button on main unit to switch to USB source.
- 3 Play starts automatically. If not, press **▶II**.

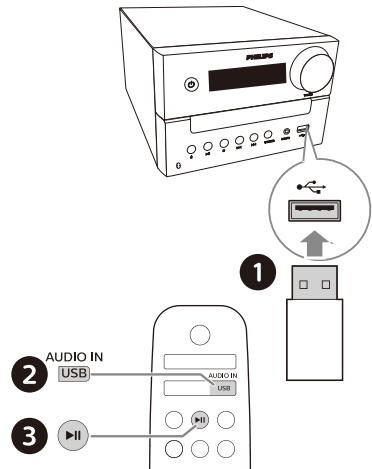

Control play

▶II	Start, pause, or resume play.
■	Stop play.
▲ / ▼	Select an album or a folder.
◀◀ / ▶▶	Press to skip to the previous or next track. Press and hold to search backward/forward within a track.
MODE	Play a track or all tracks repeatedly. Play tracks randomly.
+/-	Increase or decrease the volume.
🔊	Mute or unmute sound.
SOUND	Select a preset sound equalizer.
DIM	Adjust display brightness.
INFO	Show playback information.

Skip tracks

For CD:

Press ◀◀/▶▶ to select tracks.

For MP3 disc and USB:

- 1 Press ▲/▼ to select an album or a folder.
- 2 Press ◀◀/▶▶ to select a track or a file.

Program tracks

This function allows you to program 20 tracks in the desired sequence.

- 1 In stop mode, press **PROG/SCAN** to activate the program mode.
↳ [P01] is displayed.
- 2 For MP3 tracks, press ▲/▼ to select an album.
- 3 Press ◀◀/▶▶ to select a track, and then press **PROG/SCAN** to confirm.
- 4 Repeat steps 2 to 3 to program more tracks.
- 5 Press ▶|| to play the programmed tracks.

To erase the program


Press ■ twice.

Play from Bluetooth enabled devices



Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 30 meters.
- The unit can memorize up to 8 previously connected Bluetooth devices.

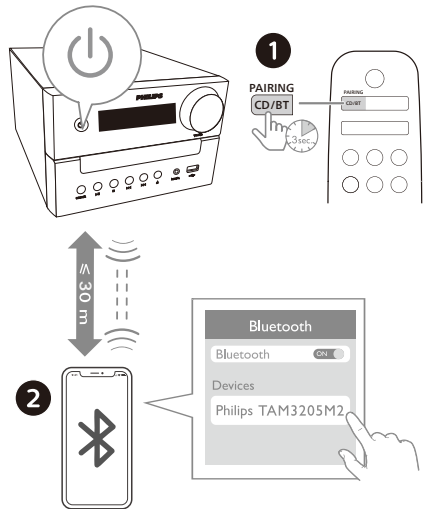

- 1 Press **CD/BT** to select the Bluetooth source, or press source button on main unit to switch to BT source.
↳ **[BT]** (Bluetooth) is displayed.
↳ The Bluetooth indicator blinks blue.
 - 2 On your device that supports Advanced Audio Distribution Profile (A2DP), enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device).
 - 3 Select **"Philips TAM3205M2"** on your Bluetooth enabled device.
 - If you fail to find **"Philips TAM3205M2"** or cannot pair with this product, press and hold **BT PAIR** on the product or **PAIRING** on the remote control for more than 2 seconds to enter pairing mode.
- ↳ After successful pairing and connection, the Bluetooth indicator turns solid blue, and you will hear the prompt sound from the unit.

- 4 Play audio on the connected device.
- ↳ Audio streams from your Bluetooth enabled device to this product.


To disconnect the Bluetooth-enabled device:

- Deactivate Bluetooth on your device.
- Press and hold **BT PAIR** on the product or **PAIRING** on the remote control for 2 seconds to enter pairing mode.

Play from Auracast

You can broadcast your music to this product or any other Auracast-compatible products.

- 1 Press **Ⓜ** to select the Auracast source, or press source button on main unit to switch to Auracast source.
- **[AURACAST RCV]** is displayed.
 - The blue indicator blinks.
- 2 If you enter Auracast source for the first time or if the station list is empty, the product performs a full scan automatically.
- **[Scanning]** is displayed.
 - The micro system will automatically search for nearby Auracast broadcasts and connect to the unencrypted broadcast with the strongest signal.

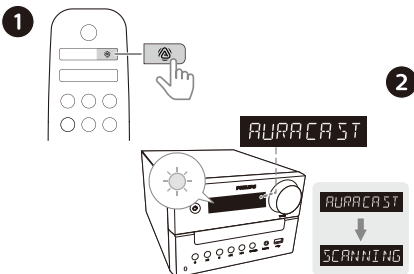

- 3 On your mobile device or dongle that supports Auracast, follow the instruction to enable Auracast broadcast.
- 4 After successful connection, the blue indicator turns solid and you will hear the prompt sound from the micro system.
- 5 Auracast source name is displayed.
- 6 Select and play audio from your Auracast enabled mobile device or dongle to this product.
- 7 Follow the Auracast connection on any additional Auracast-compatible products you want to include.

To disconnect Auracast, you can:

- Switch the product to another source.
- Deactivate Auracast broadcast on your mobile device or dongle.

Manually scan Auracast broadcast

Press and hold **PROG/SCAN** for more than 3 seconds. The micro system scans all nearby Auracast broadcasts. After scan, the strongest signal Auracast is broadcast.

Select Auracast broadcast

Press **◀◀ / ▶▶** to select an Auracast broadcast.

Note

- Only unencrypted broadcast is selected and encrypted broadcast is skipped.

5 Listen to FM radio

Tune to a radio station



Tip

- Position the FM antenna as far as possible from TV, or other radiation source.
- For optimal reception, fully extend and adjust the position of the FM antenna.

- 1 Press **FM** to select FM source.
- 2 Press and hold **◀◀/▶▶** for more than 2 seconds.
 - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.

To tune to a weak station:

Press **◀◀/▶▶** repeatedly until you find optimal reception.

Store radio stations automatically



Note

- You can store a maximum of 20 FM radio stations.

- 1 Press **FM** to select FM source.
- 2 Press and hold **PROG/SCAN** for more than 2 seconds.
 - ↳ All available stations are programmed in the order of waveband reception strength.
 - ↳ The first programmed radio station is broadcast automatically.

Store radio stations manually

- 1 Tune to an FM radio station.
- 2 Press **PROG/SCAN** to activate program mode.
 - ↳ **[P01]** is displayed.
- 3 Press **▲/▼** to allocate a number from 1-20 to this radio station, and then press **PROG/SCAN** to confirm.
- 4 Repeat steps 1-3 to program more stations.



Note

- To overwrite a programmed station, store another station in its place.

Select a preset radio station

In FM mode, press **▲/▼** to select a preset number.

- While listening to FM radio, you may press **MODE** to toggle stereo and mono sound.

Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

- 1 Tune to an FM radio station.
- 2 Press **INFO** repeatedly to display various RDS information (if available), such as station name, program type, time, etc.

6 Adjust sound

The following operations are applicable to all supported media.

Select a preset sound effect

- Press **SOUND** repeatedly to select a preset sound effect.

Adjust volume level

- On the remote control, press **+/-** (volume) repeatedly.
- On the main unit, rotate the volume knob.

Mute sound

- Press  to mute or unmute the sound.

7 Other features

Set the alarm timer

This product can be used as an alarm clock. You can select the disc, radio, or .mp3 files on a USB storage device as alarm source.



Note

- Alarm timer is not available in AUDIO IN mode.
- If CD/USB source is selected, but no disc is placed or no USB device is connected, the radio source is selected automatically.

- 1 Make sure that you have set the clock.
- 2 In standby mode, press and hold **SLEEP/TIMER** for more than 2 seconds.
↳ The hour digits blink.
- 3 Press **◀◀ / ▶▶** repeatedly to set the hour, and then press **SLEEP/TIMER** to confirm.
↳ The minute digits blink.
- 4 Press **◀◀ / ▶▶** to set the minute, and then press **SLEEP/TIMER** to confirm.
↳ The last selected alarm source blinks.
- 5 Press **◀◀ / ▶▶** to select an alarm source (disc, USB or FM radio), and then press **SLEEP/TIMER** to confirm.
↳ **XX** blinks (XX indicates the volume level of alarm).
- 6 Press **◀◀ / ▶▶** to set the alarm volume, and then press **SLEEP/TIMER** to confirm.

Activate/deactivate alarm timer

In standby mode, press **SLEEP/TIMER** repeatedly to activate or deactivate timer.

- ↳ If timer is activated, **TIMER** is displayed.
- In standby, you may press and hold **CLOCK** to toggle clock display on or off.

Set the sleep timer

This music system can switch to standby automatically after a set period of time.

- When the music system is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes).
 - ↳ When sleep timer is activated, **SLEEP** is displayed.

To deactivate sleep timer

- Press **SLEEP/TIMER** repeatedly until **[OFF]** (sleep off) is displayed.
 - ↳ When sleep timer is deactivated, **SLEEP** disappears.

Listen to an external device

You can listen to an external device through this unit with an MP3 link cable.

- 1 Connect an MP3 link cable (not supplied) between:
 - **AUDIO IN** jack (3.5 mm) on the product.
 - And the headphone jack on an external device.
- 2 Press **AUDIO IN** repeatedly to select **AUDIO IN** Source.
- 3 Start to play the device (see the device user manual).



Factory reset

Reset device to default setting.

When the device is power on, press and hold **▶||** buttons for 5 seconds in **AUDIO IN** source at **VOLUME 2**.

The device is restore to factory defaults and enters standby mode.