

# PHILIPS

## Micro Music System TAM6500



## User manual

Register your product and get support at:  
[www.philips.com/support](http://www.philips.com/support)


# Contents

|                                        |           |
|----------------------------------------|-----------|
| <b>1 Important</b>                     | <b>2</b>  |
| Safety                                 | 2         |
| Notice                                 | 3         |
| <b>2 Your Micro Music System</b>       | <b>4</b>  |
| Introduction                           | 4         |
| What's in the box                      | 4         |
| Overview of the main unit              | 5         |
| Overview of the remote control         | 6         |
| <b>3 Get started</b>                   | <b>7</b>  |
| Connect power                          | 7         |
| Connect the radio antenna              | 7         |
| Prepare the remote control             | 7         |
| Perform initial setup                  | 8         |
| Turn on                                | 9         |
| Source menu                            | 9         |
| <b>4 Listen to Internet radio</b>      | <b>10</b> |
| Use menu in Internet radio mode        | 10        |
| Store Internet radio stations          | 11        |
| Select a preset Internet radio station | 11        |
| Show Internet radio information        | 11        |
| <b>5 Listen to Podcasts</b>            | <b>12</b> |
| <b>6 Listen to Spotify</b>             | <b>12</b> |
| <b>7 Listen to FM radio</b>            | <b>13</b> |
| Tune to FM radio stations              | 13        |
| Store FM radio stations                | 13        |
| Store FM radio stations automatically  | 13        |
| Select a preset FM radio station       | 16        |
| Use menu in FM mode                    | 14        |
| Show RDS information                   | 14        |
| <b>8 Use system settings menu</b>      | <b>15</b> |
| Adjust network settings                | 15        |
| Set time/date                          | 15        |
| Set system language                    | 16        |
| Reset all the settings                 | 16        |
| Check software update information      | 16        |
| Upgrade the firmware (if available)    | 16        |
| Know the software version              | 16        |
| Adjust backlight settings              | 16        |
| <b>9 Use main menu</b>                 | <b>17</b> |
| Set alarm                              | 17        |
| Set sleep timer                        | 18        |
| <b>10 Other features</b>               | <b>19</b> |
| Play audio through Bluetooth           | 19        |
| Adjust volume                          | 19        |
| Mute sound                             | 19        |
| Play from disc                         | 19        |
| Play from USB                          | 19        |
| Charge your devices                    | 19        |
| Listen to an external device           | 19        |
| <b>11 Product information</b>          | <b>20</b> |
| Specifications                         | 20        |
| <b>12 Troubleshooting</b>              | <b>21</b> |

## 1 Important

### Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.

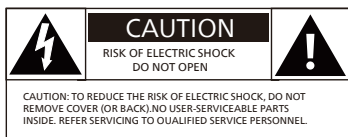

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. **CAUTION:** To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

#### Warning

- Never remove the casing of this apparatus.
  - Never lubricate any part of this apparatus.
  - Never look into the laser beam inside this apparatus.
  - Never place this apparatus on other electrical equipment.
  - Keep this apparatus away from direct sunlight, naked flames or heat.
  - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- Make sure that there is enough free space around the product for ventilation.
  - Only use attachments/accessories specified by the manufacturer.
  - Battery usage **CAUTION** -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
    - Install the battery correctly, + and - as marked on the product.
    - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
    - Remove the battery when the product is not used for a long time.
  - The product shall not be exposed to dripping or splashing.
  - Do no place any source of danger on the product (e.g. liquid filled objects, lit candles).
  - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
  - Please use the product safely in an environment with temperature between 0°C and 40°C.
- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

### Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

### Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/ EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on [www.philips.com/-support](http://www.philips.com/-support).

### Care of the environment

#### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

#### Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

#### Environmental information

All unnecessary packaging has been omitted. Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



#### Note

- The type plate is located on the back of the product.

### Trademarks



**AURACAST**

The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



**Bluetooth®**


The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.



**Be responsible  
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

## Overview of the main unit

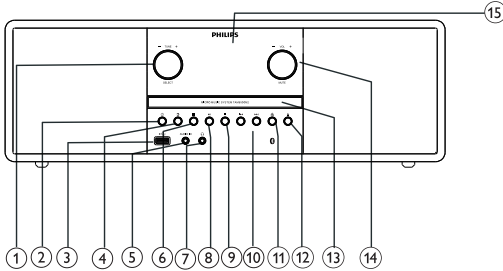

### ① SELECT knob

- Turn clockwise or anticlockwise to tune to radio stations.
- Turn clockwise or anticlockwise to navigate through the menu list.
- Press to confirm a selection.
- Press and hold to auto scanning all station in FM tuner mode.

### ② Switch this product on or to standby.

### ③ Connect USB storage devices.

### ④ **SOURCE**

- Press to enter the source menu.

### ⑤ **AUDIO IN**

- Connect external audio devices.

### ⑥ **MENU**

- In working mode, access the top menu.
- Press and hold to display information in FM/DAB mode.

### ⑦ **EARPHONE**

- Connect the external earphone device


### ⑧ Start or pause play.

### ⑨ Stop play.

- Stop play.
- Erase a program.

### ⑩ Skip to previous/next track.

- Skip to previous/next track.
- Search within a track/disc.
- Tune to a radio station.
- Adjust time.

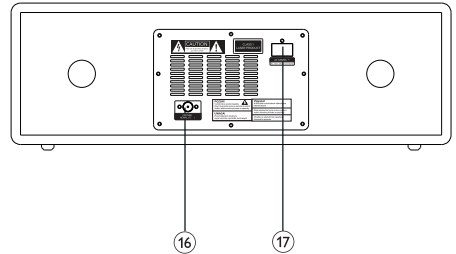

### ⑪ **PRESET**

- Store radio stations.
- Display the preset station list.

### ⑫ Open or close the disc compartment.

### ⑬ **Disc compartment**

### ⑭ **VOL knob/MUTE**

- Turn to adjust volume.
- Press to mute or resume sound.

### ⑮ **Display screen**


- Show current status.

### ⑯ **FM antenna**

- Improve FM reception.

### ⑰ **AC IN socket**

## Overview of the remote control

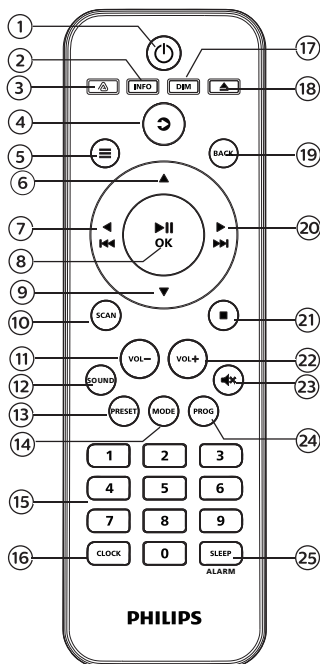

- ① **Power**
  - Switch this product on or to standby.
- ② **REPEAT**
  - Select repeat playback mode.
- ③ **PROG**
  - Program tracks.
- ④ **SOURCE**
  - Press to enter the source menu.
- ⑤ **MENU**
  - In working mode, access the top menu
  - Press and hold to display information in FM/DAB mode
- ⑥ **▲**
  - Skip to next album.
  - Adjust time
- ⑦ **◀◀**
  - Skip to the previous track.
  - Search within a track/disc/USB.
  - Tune to a FM station.

- ⑧ **▶▶ / OK**
  - Press to start, pause, resume play or confirm selection.
- ⑨ **▼**
  - Skip to previous album.
  - Adjust time.
- ⑩ **SCAN**
  - Auto store radio stations.
- ⑪ **VOL-**
  - Decrease volume.
- ⑫ **EQ**
  - Select a preset sound effect.
- ⑬ **INFO**
  - Display playback information.
- ⑭ **PRESET**
  - Press to view the station list.
  - Press and hold to save station.
- ⑮ **Numeric keypad(0-9)**
  - Select a digital track or preset radio station.
- ⑯ **CLOCK**
  - Set the clock.
  - View clock information.
- ⑰ **∞ RANDOM**
  - Enter the random playback mode.
- ⑱ **▲ OPEN/CLOSE**
  - Open or close the disc compartment.
- ⑲ **BACK**
  - Return to the previous menu under menu setting.
- ⑳ **▶▶**
  - Skip to the next track.
  - Search within a track/disc/USB.
  - Tune to a FM station.
- ㉑ **■**
  - Stop play or erase a program.
- ㉒ **VOL+**
  - Increase volume.
- ㉓ **MUTE**
  - Mute or restore volume.
- ㉔ **DIM**
  - Adjust display brightness.
- ㉕ **ALARM/SLEEP**
  - Set sleep timer.
  - Set alarm timer.

## 3 Get started

### ! Caution


- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

### Connect power

### ! Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! Before you plug the AC power cord, make sure that the plug is fixed securely. When you unplug the AC power cord, always pull the plug, never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all the other connections

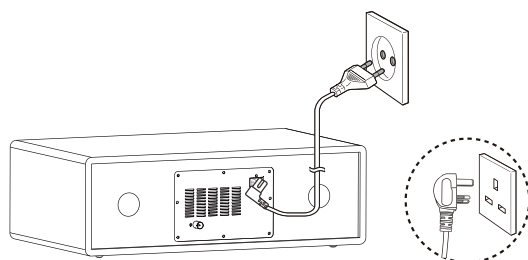

Connect the power cord to the wall socket.

### Connect the radio antenna

Connect the supplied radio antenna to this product before listening to radio.

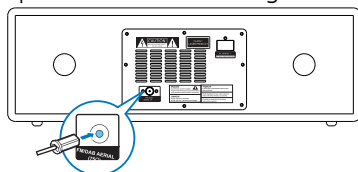


### Prepare the remote control

### ! Caution


- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

### To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied AAA batteries with correct polarities (+/-) as indicated.
- 3 Close the battery compartment.

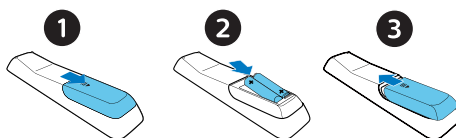

 - 1 When [Setup wizard] is displayed, turn **SELECT knob** to select **[YES]** to start the setup. If you select **[NO]**, you are asked to run the wizard next time.




- 2 Press **SELECT knob** to confirm.  
↳ **[12/24 hour format]** is displayed.

- 3 Turn **SELECT knob** to select 12 or 24 hour format.

- 4 Press **SELECT knob** to confirm.  
↳ **Auto update list is displayed**

 - 5 Repeat steps 3 to 4 to select whether to synchronize time with radio stations.




- **[Update from FM]**: synchronize time with FM stations.
- **[Update from Network]**: synchronize time with Internet radio stations.  
↳ If **[Update from Network]** is selected, repeat steps 3 to 4 to set time zone, and then repeat steps 3 to 4 to set daylight saving time.
- **[No update]**: deactivate time synchronization.  
↳ If **[No update]** is selected, repeat steps 3 to 4 to set date and time

- 6 Repeat steps 3 to 4 to select **[YES]** to keep network connected

- 7 Repeat steps 3 to 4 to select the Wlan region.  
↳ The radio begins to search for wireless networks automatically.

 - 8 Press **SELECT knob** to select an option to connect your wireless router,




- **[Push Button]**: select this option if your wireless router supports WPS and PBC setup method. You are prompted to press the connect button on your router and then press **Ok** to continue.



- To cancel, turn **SELECT knob** to select **[CANCEL]**
- To confirm your entry, turn **SELECT knob** to select **[OK]**
- To delete the entry, turn **SELECT knob** to select **[BKSP]**
- To exit the process, press **≡**.  
↳ If the network connection is established, **[Connected]** is displayed.

 **11** When **[Setup wizard completed]** appears, press **OK** to exit the setting



### Tip

- To run the setup wizard again, select **[System settings]>[Setup wizard]** menu (see the Chapter "Use system settings menu")

## Turn on

- Press **⏻**.  
↳ The radio switches to the last selected source.

## Switch to standby mode

- Press **⏻** again.  
↳ The display panel is dimmed.  
↳ The time and date (if set) are displayed.




### Note

- If the system is idle for 15 minutes, the unit switches to standby mode automatically.

## Source menu

Press **⏻** to enter into source menu.

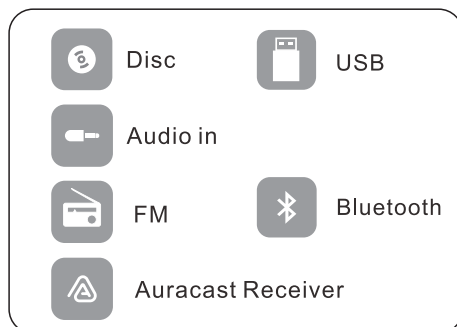

**1** Turn **SELECT knob** to select source

**2** Press **SELECT knob** to confirm selection


## 4 Listen to internet radio

 The radio can play thousands of radio stations and podcasts from around the world through the Internet connection.

### Use menu in Internet radio mode

Once the Internet connection is established, you will find a list of stations displayed in the station list. Then select one to start broadcasting.

- 1 Press  **Source** and turn **SELECT knob** to select **[internet radio]** mode.
  - ↳ The radio starts connecting to the previously connected network and then tunes to your last listened Internet radio station.
  - ↳ If network connection has not been established before, the radio starts searching for wireless networks automatically (Refer to the section "**Get started**">"**Perform initial setup**" or "**Use system settings menu**">"**Adjust network settings**" to establish network connection)
- 2 Press  **MENU** to access the menu.
- 3 Turn **SELECT knob** to scroll through the menu options:



- **[Station list]**: tune to any available Internet radio stations.
- **[System settings]**: adjust system settings (the same menu option for all working modes. See the Chapter "**Use system settings menu**" for details)
- **[Main menu]**: access main menu (the same menu option for all working modes. See the Chapter "**Use main menu**" for details)

- 4 To select an option, press **SELECT knob**
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.
  - To return to the previous menu, press .

### [Station list]

- **[China]**: tune to any available Internet radio stations in China, such as pop music, classical music, business news, and so on.
- **[Station]**
  - **[History]**: browse Internet radio stations by **history**
  - **[Search]**: search for Internet radio stations. To search, turn **SELECT knob** to enter a keyword by selecting characters, then press **SELECT knob** to continue
- **[Location]**: browse Internet radio stations by location.
- **[Popular]**: tune to the most popular stations on the internet.
- **[Discover]**: tune to discover list for internet radio.

---

## Store Internet radio stations

### Note

- You can store a maximum of 40 preset stations (shared between Internet radio and Podcasts)

- 1 In Internet radio mode, tune to an Internet radio station.
- 2 Press and hold **★ PRESET** for two seconds.
  - ↳ The preset station list is displayed
- 3 Turn **SELECT knob** to select a preset number.
- 4 Press **SELECT knob** to confirm.
  - ↳ **[Preset stored]** is displayed.
  - ↳ The station is stored in the selected position.

---

## Show Internet radio information

While listening to Internet radio, press and hold

**≡ MENU** repeatedly to scroll through the following information (if available):

- ↳ Artist and track name
- ↳ Station description
- ↳ Station genre and location
- ↳ Codec and sampling rate
- ↳ Playback buffer
- ↳ Delete

---

## Select a preset Internet radio station

In internet radio mode.

- 1 Press **★ PRESET**.
- 2 Turn **SELECT knob** to select a number.
- 3 Press **SELECT knob** to confirm.



## Note

- If no button is pressed within 15 seconds, the menu exits. Station lists and submenus may change from time to time and vary by locations.

## 5 Listen to Podcasts

- 1 Press  **Source** and turn **SELECT knob** to select **[Podcasts]** mode.
- 2 Press  **MENU** to access the menu.
- 3 Turn **SELECT knob** to scroll through the menu options:
- 4 To select an option, press **SELECT knob**
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.  
To return to the previous menu, press .



## 6 Listen to Spotify

Use your phone, tablet or computer as a remote control for Spotify  
Go to [spotify.com/connect](https://spotify.com/connect) to learn how

The Spotify Software is subject to third party licenses found here:  
<https://www.spotify.com/connect/third-party-licenses>

## 7 Listen to FM radio

### Tune to FM radio stations

- 1 Press  **Source** and turn **SELECT knob** to select **[FM radio]** mode.
- 2 Press and hold **◀◀/▶▶** for two seconds.  
↳ The radio tunes to an FM radio station with strong reception automatically.
- 3 Repeat step 2 to tune to more radio stations.

#### To tune to a station manually:

- In FM tuner mode, turn the **SELECT knob** to select a frequency.

### Store FM radio stations

#### Note

- You can store a maximum of 20 FM radio stations.

- 1 In FM mode, tune to an FM radio station.
- 2 Press and hold **★ PRESET** for two seconds.  
↳ The preset station list is displayed.
- 3 Turn **SELECT knob** to select a preset number
- 4 Press **SELECT knob** to confirm.  
↳ **[Preset stored]** is displayed.  
↳ The station is stored in the selected position.

### Store FM radio stations automatically

- In FM mode, press and hold **SELECT knob**
- ↳ The unit stores all the available FM radio stations and broadcasts the first station.



#### Tip

- To remove a pre-stored station, store another station in its place.

### Select a preset FM radio station

In FM mode, you have two ways to select a preset radio station.

#### Option A:

 
- 1 Press **★ PRESET**.
- 2 Turn **SELECT knob** to select a number
- 3 Press **SELECT knob** to confirm

#### Option B:

Press **◀◀/▶▶** to skip to the previous/next preset station.

## Use menu in FM mode

- 1 In FM mode, press **≡ MENU** to access FM menu.
- 2 Turn **SELECT knob** to scroll through the menu options:



- **[Scan setting]**
- **[Audio setting]**
- **[System settings]** : adjust system settings (see the Chapter "**Use system settings menu**").
- **[Main menu]**:access main menu(see the Chapter "**Use main menu**").

- 3 To select an option, press **SELECT knob**
- 4 Repeat steps 2 to 3 if any sub-option is available under one option.
  - To return to the previous menu, press **≡**.

### [Scan setting]

- **[Strong stations only?]-[YES]**: scan FM radio stations with strong signals only.
- **[Strong stations only?]-[NO]**: scan all the available FM radio stations.

### [Audio setting]

- **[Listen in Mono only?]-[YES]**: select mono broadcast.
- **[Listen in Mono only?]-[NO]**: select stereo broadcast.

## Note

- If no button is pressed within 15 seconds, the menu exits.

## Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

 
If you listen to an FM station with RDS signal, an RDS icon and the station name are displayed.

- 1 Tune to an RDS station.
- 2 Press and hold **≡** peatedly to scroll through the following information (if available):

- ↳ Station name
- ↳ Radio text messages
- ↳ Program type
- ↳ Frequency
- ↳ Date

## 8 Use system settings menu

- 1 In working mode, press **≡** to access the menu.
- 2 Turn **SELECT knob** repeatedly to select **[System settings]**
- 3 Press **SELECT knob** to confirm.
- 4 Repeat steps 2 to 3 to select an option.



- **[Equaliser]**: select equaliser mode.
- **[Network]**: enable you to establish network connection.
- **[Time/Date]**: set time and date.
- **[Language]**: select system language.
- **[Factory Reset]**: reset the radio to factory default status.
- **[Software update]**: check the software update information.
- **[Setup wizard]**: instruct you to perform initial setup.
- **[Info]**: know software version.
- **[Privacy policy]**: view privacy notice.
- **[Backlight]**: adjust backlight settings.

### Note

- If no button is pressed within 15 seconds, the menu exits.

- **[PBC Wlan setup]**: select this option if your wireless router supports WPS and PBC setup method.
- **[View settings]**: view the current network information.
- **[Manual settings]**:
  - **[DHCP enable]**: allocate IP address automatically.
  - **[DHCP disable]**: allocate IP address manually.
- **[Network profile]**: display a list of the networks remembered by the radio.
- **[Clear network settings]**: clear network settings selection.
- **[Keepnetwork connected?]**: select whether to keep the network connected.

### Set time/date

- 1 Select **[System settings]** > **[Time/Date]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm.



- **[Set Time/Date]**: set time and date.
- **[Auto update]**:
  - **[Update from FM]**: synchronize time with FM stations.
  - **[Update from Network]**: synchronize time with Internet radio stations.
  - **[No update]**: deactivate time synchronization.
- **[Set format]**: set 12/24 hour format.
- **[Set timezone]**: set timezone.
- **[Daylight savings]**: activate or deactivate daylight saving time.

### Adjust network settings

- 1 Select **[System settings]** > **[Network]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm. **[Network wizard]**: instruct you to establish network connection



## Note

- If you are updating time from DAB or FM, the daylight savings option has no effect.
- If you are updating from the network, set your time zone.



## Note

- If the radio detects that new software is available, it asks if you want to go ahead with an update. If you agree, the new software is downloaded and installed.
- Before software upgrade, make sure that the radio is connected to a stable mains power connection. Disconnecting power during a software update may damage the product.

## Set system language

- 1 Select **[System settings]>[Language]**.  
↳ A language list is displayed.
- 2 Turn **SELECT knob** to select a system language then press **SELECT knob** to confirm.

## Reset all the settings

- 1 Select **[System settings]>[Factory Reset]**.
- 2 Turn **SELECT knob** to select an option, then press **SELECT knob** to confirm.
  - **[Yes]**: Reset the radio to factory default status.
  - **[No]**: Return to the previous menu.

## Check software update information

- 1 Select **[System settings]>[Software update]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm.
  - **[Auto-check setting]**: select whether to check new software versions periodically.
  - **[Check now]**: check new software versions immediately

## Know the software version

- Select **[System settings]>[Info]**.  
↳ The current software version is shown.

## Adjust backlight settings

- 1 Select **[System settings]>[Backlight]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm
  - **[Timeout]**: select a timeout period for display backlight.
  - **[On level]**: select a brightness level for the backlight.
  - **[Dim level]**: select a display brightness level among Medium, Low and Off

## 9 Use main menu

- 1 In working mode, press  to access the top menu.
- 2 Turn **SELECT knob** repeatedly to select **[Main menu]**.
- 3 Press **SELECT knob** to confirm.
- 4 Repeat steps 2 to 3 to select an option.
  - **[Internet radio]**: select Internet radio mode.
  - **[Podcasts]**: select Podcasts radio mode.
  - **[Spotify]**: select Spotify mode.
  - **[FM]**: select FM mode.
  - **[CD]**: select CD mode.
  - **[USB]**: select USB mode.
  - **[Bluetooth]**: select Bluetooth mode.
  - **[AUDIO IN]**: select AUDIO IN mode.
  - **[Sleep]**: set sleep timer.
  - **[Alarms]**: set alarm timer.
  - **[System settings]**: adjust system settings (see the chapter "Use system settings menu")

### Note

- If no button is pressed within 15 seconds, the menu exits.
- You can also press **SOURCE** to select a mode: **Internet radio, Podcasts, Spotify, FM radio, CD, USB, Bluetooth or AUDIO IN.**

 
### Set alarm

#### Note

- You can set two alarms to ring at different time. To make the alarm work normally, make sure that the clock is set correctly.

- 1 Select **[Main menu]>[Alarms]**.
  - ↳ If clock is not set, a message prompts you to set clock.
- 2 Press **OK** to continue.
  - ↳ The day digit blinks.

- 3 Turn **SELECT knob** to set the day, then press **SELECT knob** to confirm.
  - ↳ The month digit blinks.
- 4 Repeat step 3 to set the month, year, and time respectively.
  - ↳ The **[Alarm 1: off [00:00]]** and **[Alarm 2: off [00:00]]** options are displayed.




- 5 Repeat step 3 to select **[Alarm 1: off [00:00]]>[Enable:]** **[Off]**.
- 6 Repeat step 3 to activate or deactivate the alarm timer.
  - **[Off]**: deactivate the alarm timer.
  - **[Daily]**: the alarm sounds everyday.
  - **[Once]**: the alarm sounds only once.
  - **[Weekends]**: the alarm sounds on Saturdays and Sundays.
  - **[Weekdays]**: the alarm sounds each day from Monday to Friday.
- 7 Repeat step 3 to select **[time]**, and then set the alarm time.
- 8 Repeat step 3 to select **[mode]**, and then set the alarm time.
  - **[Buzzer]**: select buzzer as alarm source.
  - **[Internet radio]**: select your last listened Internet radio station as alarm source.
  - **[FM]**: select your last listened FM radio station as alarm source.
- 9 Repeat step 3 to select **[preset]**, and then select your last listened station or a preset radio station as your alarm source.
- 10 Repeat step 3 to select **[Volume:]**, and then set the alarm volume.
- 11 Repeat step 3 to select **[Save]**.
  - ↳ Alarm 1 is set.
- 12 Repeat steps 5 to 11 to set Alarm 2.



## Note

- When the alarm is activated, an alarm icon for Alarm 1 or Alarm 2 is displayed.
- To stop the alarm, press  on the unit.
- You can also go to **[System settings]>[Time/Date]** to set time and date (see "**Use system settings menu**">"**Set time/date**").

## Set sleep timer

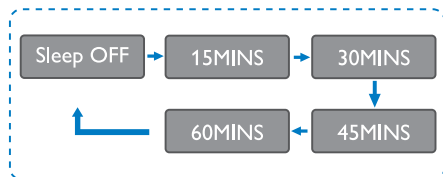


- 1 Select **[Main menu]>[Sleep]**.
- 2 Press Turn **SELECT knob** repeatedly to select the sleep timer period (in minutes).
  - ↳ When **[Sleep OFF]** is displayed, the sleep timer is deactivated.

## 10 Other features
 
### Play audio through Bluetooth

- 1 Press  **Source** and turn **SELECT knob** to select [ **Bluetooth** ] mode.
- 2 Press  **MENU** to access the menu.
- 3 Turn **SELECT knob** to scroll through the menu options:
  - Select pair menu option and press **SELECT knob**.
  - Prompt message "**Please connect with a device to:Philips TAM6500**" appears with Bluetooth icon flashing.
  - On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired.
  - Select [Philips TAM6500]displayed on your device for pairing.
  - After successful connection, the on screen message will change to [Connected]and the Bluetooth icon will stop flashing.
- 4 To select an option, press **SELECT knob**.
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.

To return to the previous menu, press



### Adjust volume

- During music playback, turn **-VOL+** knob to adjust volume.

### Mute sound

- During music playback, press **MUTE** to mute or resume sound.

### Play from disc

- 1 Press  **Source** and turn **SELECT knob** to select CD source.
- 2 Press  to open the disc compartment.
- 3 Insert a disc with the label side up.

- 4 Press  to close the disc compartment.
  - ↳ Play starts automatically. If not, Press .

### Play from USB

#### Note

- Make sure that the USB device contains playable audio content.

- 1 Insert a USB device into the  socket
- 2 Press  **Source** and turn **SELECT knob** to select the USB source.
  - ↳ Play starts automatically. If not, Press .

### Charge your devices

With this micro music system, you can charge your external devices,such as your cell phone, MP3 player or other mobile devices.

- 1 Use a USB cable to connect the USB socket of this product with the USB socket of your devices.
- 2 Connect the product to power.
  - ↳ Once the device is recognized, the charging starts.

#### Note

- Compatibility of this product with all devices is not guaranteed.

### Listen to an external device

You can listen to an external device through this unit with an MP3 link cable.

- 1 Connect an MP3 link cable(not supplied) between:
  - **AUDIO IN** jack(3.5 mm)on the product,
  - and the headphonejack on an external device.
- 2 Press  **Source** and turn **SELECT knob** to select **AUDIO IN** source.
- 3 Start to play the device (see the device user manual).

# 11 Product information

## Specifications

### Amplifier

|                       |                                                                                      |
|-----------------------|--------------------------------------------------------------------------------------|
| Rated Output Power    | 25 Wx2 RMS                                                                           |
| Frequency Response    | 50-20000 Hz, $\pm 3$ dB                                                              |
| Signal to Noise Ratio | > 65 dBA                                                                             |
| Speaker Driver        | 2 x 3" full range,6 $\Omega$                                                         |
| Bass enhancement      | 2x bass port                                                                         |
| Audio Input level     | 500mV $\pm$ 100mV RMS                                                                |
| Support disc type     | CD-DA,CD-R,CDRW,<br>MP3-CD(8/12 cm)                                                  |
| USB playback          | Type A,USB direct<br>2.0,5V/500mA,MSC file format,FAT<br>16/32,Support USB up to 32G |

### Tuner

|                   |                                |
|-------------------|--------------------------------|
| Tuning Range(FM)  | 87.5-108 MHz                   |
| Tuning Range(DAB) | 174.928-239.2MHz<br>(Band III) |
| Preset Stations   | 10                             |

### Speaker

|                   |                  |
|-------------------|------------------|
| Speaker Impedance | 6 ohm            |
| Sensitivity       | 86 $\pm$ 3dB/m/W |

### Bluetooth

|                          |                                |
|--------------------------|--------------------------------|
| Bluetooth Version        | V5.4                           |
| Bluetooth Frequency Band | 2.4 Ghz ~ 2.48 GHz<br>ISM Band |
| Maximum transit power    | -4.1 dBm                       |
| Bluetooth Range          | 30 m(free space)               |

### General information

|                                             |                                            |
|---------------------------------------------|--------------------------------------------|
| AC Power(power adapter)                     | Brand name:PHILIPS                         |
|                                             | Input: 100-240V~,<br>50/60Hz<br>(AC Input) |
| Operation Power<br>Consumption              | $\leq$ 40W                                 |
| Standby Power<br>Consumption(without Wi-Fi) | $\leq$ 0.8W                                |

### Dimensions

|                         |                |
|-------------------------|----------------|
| - Main Unit (W x H x D) | 420x140x261 mm |
|-------------------------|----------------|

### Weight

|             |        |
|-------------|--------|
| - Main Unit | 4.7 kg |
|-------------|--------|

## 12 Troubleshooting



### Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.



The symbol indicates class II equipment



The symbol indicates AC voltage



The symbol indicates DC voltage

### No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.

### No sound or poor sound.

- Adjust the volume.
- Check whether the unit is muted or the unit station is still buffering.
- Fully extend and adjust the position of the radio antenna.
- Keep the unit away from other electronic devices to avoid radio interference.

### No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- Check if the unit is in standby mode. If yes, turn on the unit.

### Poor radio reception

- Keep the unit away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the radio antenna.

### Some stations do not work sometimes

- Some stations can only support a limited number of listeners. If you try again after a few minutes, you will be able to listen to the stations.
- The station is not broadcasting. Try again later.

### Some stations disappear from the station list

- When a station stops broadcasting on the Internet, it will be removed from the list. The unit will check constantly if the station is on the air. If it restarts broadcasting, it will be brought back to the station list.

### Alarm does not work

- Set the clock/alarm correctly.

# English

## FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## IC-Canada: CAN ICES (B)/NMB (B)

This device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

## FCC & IC Radiation Exposure Statement

- This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

## WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Français

## Informations de la FCC

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) ce dispositif ne peut pas causer d'interférences nuisibles et
- (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.

**Remarque :** cet équipement a été soumis à des essais et a été déclaré conforme aux limites stipulées pour un appareil numérique de classe B, conformément aux spécifications de la partie 15 du règlement de la FCC. Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio.

Cependant, il est impossible de garantir qu'aucun brouillage ne se produira dans une installation particulière. Si cet équipement cause un brouillage de la réception de radio ou de télévision, ce qu'il est possible de déterminer en éteignant puis en rallumant l'équipement, l'utilisateur est prié d'essayer de corriger le brouillage au moyen de l'une ou de plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil à une prise sur un circuit différent de celui sur lequel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/TV expérimenté.

## IC-Canada : CAN ICES (B)/NMB (B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage;
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Déclaration de la FCC et IC sur l'exposition aux rayonnements :

- Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC et du Canada établies pour un environnement non contrôlé.
- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.
- Cet émetteur ne doit pas coexister ou fonctionner avec une autre antenne ou un autre émetteur.

## AVERTISSEMENT

Les changements ou modifications de cet appareil non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à utiliser l'équipement.



Specifications are subject to change without notice. .

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.Y.and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

